

jon@comfortar.com

SK-4



Limited One Year Warranty (Commercial Applications)

T&S warrants to the original purchaser (other than for purposes of resale) that such product is free from defects in material and workmanship for a period of one (1) year from the date of purchase. During this one-year warranty period, if the product is found to be defective, T&S shall, at its options, repair and/or replace it. To obtain warranty service, products must be returned to...

*T&S Brass and Bronze Works, Inc.
Attn: Warranty Repair Department
2 Saddleback Cove
Travelers Rest, SC 29690*

Shipping, freight, insurance, and other transportation charges of the product to T&S and the return of repaired or replaced product to the purchaser are the responsibility of the purchaser. Repair and/or replacement shall be made within a reasonable time after receipt by T&S of the returned product. This warranty does not cover items which have received secondary finishing or have been altered or modified after purchase, or for defects caused by physical abuse to or misuse of the product, or shipment of the products.

Any express warranty not provided herein, and any remedy for Breach of Contract which might arise, is hereby excluded and disclaimed. Any implied warranties of merchantability or fitness for a particular purpose are limited to one year in duration. Under no circumstances shall T&S be liable for loss of use or any special consequential costs, expenses or damages.

Some states do not allow limitations on how long and implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Specific rights under this warranty and other rights vary from state to state.

Attention California Residents:

WARNING This product can expose you to chemicals including Lead, Chromium (hexavalent compounds) and Phthalates (DEHP) which are known to the State of California to cause cancer and birth defects or other reproductive harm.

For more information go to
www.P65Warnings.ca.gov.

P/N: 098-011027-45 Rev.12
Date: 10-09-19
Drawn: TED
Checked: JRM 11-11-19
Approved: JHB 02-14-20

Installation and Maintenance Instructions



PRE-RINSE SPRAY VALVE

B-0107	B-10K	EB-0107
B-0107-035	B-10K-C	EB-0107-C
B-0107-090	B-10K-J	EB-0107-C35
B-0107-C		EB-0107-J
B-0107-C35		EB-10K
B-0107-C90		EB-10K-C
B-0107-J		EB-10K-J
B-0107-J90		

Español:

Instrucciones de instalación y mantenimiento

Français:

Instructions pour l'installation et la maintenance

Deutsch:

Installations- und Wartungsanleitungen

 
Italiano:

Istruzioni di installazione e manutenzione

中文:

安装与维护说明

Exploded View

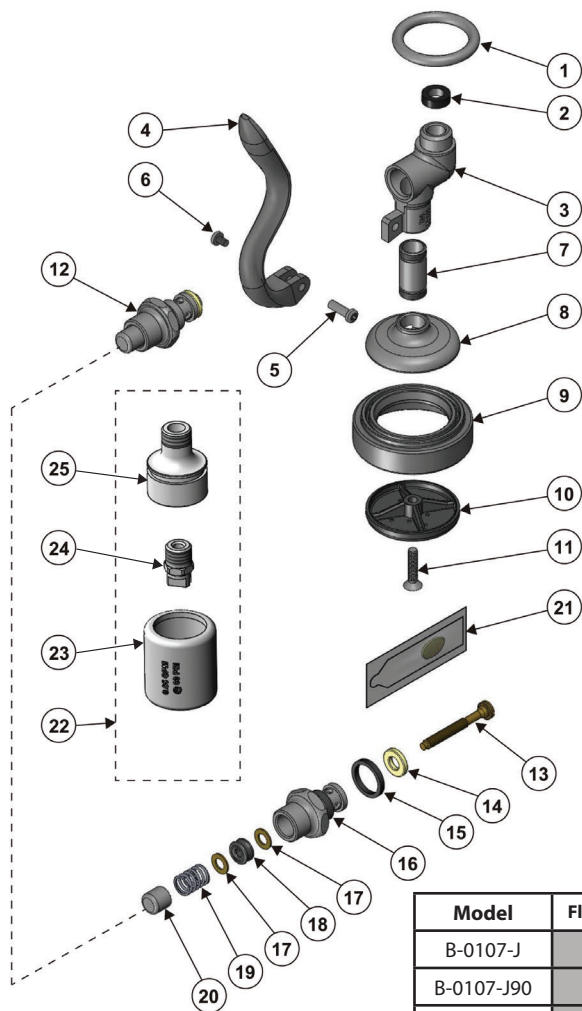

Model	Flow (gpm) [L/min]	Force (ozf) [N]
B-0107-J	1.07 [4.1]	7.2 [2.0]
B-0107-J90	1.07 [4.1]	7.2 [2.0]
B-10K-J	1.07 [4.1]	7.2 [2.0]
EB-0107-J	1.07 [4.1]	7.2 [2.0]

Model	Flow (gpm) [L/min]	Force (ozf) [N]
B-0107-C	0.65 [2.5]	4.4 [1.2]
B-0107-C35	0.65 [2.5]	4.4 [1.2]
B-0107-C90	0.65 [2.5]	4.4 [1.2]
B-10K-C	0.65 [2.5]	4.4 [1.2]
EB-0107-C	0.65 [2.5]	4.4 [1.2]
EB-0107-C35	0.65 [2.5]	4.4 [1.2]
EB-10K-C	0.65 [2.5]	4.4 [1.2]

EB-10K-J	1.15 [4.4]	7.5 [2.1]
B-0107	1.15 [4.4]	7.5 [2.1]
B-0107-035	1.15 [4.4]	7.5 [2.1]
B-0107-090	1.15 [4.4]	7.5 [2.1]
B-10K	1.15 [4.4]	7.5 [2.1]

EB-0107	5.60 [21.2]	8.3 [2.3]
EB-0107-035	5.60 [21.2]	8.3 [2.3]
EB-10K	5.60 [21.2]	8.3 [2.3]

Grey Part Number Guide

PARTS KIT

PARTS FOR ANY GREY T&S SPRAY VALVE

1,2,3	1	Ring, Hold Down	000907-45
	2	#27 Washer	010476-45
	3	Body, Spray Valve	000065-40
	4	Grey Handle	001120-45
	5	Nut, Handle	003198-45
	6	Screw, Handle	003199-45

PARTS FOR ANY GREY BONNET ASSEMBLY

1,2,3	12	Bonnet Assembly	002856-40
	13	Stem	009306-20
1,2,3	14	Washer, Seat	012915-45
1,2,3	15	Washer, Bonnet Binding	001040-45
	16	Bonnet	000608-25
1,2,3	17	Washer, Bonnet Brass	000974-45
1,2,3	18	Stem, Packing	001100-45
1,2,3	19	Spring, Bonnet	000895-45
	20	Push Button	000753-25
1,2,3	21	Grease Pack	012665-45

GREY SPRAY VALVES

B-0107 (1.15 GPM 7.5 Ozf)			
	7	Nipple	000694-40
	8	Cup, Spray	000019-40
1	9	Ring, Sprayhead	007861-45
1	10	1.15 GPM Sprayface (1.15 Stamped on Face)	001121-45
1	11	Screw, Sprayface	000913-45
B-0107-C (0.65 GPM 4.4 Ozf)			
	22	Assembly, B-0107-C Spray Nozzle	002662-40
2	23	0.65 GPM Grey Shield (No Outline Around Lettering)	002659-45NS
	24	0.65 GPM Spray Nozzle (0.65 Stamped on Face)	N/A
B-0107-J (1.07 GPM 7.2 Ozf)			
	22	Assembly, B-0107-J Spray Nozzle	N/A
3	23	1.07 GPM Grey Shield (Square Outline)	018292-45NS
	24	1.07 GPM Spray Nozzle (1.07 Stamped on Face)	N/A
	25	Nozzle Holder	N/A

#1 Parts included in B-10K

#2 Parts included in B-10K-C

#3 Parts included in B-10K-J

Blue Part Number Guide

PARTS KIT

PARTS FOR ANY BLUE T&S SPRAY VALVE

4,5,6,7	1	Ring, Hold Down	000907-45
	2	#27 Washer	010476-45
	3	Body, Spray Valve	000065-40
	4	Blue Handle	011454-45
	5	Nut, Handle	003198-45
	6	Screw, Handle	003199-45

PARTS FOR ANY BLUE BONNET ASSEMBLY

4,5,6,7	12	Bonnet Assembly	010594-40
	13	Stem	009306-20
	14	Washer, Seat	010563-45
	15	Washer, Bonnet Binding	010565-45
	16	Bonnet	000608-25
	17	Washer, Bonnet Brass	000974-45
4,5,6,7	18	Quad Seal	014615-45
4,5,6,7	19	Spring, Bonnet	000895-45
4,5,6,7	20	Push Button	000753-25
	21	Grease Pack	010573-45

 
 
BLUE SPRAY VALVES

EB-0107 & UK-0107 Only			
4,7	7	Nipple	000694-40
	8	Cup, Spray	000019-40
	9	Ring, Sprayhead	011475-45
4,7	11	Screw, Sprayface	000913-45
EB-0107 (5.6 GPM 8.3 Ozf)			
4	10	5.6 GPM Sprayface (No Wording on Face)	011456-45
UK-0107 (1.15 GPM 7.5 Ozf)			
7	10	1.15 GPM Sprayface (Flow Rate on Face)	N/A
EB-0107-C (0.65 GPM 4.4 Ozf)			
5	22	Assembly, EB-0107-C Spray Nozzle	N/A
	23	0.65 GPM Blue Shield (No Outline Around Lettering)	011499-45NS
	24	0.65 GPM Spray Nozzle (0.65 Stamped on Face)	N/A
EB-0107-J (1.07 GPM 7.2 Ozf)			
6	22	Assembly, EB-0107-J Spray Nozzle	N/A
	23	1.07 GPM Blue Shield (Square Outline)	018293-45NS
	24	1.07 GPM Spray Nozzle (1.07 Stamped on Face)	N/A
	25	Nozzle Holder	N/A

#4 Parts included in EB-10K
 #5 Parts included in EB-10K-C
 #6 Parts included in EB-10K-J
 #7 Parts included in UK-10K

EN**To replace worn parts:**



1. Shut off water supply and drain lines. For ease of disassembly and reassembly, the *handle grip* can be removed from no.3.
2. Unscrew no.5 and no.6 to remove no.4. Unscrew and remove no.16 from no.3.
3. Hold no.20 with pliers in one hand, and with screwdriver, carefully unscrew no.13 from no.16.
4. Apply no.21 over smooth portion of no.13. Replace no.14, no.15, no.17, no.18 & no.19 with new parts. Dab no.21 onto valve side of no.19 before replacing.
5. Reassemble no.16 by inserting no.13 through all parts. Hold no.20 with pliers, and carefully screw no.13 into no.20 until screw feels tight. Do not use excessive force.

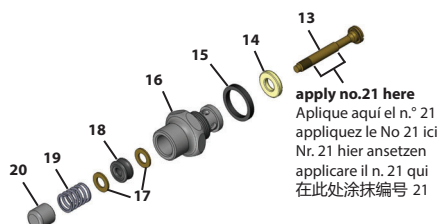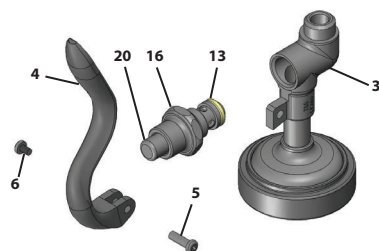

6. Reinsert no.16 in no.3 and tighten securely.
7. Reassemble no.4, no.5 and no.6 on no.3.
8. For **EB-0107/UK-0107 & B-0107 ONLY**: To replace no.9, unscrew no.11 and disassemble. Make sure the groove side of no.9 fits over no.8, and no.10 rest on ridge side. See Figure A.
9. To replace no.2, unscrew handle grip from no.3 and replace with new no.2.
10. Reassemble; turn on water check for leaks.
11. For **EB-0107-C, EB-0107-J, B-0107-C & B-0107-J ONLY**: To replace no.23, slide no.23 off no.25, and slide a new no.23 back onto no.25. No.23 will snap into groove on no.25. See Figure B.

* **Verify the flow rate on no.23 matches spray tip inside no.25.**

  Caution: Turn off water supply at base faucet when not in use.

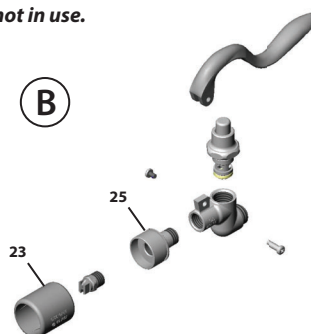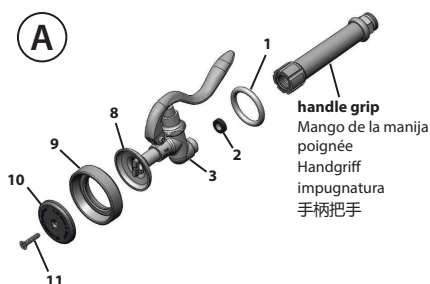**ES****Para reemplazar las piezas desgastadas:**

1. Corte el suministro de agua y drene las líneas. Para facilitar el desarmado y armado, el *mango de la manija* se puede quitar del n.º 3.
2. Destornille el n.º 5 y n.º 6 para quitar el n.º 4. Destornille y quite el n.º 16 del n.º 3.
3. Con una mano sostenga el n.º 20 con pinzas y con el destornillador quite cuidadosamente el n.º 13 del n.º 16.

4. Aplique el n.º 21 sobre una parte del n.º 13. Reemplace los números 14, 15, 17, 18 y 19 con partes nuevas. Golpee ligeramente el n.º 21 por el lado de la válvula del n.º 19 antes de reemplazarlo.
5. Vuelva a armar el n.º 16 insertando el n.º 13 por todas las partes. Sostenga el n.º 20 con pinzas y atornille cuidadosamente el n.º 13 dentro del n.º 20 hasta que el tornillo quede ajustado. No aplique fuerza excesiva.
6. Vuelva a insertar el n.º 16 dentro del n.º 3 y ajuste firmemente.
7. Vuelva a armar los números 4, 5 y 6 en el n.º 3.
8. ÚNICAMENTE **PARA EB-0107/UK-0107 y B-0107** : Para reemplazar el n.º 9, destornille el n.º 11 y desarme. Asegúrese de que el lado de la ranura del n.º 9 se ajuste al n.º 8, y que el n.º 10 descansa en el borde. Véase la figura A.
9. Para reemplazar el n.º 2, destornille el mango de la manija del n.º 3 y reemplace con el n.º 2 nuevo.
10. Vuelva a armar; abra el suministro de agua y verifique que no haya fugas.
11. ÚNICAMENTE **PARA EB-0107-C, EB-0107-J, B-0107-C y B-0107-J**: Para reemplazar el n.º 23, deslícelo fuera del n.º 25 e introduzca un n.º 23 nuevo dentro del n.º 25. El n.º 23 se insertará en la ranura en el n.º 25. Véase la figura B.

** Verifique que la velocidad del flujo en el n.º 23 coincida con la punta de aspersión dentro del n.º 25.*

Precaución: Corte el suministro de agua en el grifo de base cuando no lo use.



Pour remplacer les pièces usées :

1. Coupez l'alimentation en eau et les conduites d'évacuation. Pour faciliter le démontage et le remontage, la poignée peut être retirée du No 3.
2. Dévissez les No 5 et 6 pour retirer le No 4. Dévissez et retirez le No 16 du No 3.
3. Immobilisez le No 20 avec une pince d'une main, et avec un tournevis, dévissez soigneusement le No 13 du No 16.
4. Appliquez le No 21 sur la portion lisse du No 13. Remplacez les No 14, 15, 17, 18 et 19 par des pièces neuves. Tamponnez le No 21 sur le côté vanne du No 19 avant le remplacement.
5. Remontez le No 16 en insérant le No 13 au travers de toutes les pièces. Immobilisez le No 20 avec une pince, et vissez soigneusement à fond le No 13 dans le No 20. Ne serrez pas trop.
6. Réinsérez le No 16 dans le No 3 et bien serrer.
7. Remontez les No 4, 5 et 6 sur le No 3.
8. POUR LES RÉFÉRENCES **EB-0107/UK-0107 & B-0107 UNIQUEMENT** : Pour remplacer le No 9, dévissez le No 11 et procédez au démontage. Vérifiez que le côté rainure du No 9 s'adapte sur le No 8, et que le No 10 repose sur le côté de l'arête. Voir la Figure A.
9. Pour remplacer le No 2, dévissez la poignée du No 3 et installez un No 2 neuf.
10. Remontez ; Ouvrez l'arrivée d'eau, recherchez des fuites.
11. Pour les modèles **EB-0107-C, EB-0107-J, B-0107-C & B-0107-J UNIQUEMENT** : Pour remplacer le No 23, faites glisser le No 23 hors du No 25, et faites glisser un nouveau No 23 neuf sur le No 25. Le No 23 s'enclenche dans la saignée du No 25. Voir la figure B.

** Vérifiez que le débit sur le No 23 correspond à l'embout de pulvérisation à l'intérieur du No 25.*

Avertissement : Coupez l'alimentation en eau au robinet de la base lorsque le modèle n'est pas en cours d'utilisation.

DE**Verschleißteile ersetzen:**

1. Wasserzufuhr ausschalten und Rohre entleeren. Zum leichten Aus- und Einbau kann der *Handgriff* von Nr. **3** entfernt werden.
2. Nr. **5** und Nr. **6** abschrauben, um Nr. **4** zu entfernen. Nr. **16** aufschrauben und von Nr. **3** entfernen.
3. Nr. **20** mit der Zange in einer Hand halten und mit dem Schraubenzieher vorsichtig Nr. **13** von Nr. **16** abschrauben.
4. Nr. **21** auf dem glatten Teil von Nr. **13** anbringen. Nr. **14**, Nr. **15**, Nr. **17**, Nr. **18** & Nr. **19** durch neue Teile ersetzen. Nr. **21** auf Ventilseite von Nr. **19** vor dem Ersetzen abtupfen.
5. Nr. **21** auf dem glatten Teil von Nr. **13** anbringen. Nr. **14**, Nr. **15**, Nr. **17**, Nr. **18** & Nr. **19** durch neue Teile ersetzen. Nr. **21** auf Ventilseite von Nr. **19** vor dem Ersetzen abtupfen.
6. Nr. **16** durch Einführen von Nr. **13** durch alle Teile wieder zusammenbauen. Nr. **20** mit der Zange in einer Hand halten und vorsichtig Nr. **13** in Nr. **20** schrauben bis es fest sitzt. Keine übermäßige Gewalt anwenden.
7. Nr. **16** in Nr. **3** wieder einstecken und fest anziehen.
8. Nr. **4**, Nr. **5** und Nr. **6** wieder auf Nr. **3** zusammenbauen.
9. NUR für **EB-0107/UK-0107 & B-0107**: Um Nr. **9** zu ersetzen, Nr. **11** abschrauben und ausbauen. Sicherstellen, dass Rillenseite von Nr. **9** über Nr. **8** passt und Nr. **10** auf der starren Seite ruht. Siehe Abbildung A.
10. Um Nr. **2** zu ersetzen, Nr. **3** vom Handgriff abschrauben und mit einer neuen Nr. **2** ersetzen.
11. Wieder zusammenbauen, Wasserzufuhr anschalten und auf Leckagen prüfen.
12. NUR für **EB-0107-C, EB-0107-J, B-0107-C & B-0107-J**: Um Nr. **23** zu ersetzen, Nr. **23** von Nr. **25** abnehmen und eine neue Nr. **23** wieder zurück auf Nr. **25** setzen. Nr. **23** wieder in die Rille auf Nr. **25** einrasten. Siehe Abbildung B.

** Prüfen ob der Durchfluss an Nr. 23 mit der Spritzdüse in Nr. 25 übereinstimmt.*

ACHTUNG: Wasserzufuhr an der grundlegenden Armatur abstellen, wenn nicht in Gebrauch.

IT**Per sostituire le parti usurate:**

1. Chiudere la fornitura idrica e le linee di drenaggio. Per facilità di smontaggio e rimontaggio, l'*impugnatura* può essere rimossa dal n. **3**.
2. Svitare n. **5** e n. **6** per rimuovere il n. **4**. Svitare e rimuovere il n. **16** dal n. **3**.
3. Mantenere il n. **20** con le pinze in una mano e, con il cacciavite, svitare attentamente il n. **13** dal n. **16**.
4. Applicare il n. **21** sulla porzione liscia del n. **13**. Sostituire il n. **14**, n. **15**, n. **17**, n. **18** e il n. **19** con parti nuove. Picchiettare il n. **21** sul lato valvola del n. **19** prima della sostituzione.
5. Riasssemblare il n. **16** facendo passare il n. **13** attraverso tutte le parti. Mantenere il n. **20** con le pinze, e avvitare con cura il n. **13** nel n. **20** fino a che la vite non risulta ben serrata. Non utilizzare forza eccessiva.
6. Reinserire il n. **16** nel n. **3** e serrare con fermezza.
7. Riasssemblare il n. **4**, il n. **5** e il n. **6** sul n. **3**.
8. SOLO per **EB-0107/UK-0107 & B-0107**: Per sostituire il n. **9**, svitare il n. **11** e smontare. Accertarsi che il lato scanalato del n. **9** entri nel n. **8**, e che il n. **10** sia appoggiato sul lato dorsale. Vedere la Figura A.
9. Per sostituire il n. **2**, svitare l'*impugnatura* dal n. **3** e sostituire con il nuovo n. **2**.
10. Riasssemblare; attivare il controllo idrico per le perdite.

11. SOLO per **EB-0107-C, EB-0107-J, B-0107-C E B-0107-J**: Per sostituire il n. **23**, fare scorrere il n. **23** dal n. **25**, e fare scorrere nuovamente un nuovo n. **23** nel n. **25**. Il n. **23** scatterà nella scanalatura del n. **25**. Vedere la Figura B.

** Verificare che la portata sul n. 23 corrisponda al puntale a spruzzo all'interno del n. 25.*

Attenzione: disattivare la fornitura idrica al rubinetto della base quando non è in uso.



更换磨损件:

1. 关闭供水及下水管道，为了便于拆卸和重新组装，可先将手把从3号上拆卸下来。
2. 拧下5号和6号以便拆下4号。从3号上拧下16号。
3. 一只手用钳子夹住20号，用螺丝刀小心地将13号从16号上卸下。
4. 将21号涂在13号的光滑部分。用新零件替换14号、15号、17号、18号和19号。替换前将21号少量涂抹在19号的阀门侧。
5. 将13号穿过所有零件以重新组装16号。用钳子夹住20号，小心地将13号拧到20号上，直到拧紧为止。请勿用力过度。
6. 将16号重新插入3号中，并拧紧。
7. 将4号、5号和6号重新装在3号上。
8. 仅适用于**EB-0107/UK-0107** 和 **B-0107**: 要替换9号，先拧下11号并拆开。请确保8号正好卡在9号的凹槽侧，10号安放在凸棱侧。详见图A。
9. 如需更换2号，先将手把从3号上拧下，再用新的2号进行替换。
10. 重新组装；打开供水检查是否漏水。
11. 仅适用于**EB-0107-C, EB-0107-J, B-0107-C**和**B-0107-J**: 如需更换23号，先从25号上摘下23号，再在25号上重新套上一个新的23号，23号要卡在25号的凹槽中。详见图B。

**请确认23号上标的流量与25号内的喷头相匹配。*

注意: 不使用龙头时，请关闭底座上的供水。

RELATED T&S BRASS PRODUCT LINE



B-0108
JeTSpray
Spray Valve



B-0108-C
JeTSpray
Low Flow
Spray Valve

T&S BRASS AND BRONZE WORKS, INC.

A firm commitment to application-engineered plumbing products

2 Saddleback Cove, P.O. Box 1088,
Travelers Rest, SC 29690

Phone: (864) 834-4102

Fax: (864) 834-3518

E-mail: tsbrass@tsbrass.com

T & S Brass-Europe

'De Veenhoeve'

Oude Nieuwveenseweg 84

2441 CW Nieuwveen

The Netherlands



RELIABILITY BUILT IN™



**Limited One Year Warranty
(Commercial Applications)**

T&S warrants to the original purchaser (other than for purposes of resale) that such product is free from defects in material and workmanship for a period of one (1) year from the date of purchase. During this one-year warranty period, if the product is found to be defective, T&S shall, at its options, repair and/or replace it. To obtain warranty service, products must be returned to...

*T&S Brass and Bronze Works, Inc.
Attn: Warranty Repair Department
2 Saddleback Cove
Travelers Rest, SC 29690*

Shipping, freight, insurance, and other transportation charges of the product to T&S and the return of repaired or replaced product to the purchaser are the responsibility of the purchaser. Repair and/or replacement shall be made within a reasonable time after receipt by T&S of the returned product. This warranty does not cover items which have received secondary finishing or have been altered or modified after purchase, or for defects caused by physical abuse to or misuse of the product, or shipment of the products.

Any express warranty not provided herein, and any remedy for Breach of Contract which might arise, is hereby excluded and disclaimed. Any implied warranties of merchantability or fitness for a particular purpose are limited to one year in duration. Under no circumstances shall T&S be liable for loss of use or any special consequential costs, expenses or damages.

Some states do not allow limitations on how long and implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Specific rights under this warranty and other rights vary from state to state.

Attention California Residents:

"WARNING: This product contains chemicals known to the State of California to cause cancer, and birth defects or other reproductive harm."

P/N: 098-012448-45 Rev.1
Date: 08-08-17
Drawn: TEH
Checked: DMH 09-20-17
Approved: JHB 10-09-17

Installation and Maintenance Instructions



FAUCET WITH NOZZLE AND SPRAY HOSE ASSEMBLY B-0177

ES

Español:

Instrucciones de instalación y mantenimiento

FR

Français:

Instructions pour l'installation et la maintenance

DE

Deutsch:

Installations- und Wartungsanleitungen

CN

中文:

安装与维护说明

This exploded view diagram illustrates the components of a kitchen faucet assembly, numbered 1 through 37. The components are arranged in a logical assembly sequence from top to bottom. At the top, a long, flexible, black braided hose (1) is shown. Below it, a series of small O-rings and seals (2, 3, 4) are shown. The main body of the faucet (5) is shown with a handle (6) and a spout (7). A series of O-rings and seals (8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37) are shown in a vertical column, indicating their positions in the assembly. The diagram uses dashed lines to show the alignment and fit of the components.

Part Number Guide

Pre-Rinse Unit with Balancer

1	Asm, Faucet (Swivel)	002829-40
2	Faucet Body (Swivel)	N/A
3	Flange, 1/2" NPT Female Eccentric	00AA
4	Washer, Coupling Nut	001019-45
5	Asm, Quarter-Turn Eterna Cartridge, RTC (new style)	002712-40NS
	Asm, Quarter-Turn Eterna Cartridge, LTC (new style)	002711-40NS
	Asm, Quarter-Turn Cerama Cartridge, RTC (new style)	012446-25NS
	Asm, Quarter-Turn Cerama Cartridge, LTC (new style)	012447-25NS
6	Cartridge Only, Eterna w/ Spring Checks, RTC	012443-40NS
	Cartridge Only, Eterna w/ Spring Checks, LTC	012442-40NS
	Cartridge Only, Cerama w/ Check Valves, RTC	012394-25NS
	Cartridge Only, Cerama w/ Check Valves, LTC	012395-25NS
7	Lever Handle	001638-45NS
8	Index, Button	<i>noted below</i>
	Cold (Blue)	018506-19NS
	Hot (Red)	001193-19NS
9	Screw, Handle	000925-45
10	Nipple, 3/8" x 4"	N/A
11	Valve Body	N/A
12	Cartridge, Quarter-Turn Eterna w/ Spring Checks, RTC	012443-40NS
	Cartridge, Quarter-Turn Cerama w/ Check Valve, RTC	012394-25NS
13	Handle, 4-Arm	002521-45
14	Nipple, 3/8" Close	0002535-25
15	Vacuum Breaker, 3/8" NPT	B-0968
16	Adapter, 3/8" NPT Male x 3-4-14 UN	053A
17	Washer, #27	010476-45
18	Asm, Flexible Stainless Steel Hose	B-0080-H
19	Asm, Angled Spray Face 1.42 GPM	B-0107-035
20	Dummy Wall Hook	B-0104-D
37	Screw, Handle	000922-45

Part Number Guide

Add-On Faucet Assembly


21	Asm, EasyInstall Add-On Faucet w/ 12" Swing Nozzle	B-0156-EZ
22	Asm, EasyInstall Add-On Faucet Less Nozzle	B-0155-LNEZ
23	Nipple, 3/8" x 3"	000358-40
24	Body, Add-On Faucet	N/A
25	Cartridge, Quarter-Turn Eterna w/ Spring Check, RTC	012443-40NS
	Cartridge, Quarter-Turn Cerama w/ Check Valve, RTC	012394-25NS
26	EasyInstall Installation Kit	EZ-K
27	O-Ring	001065-45
28	Lock Washer	014200-45
29	Asm, 12" Swing Nozzle	062X
30	Stream Regulator, Full Flow	B-PT
31	Swivel Repair Kit	011643-45
32	O-Ring	001074-45
33	Sleeve, Swivel (quantity 2)	011429-45
34	Swivel Piece	N/A
35	Washer, Swivel Piece	009538-45
36	Nut, Swivel Piece	N/A



Add-On Faucet Installation:

If installing to an existing rigid pre-rinse unit or base faucet

 1. Make sure that no.28 is seated properly inside the faucet body.
2. Grab add-on faucet assembly and lower the EasyInstall end-fitting into faucet body. Press down until the end-fitting "pops" in. Rotate to desired position.
3. Lock the EasyInstall add-on faucet in place by tightening the lock nut.

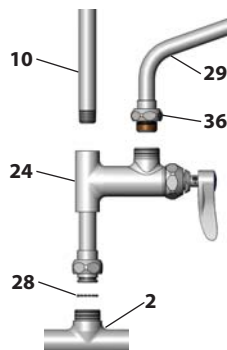

To Install Swing Nozzle:

1. Insert no.29 into no.24.

Note: See Repair Kit 011643-45 for replacement of no.32 and no.33.

2. Tighten no.36 firmly with a wrench.



Instalación del grifo añadido:

Si realiza la instalación en una unidad de prelavado o en un grifo de base rígidos existentes:

1. Asegúrese de que el no. 28 esté bien asentado dentro del cuerpo del grifo.
2. Tome la unidad de grifo añadido e introduzca el accesorio de extremidad EasyInstall en el cuerpo del grifo. Empuje hacia abajo hasta que el accesorio de extremidad encaje. Gírelo hacia la posición deseada.
3. Fije el grifo añadido EasyInstall en su lugar apretando la tuerca de bloqueo.

Para instalar la boquilla giratoria:

1. Inserte el no. 29 en el no. 24.

Nota: Vea el kit de reparación 011643-45 para las refacciones del no.32 y 33.

2. Apriete firmemente el no. 36 con una llave.



INSTALLATION DU ROBINET SUPPLÉMENTAIRE :

En cas d'installation sur une unité de pré-rinçage rigide ou un robinet de base existant

1. Assurez-vous que le N°.28 est correctement installé à l'intérieur du corps du robinet.
2. Saisissez le dispositif de robinet supplémentaire et abaissez le raccord d'extrémité EasyInstall dans le corps du robinet. Appuyez vers le bas jusqu'à ce que le raccord d'extrémité « s'insère avec un déclic ». Faites pivoter vers la position souhaitée.
3. Verrouillez le robinet supplémentaire EasyInstall en place en serrant le contre-écrou.

Pour installer l'embout à balancier :

1. Insérez le N°.29 dans le N°.24.

Remarque : Voir le kit de réparation 011643-45 pour le remplacement des N°.32 et 33.

2. Serrez bien le N°.36 avec une clé.



Montage der Zusatz-Armatur:

Für die Montage an eine vorhandene, starre Vorspüleinheit oder Basisarmatur

1. Sicherstellen, dass Nr. 28 richtig im Armaturenkörper sitzt.
2. Die Zusatz-Armatur halten und das EasyInstall-Endstück in den Armaturenkörper absenken. Nach unten drücken, bis das Endstück einrastet. In die gewünschte Stellung drehen.
3. Die EasyInstall-Zusatz-Armatur durch Festziehen der Sicherungsmutter in ihrer Position sichern.

Zur Montage der Schwenkdüse:

1. Nr. 29 in Nr. 24 einsetzen.

Hinweis: Zum Austausch von Nr. 32 und Nr. 33 siehe Reparatursatz 011643-45.

2. Nr. 36 mit einem Schraubenschlüssel fest anziehen.

附加龙头安装：

如需安装在一个已有的固定式预冲洗花洒装置或龙头底座上

3. 请确保28号准确无误地置入龙头本体中。

4. 抓住附加龙头，将快装尾部装入龙头本体，向下按直至整个尾部都嵌入本体。将其旋转至所需位置。

5. 拧紧锁紧螺母将快装附加龙头锁定住。

CN

安装摇摆水嘴：

1. 将29号装入24号中。

 
注意：替换32号和33号详见安装包011643-45。

2. 用扳手拧紧36号。

EN


Faucet Installation:

1. Shut off water supply and drain lines. Drill (2) two holes, approximately 1" [2.5 cm] diameter in wall with 8" [20 cm] centers, where you are installing no.1.

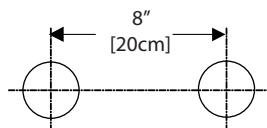

2. Apply teflon tape or pipe joint compound to water supply lines.

 3. Connect no.2 to water supply lines by screwing no.3 **with eccentric centers** onto nipple **supplied by others** and tighten no.3 against countertop. **Make sure no.4 is in place. Nut under countertop to be supplied by others.** Trim supply lines if necessary.

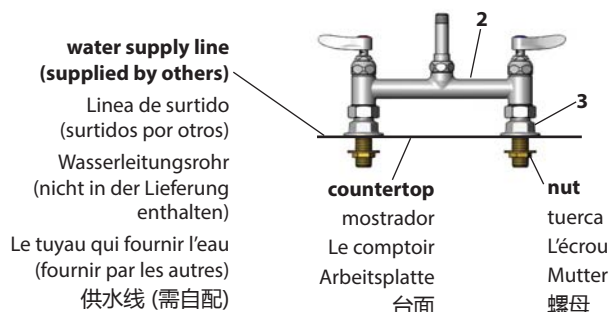

ES

Instalación del grifo:

1. Corte el suministro de agua y drene las líneas. Perfore dos (2) orificios de un diámetro aproximado de 2.5 cm (1") en la pared con centros de 20 cm (8") en donde instale el no.1.
2. Aplique cinta de teflón o compuesto para uniones de tubería a las líneas de suministro de agua.
3. Conecte el no.2 a las líneas de suministro de agua atornillando el no.3 con centros excéntricos sobre la boquilla suministrada por terceros y ajuste el no.3 sobre la cubierta superior.
Asegúrese de que el no.4 esté en su sitio. La tuerca que se coloca debajo de la cubierta superior debe ser suministrada por terceros. Recorte las líneas de suministro si es necesario.

FR **Installation du robinet :**

1. Coupez l'alimentation en eau et les conduites d'évacuation. Percez (2) deux trous d'environ 1 po. [2,5 cm] de diamètre dans le mur avec les axes écartés de 8 po. [20 cm], à l'endroit où vous installez le N°.1.
2. Appliquez du ruban de téflon ou un composé pour joints sur les conduites d'alimentation en eau.
3. Raccordez le N°.2 aux conduites d'alimentation en vissant le N°.3 **avec des centres excentrés** sur le mamelon **d'autres fournisseurs** et serrez le N°.3 contre le comptoir. **Assurez-vous que le N°.4 est bien en place. L'écrou sous le comptoir doit provenir d'autres fournisseurs.** Coupez les conduites d'alimentation si nécessaire.

DE **Montage der Armatur:**

1. Wasserzufuhr ausschalten und Rohre entleeren. Zwei (2) Löcher, ca. 1" [2,5 cm] Durchmesser, mit 8" [20 cm] Abstand zwischen den Mitten bohren, wo Nr. 1 installiert werden soll.
2. Teflonband oder Rohrleitungs-Dichtmittel an die Wasserzulaufleitungen anbringen.
3. Nr. 2 an die Wasserzulaufleitungen anschließen; hierzu Nr. 3 **mit exzentrischen Mitten** auf den **bauseitigen** Stützen schrauben und Nr. 3 gegen die Arbeitsplatte festziehen. **Sicherstellen, dass Nr. 4 vorhanden ist. Die Mutter unter der Arbeitsplatte wird bauseitig bereitgestellt.** Zulaufleitungen nach Erfordernis kürzen.

CN **龙头安装:**

1. 关闭供水和排水阀门，在你需要安装1号的墙壁上开2个直径约为1" [2.5 cm]，间距为8" [20 cm]的孔。
2. 在供水管上缠上生料带或装上水管接头。
3. 将3号装到偏心的两个孔中自配的接头上，装上2号并连接供水，将3号拧紧在台面上。确保4号在适当的位置上。台面下的螺母需要自己配。如果有必要，可减少供水线。

EN **Installation of Control Valve:**

1. Apply Teflon tape on threaded ends of no.10.
Place no.10 into no.11 and tighten.
2. Place no.10 into no.22 and tighten.

Vacuum Breaker and Hose

Installation:

3. Attach no.18 to no.16 (make sure no.17 is in place).
4. Turn on water supply and check for leaks.

 


ES **Instalación de la válvula de control:**

1. Aplique cinta de teflón en los extremos con rosca del no.10. Coloque el no.10. en el no.11 y ajuste.
2. Coloque el no.10 en el no.22 y ajuste.

Instalación del interruptor de vacío y la manguera:

1. Conecte el no.18 al no.16 (asegúrese de que el no.17 esté en su sitio).
2. Abra el suministro de agua y compruebe que no haya fugas.

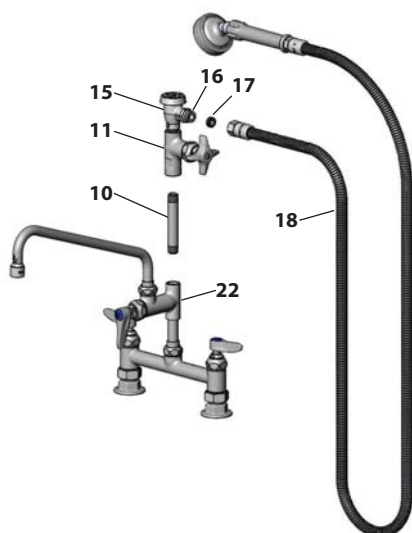

FR Installation de la vanne de commande:

1. Appliquez du ruban de téflon sur les extrémités filetées du N°.10. Placez le N°.10 dans le N°.11 et serrez.
2. Placez le N°.10 dans le N°.22 et serrez.

Installation du brise-vide et du tuyau souple:

3. Fixez le N°.18 au N°.16 (assurez-vous que N°.17 est bien en place).
4. Ouvrez l'arrivée d'eau et recherchez des fuites.

DE Einbau des Regelventils:

1. Teflonband an die Gewindeenden von Nr. 10 anbringen. Nr. 10 in Nr. 11 einsetzen und festziehen.
2. Nr. 10 in Nr. 22 einsetzen und festziehen.

Montage des Unterdruckschalters und des Schlauchs:

3. Nr. 18 an Nr. 16 anbringen (sicherstellen, dass Nr. 17 vorhanden ist).
4. Wasserzufuhr anschalten und auf Dichtigkeit prüfen.

CN 控制阀安装:

1. 在10号的螺纹尾端缠上生料带，将10号装入11号中并拧紧。
2. 将10号装入22号中并拧紧。

真空断流器和软管安装:

3. 将18号附加到16号上 (确保17号在合适的位置上)。
4. 打开供水并检查是否漏水。

RELATED T&S BRASS PRODUCT LINE



B-0175

Wall-Mounted Faucet
with 12" Swing Nozzle
and Spray Unit



B-0176

Deck-Mounted Faucet
with 12" Swing Nozzle
and Spray Unit

T&S BRASS AND BRONZE WORKS, INC.

A firm commitment to application-engineered plumbing products

2 Saddleback Cove, P.O. Box 1088,
Travelers Rest, SC 29690

Phone: (864) 834-4102

Fax: (864) 834-3518

E-mail: tsbrass@tsbrass.com

T & S Brass-Europe
'De Veenhoeve'
Oude Nieuwveenseweg 84
2441 CW Nieuwveen
The Netherlands



RELIABILITY BUILT IN™

SK-5



Installation and Maintenance Instructions

EasyInstall™

PRE-RINSE UNIT B-0133 Series

(B-0133-B, Pre-Rinse Unit w/ Wall Bracket)



Limited Three Year Warranty
(Commercial Applications)

T&S warrants to the original purchaser (other than for purposes of resale) that such product is free from defects in material and workmanship for a period of three (3) years from the date of purchase. During this three-year warranty period, if the product is found to be defective, T&S shall, at its option, repair and/or replace it. To obtain warranty service, products must be returned to.....

T&S Brass and Bronze Works, Inc.
Attn: Warranty Repair Department
2 Saddleback Cove
Travelers Rest, SC 29690

Shipping, freight, insurance, and other transportation charges of the product to T&S and the return of repaired or replaced product to the purchaser are the responsibility of the purchaser. Repair and/or replacement shall be made within a reasonable time after receipt by T&S of the returned product. This warranty does not cover items which have received secondary finishing or have been altered or modified after purchase, or for defects caused by physical abuse to or misuse of the product, or shipment of the products.

Any express warranty not provided herein, and any remedy for Breach of Contract which might arise, is hereby excluded and disclaimed. Any implied warranties of merchantability or fitness for a particular purpose are limited to three years in duration. Under no circumstance shall T&S be liable for loss of use or any special consequential cost, expenses or damages.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Specific rights under this warranty and other rights vary from state to state.

Attention California Residents:

WARNING This product can expose you to chemicals including Lead, Chromium (hexavalent compounds) and Phthalates (DEHP) which are known to the State of California to cause cancer and birth defects or other reproductive harm.

For more information go to
www.P65Warnings.ca.gov.

P/N: 098-014497-45 Rev.9
DATE: 08-18-21
DRAWN: TED
CHECKED: GEF 10-31-22
APPROVED: JHB 11-01-22

عربي
تعليمات التركيب و الصيانة



Step 1:
Apply plumber's putty to backside of body and insert into mounting hole. Line up water supply lines and couplings, attach and tighten with wrench.

الخطوة 1:
ضع معجون السباكة على الجانب الخلفي من الهيكل وأدخله في فتحة التعليق. حاذِ خطوط إمداد الماء والوصلات، واوصلها وأحكامها بمفتاح ربط.



Step 3:
Make sure that the EasyInstall® locking washer is seated properly inside the faucet body.

الخطوة 3:
تأكد من أن حلقة قفل EasyInstall® موضوعة بشكل ملائم داخل هيكل الصنبور.



Step 5:
Lock the EasyInstall® locking nut in place and tighten with wrench.

الخطوة 5:
أغلق صامولة قفل EasyInstall® في مكانها وشدها بمفك ربط.



Step 2:
Apply plumber's tape to top of riser threads and attach to spring assembly. Tighten with wrench.

الخطوة 2:
ضع شريط سباكة على أعلى أسنان الرافع ووصله بمجمع الزنبرك. أحكم الشد بمفتاح ربط.



Step 4:
Grab riser assembly and lower the EasyInstall® end-fitting into faucet body. Press down until the end-fitting "pops" in.

الخطوة 4:
أمسك مجمع الرافع واخفض وصلة EasyInstall® الطرفية داخل جسم الصنبور. اضغط لأسفل حتى تسمع صوت "طقة" الوصلة الطرفية.

Base Faucet Assemblies

1	Faucet Body Assembly w/ Eterna Cartridges	B-0230-LN
	Faucet Body Assembly w/ Cerama Cartridges	B-0230-CR-LN
2	Asm, Quarter-Turn Eterna Cartridge, RTC (new style)	002712-40NS
	Asm, Quarter-Turn Cerama Cartridge, RTC (new style)	012446-25NS
3	Cartridge Only, Eterna w/ Spring Checks, RTC	012443-40NS
	Cartridge Only, Cerama w/ Check Valves, RTC	012394-25NS
4	Asm, Quarter-Turn Eterna Cartridge, LTC (new style)	002711-40NS
	Asm, Quarter-Turn Cerama Cartridge, LTC (new style)	012447-25NS
5	Cartridge Only, Eterna w/ Spring Checks, LTC	012442-40NS
	Cartridge Only, Cerama w/ Check Valves, LTC	012395-25NS
6	Handle, Lever	001638-45NS
	Handle, Wrist Action	B-WH4-NS
7	Screw, Handle	000925-45
8	Index, Button - Hot (Red)	001193-19NS
9	Index, Button - Cold (Blue)	018506-19NS
10	Asm, Coupling Flange	00AA
11	Washer, Coupling Nut	001019-45
12	Lock Washer, EasyInstall	014200-45

Riser Assembly

13	Nipple, 3/8" x 18"	000369-40
14	Swivel Assembly, EasyInstall	EZ-K
15	Swivel Piece	N/A
16	O-Ring, Swivel Piece	001065-45
17	Asm, Finger Hook & Screw	004R
18	Wall Bracket, 6" (add -B to model # for wall bracket)	B-0109-01

Pre-Rinse Unit Assembly

19	Spring Body	000821-40
20	Spring, Overhead	000888-45
21	Asm, Flexible Stainless Steel Hoses	B-0044-H
22	Asm, Spray Valve	B-0107


Spray Valve Assembly

23	Washer, Hold Down Assembly	010476-45
24	Ring, Hold Down Assembly	000907-45
25	Body, Spray Valve (no handle)	000065-40
26	Handle	001120-45
27	Nut, Handle	003198-45
28	Screw, Handle	003199-45
29	Nipple	000694-40
30	Cup, Spray	000019-40
* 31	Ring, Sprayhead	007861-45
* 32	Sprayface	001121-45
* 33	Screw, Sprayface	000913-45

Bonnet Assembly

34	Asm, Bonnet	002856-40
* 35	Stem	001097-45
* 36	Washer, Seat	012915-45
* 37	Washer, Bonnet Binding	001040-45
38	Bonnet	000608-25
* 39	Washer, Bonnet Brass	000974-45
* 40	Stem, Packing	001100-45
* 41	Spring, Bonnet	000895-45
42	Push Button	000753-25
* 43	Grease Pack (o-ring lubricant)	012665-45

 * Parts included in B-10K parts kit

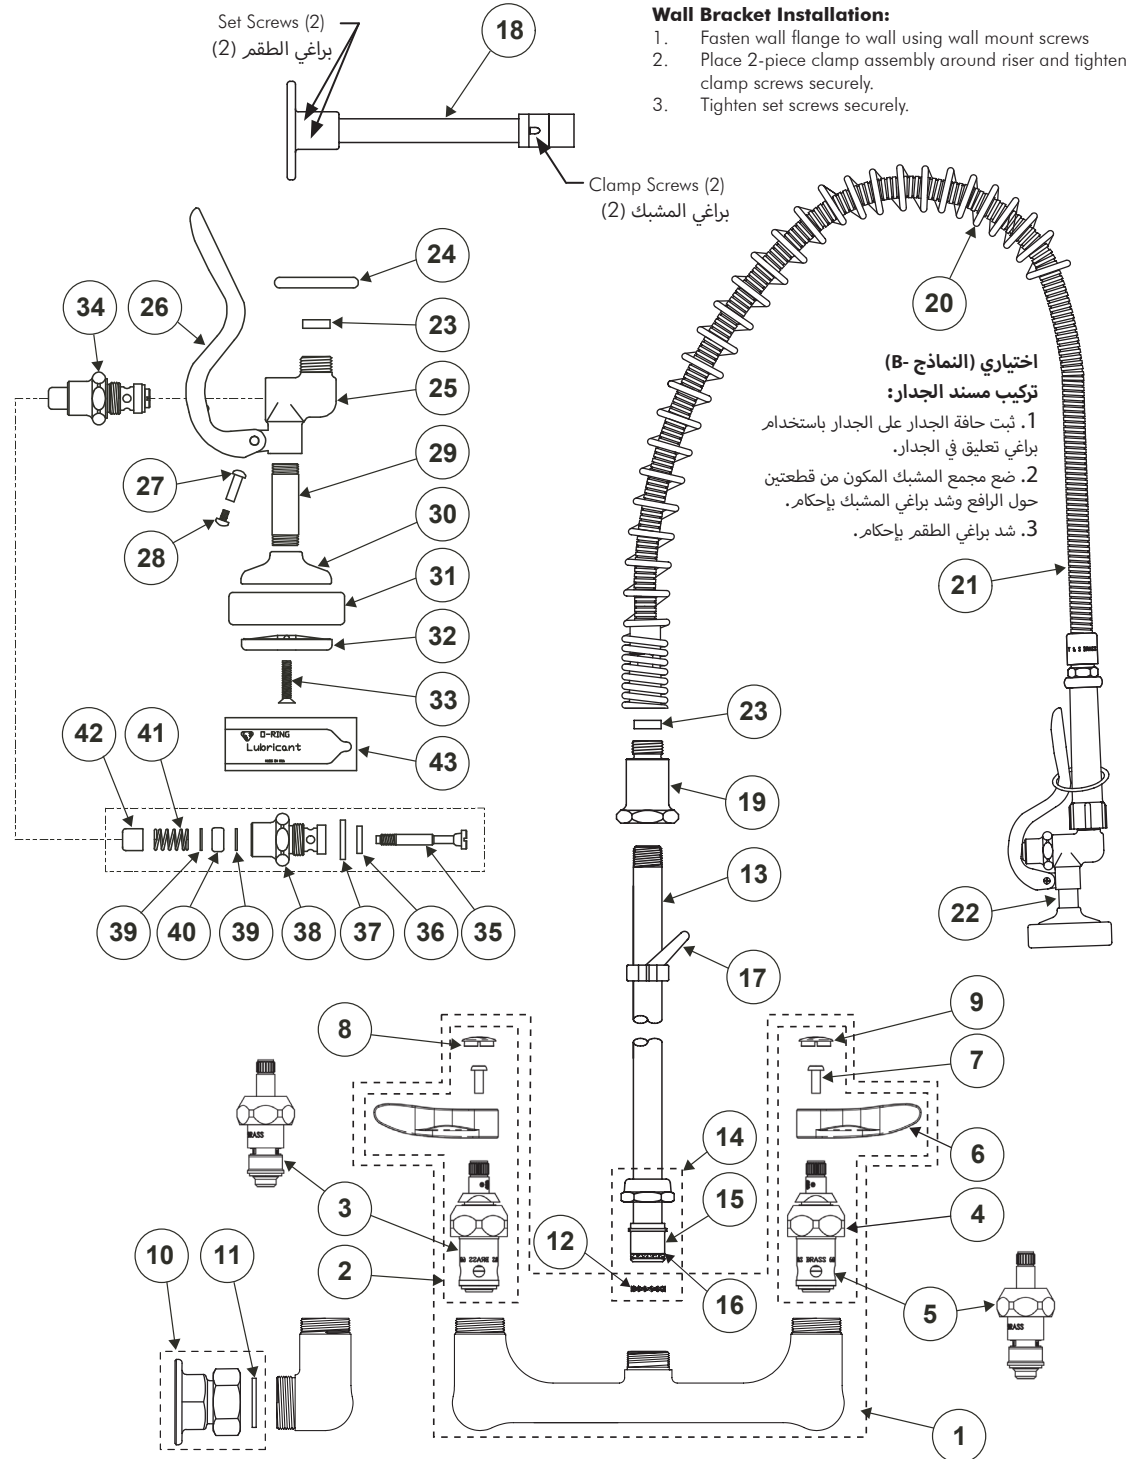

OPTIONAL (-B Models)

Wall Bracket Installation:

1. Fasten wall flange to wall using wall mount screws
2. Place 2-piece clamp assembly around riser and tighten clamp screws securely.
3. Tighten set screws securely.

اختياري (النماذج B-) تركيب مسند الجدار:

1. ثبت حافة الجدار على الجدار باستخدام براغي تعليق في الجدار.
2. ضع مجمع المشبك المكون من قطعتين حول الرفاع وشد براغي المشبك بإحكام.
3. شد براغي الطقم بإحكام.



CROMWELL

SUBMITTAL REVIEW FORM

1300 EAST 6TH STREET
LITTLE ROCK, AR 72202
PHONE: 501-372-2900
FAX: 501-372-0482

Reviewing is only for conformance with the design concepts of the Project and compliance with the information given in the contract documents. The Contractor is responsible for dimensions to be confirmed or correlated at the site; for information that pertains solely to the fabrication process, or to the means, methods, techniques, sequences, and procedures of construction; and for coordination of the work of all other trades

JOB TITLE: CARTI Bridge Patient Resource Center

JOB NO: 2020-171

SUBMITTAL NO: 224300 Healthcare Plumbing Fixtures PD

BY: RYAN VAN DOORN

DATE: 06-26-2023

Item No.	Description (See contractor transmittal for corresponding description)	No Exception Taken	Make Corrections Noted	Revise and Resubmit	Not Accepted	Comments
1	SK-4	X				NO COMMENT
2	SK-5	X				NO COMMENT

SK-4



NSFB-242-24L-12/12

INSTITUTIONAL GROUP DOUBLE COMPARTMENT ONE DRAINBOARD - LEFT NSF Certified



SPECIFICATION

 
Constructed of 14 gauge, type 304 stainless steel. Backsplash 12" high with 2" angled return. Interior surfaces polished with a non-porous Hand-Blended Just Finish. Exterior surface to have a brush finish. Underside cleaned. Supported on (4) 1-5/8" O.D. 16 gauge stainless steel tubular legs with fully enclosed gussets and adjustable bullet feet. Drain punch for Just J-35 series drains. Certified to NSF Std. No. 2; ASME A112.19.3/CSA B45.4; UPC; IPC.



Sink certified to NSF Standard No. 2 for Food Service Equipment by NSF International



Sink certified to ASME A112.19.3/CSA B45.4; Uniform Plumbing Code (UPC); International Plumbing Code (IPC), by NSF International.

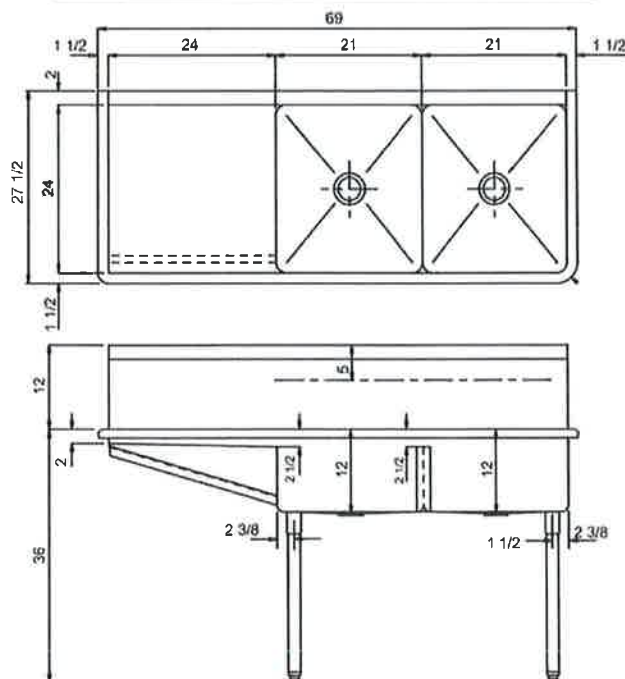

Standard Sizing		Alternate Sizing	
☒ Backsplash Ht.	12"	☐ Backsplash Ht.	8"
☒ Depth	12"	☐ Depth	14"
Made-to-Order- Custom Size			
Depth			
Backsplash Ht.			
To be specified:			
Faucet Hole Location		Holes Punched at Each Location	
☐ Over Partition (centered)		☐ (1) Hole centered	
☐ Over Each Compartment (centered)		☒ (2) holes 8" centers (8" O.C.)	
		☐ (3) holes on 4" centers (4" O.C.)	
Alternate Punching ☐			
Faucet Model:		Punching Required:	



*CAPACITY MATTERS

Based on 12" deep sink. Max. I.D. sizing with straight-sided, non-tapered bowl configuration.



JUST MFG. COMPANY CONTINUES TO MAKE QUALITY AND FUNCTIONALITY A MARK OF THE JUST PRODUCT LINE. WE RESERVE THE RIGHT TO CHANGE PRODUCT INFORMATION WITHOUT NOTICE. DIMENSIONS MAY CHANGE AND MAY BE SUBJECT TO CHANGE WITHOUT NOTICE. NO RESPONSIBILITY IS ASSUMED FOR USE OF SUPERCEDED OR VOIDED DATA. JUST MFG. CO. SINKS ARE MADE IN THE U.S.A. WHEN COMPARING OTHER BRAND PRODUCTS, BE SURE TO COMPARE USA QUALITY ALONG WITH FEATURES AND DIMENSIONS.

APPROVED FOR MANUFACTURING

MODEL NO.: **NSFB-242-24L** QTY: _____

JOB NAME: _____

TAG/ITEM: _____

CUSTOMER: _____

SIGNATURE: _____

JUST MANUFACTURING COMPANY

9233 KING STREET . FRANKLIN PARK . ILLINOIS . 60131-2111

PH: 847-678-5150

FAX: 847-678-6817

E-MAIL: custserv@justmfg.com

www.justmfg.com



T&S BRASS AND BRONZE WORKS, INC.
2 Saddleback Cove / P.O. Box 1088
Travelers Rest, SC 29690

Model No.

B-0184

Item No.

Travelers Rest, SC: 800-476-4103 • Simi Valley, CA: 800-423-0150 • Fax: 864-834-3518 • www.tsbrass.com

This Space for Architect/Engineer Approval

 
Job Name _____ Date _____

Model Specified _____ Quantity _____

Customer/Wholesaler _____

Contractor _____

Architect/Engineer _____

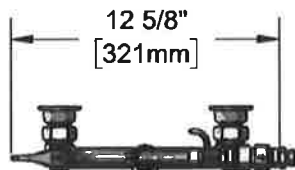

062X
12" Swing Nozzle w/
Stream Regulator Outlet



90° Swivel
Adapter Arm w/
B-0970-01
Vacuum Breaker

B-0107
1.15 GPM
Spray Valve

20" Flexible
Stainless Steel
Hose

Items Not Shown
for Clarity

Finger Hook

Quarter-Turn
Cerama Cartridges
w/ Check Valves
& Lever Handles
w/ Color Coded
Indexes

3 11/16"
[93mm]

8"
[203mm]

Adjustable From
7 3/4" to 8 1/4"
[197mm to 210mm]

Ø 2" [51mm]
Flanges w/
1/2" NPT
Female Inlets

12 1/16"
[306mm]

8 7/8"
[226mm]

4 7/16"
[112mm]

EasyInstall Add-On
Faucet w/ Quarter-Turn
Cerama Cartridge &
Lever Handle

2 3/8"
[61mm]

12"
[305mm]

2 5/16"
[59mm]

13 3/8"
[339mm]

Product Specifications:

8" Wall Mount Mixing Faucet, Quarter-Turn Cerama Cartridges w/ Check Valves, Lever Handles, 20" Flexible Stainless Steel Hose, 1.15 GPM Spray Valve, Add-On Faucet w/ 12" Swing Nozzle, 90° Swivel Adapter Arm w/ Vacuum Breaker & 1/2" NPT Female Inlets

Product Compliance:

ASME A112.18.1 / CSA B125.1
NSF 61 - Section 9
NSF 372 (Low Lead Content)
2019 DOE PRSV - Class II
CSA B64.8 (VB)

Drawn: AMG | Checked: JRM | Approved: JHB | Date: 10/15/18 | Scale: 1:8 | Sheet: 1 of 2

 
**T&S BRASS AND BRONZE WORKS, INC.**2 Saddleback Cove / P.O. Box 1088
Travelers Rest, SC 29690

Model No.

B-0184

Item No.

Travelers Rest, SC: 800-476-4103 • Simi Valley, CA: 800-423-0150 • Fax: 864-834-3518 • www.tsbrass.com

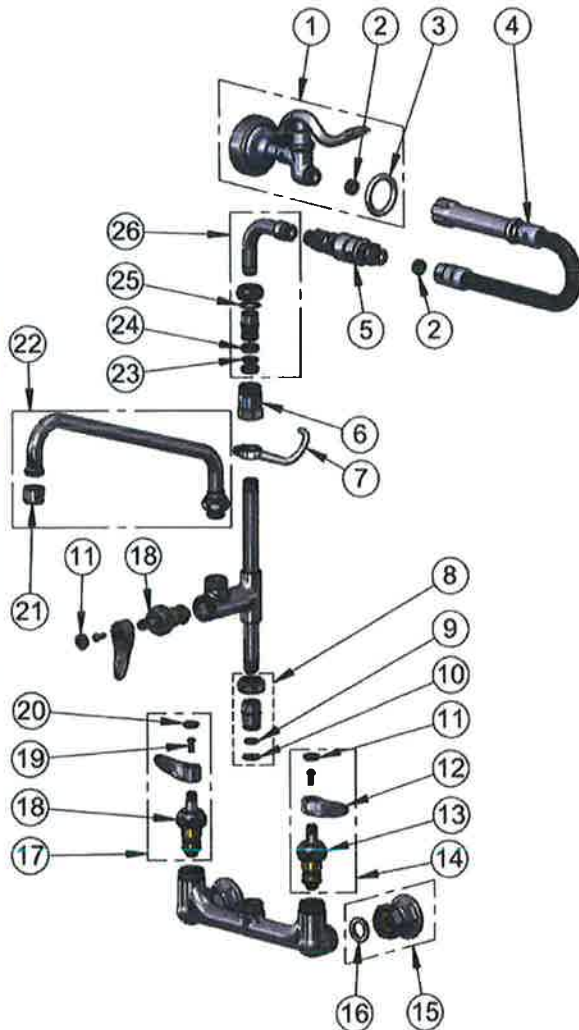

ITEM NO.	SALES NO.	DESCRIPTION
1	B-0107	1.15 GPM Spray Valve
2	010476-45	#27 Washer
3	000907-45	Spray Valve Hold Down Ring
4	B-0020-H	20" Flexible Stainless Steel Hose
5	B-0970-01	Continuous Pressure Vacuum Breaker w/ 3/4-14 UN Adapters
6	054X	Swivel Body
7	004R	Finger Hook
8	EZ-K	EasyInstall Kit
9	001065-45	O-ring
10	014200-45	Star Washer, Anti-Rotation
11	018506-19NS	Blue Button Index, Press-in
12	001638-45NS	Lever Handle (New Style)
13	012395-25NS	Quarter-Turn Cerama Cartridge w/ Check Valve, LTC
14	012447-25NS	Quarter-Turn Cerama Cartridge w/ Check Valve, Handle, Blue Index & Screw, LTC
15	00AA	1/2" NPT Female Eccentric Flange
16	001019-45	Coupling Nut Washer
17	012446-25NS	Quarter-Turn Cerama Cartridge w/ Check Valve, Handle, Red Index & Screw, RTC
18	012394-25NS	Quarter-Turn Cerama Cartridge w/ Check Valve, RTC
19	000925-45	Lab Handle Screw
20	001193-19NS	Red Button Index, Press-in
21	B-PT	Full Flow Stream Regulator, 55/64-27
22	062X	12" Swing Nozzle
23	001074-45	O-Ring
24	011429-45	Swivel Sleeves (2)
25	009538-45	Swivel Washer
26	034A	90° Swivel Adapter Arm

Product Specifications:


8" Wall Mount Mixing Faucet, Quarter-Turn Cerama Cartridges w/ Check Valves, Lever Handles, 20" Flexible Stainless Steel Hose, 1.15 GPM Spray Valve, Add-On Faucet w/ 12" Swing Nozzle, 90° Swivel Adapter Arm w/ Vacuum Breaker & 1/2" NPT Female Inlets

Product Compliance:ASME A112.18.1 / CSA B125.1
NSF 61 - Section 9
NSF 372 (Low Lead Content)
2019 DOE PRSV - Class II
CSA B64.8 (VB)

Drawn: AMG | Checked: JRM | Approved: JHB | Date: 10/15/18 | Scale: NTS | Sheet: 2 of 2

**McGuire Manufacturing Co., Inc.**

 60 Grandview Court
P.O. Box 746 ♣ Cheshire, CT 06410
203-699-1801 ♣ Fax: 203-699-1813
www.mcguiremfg.com

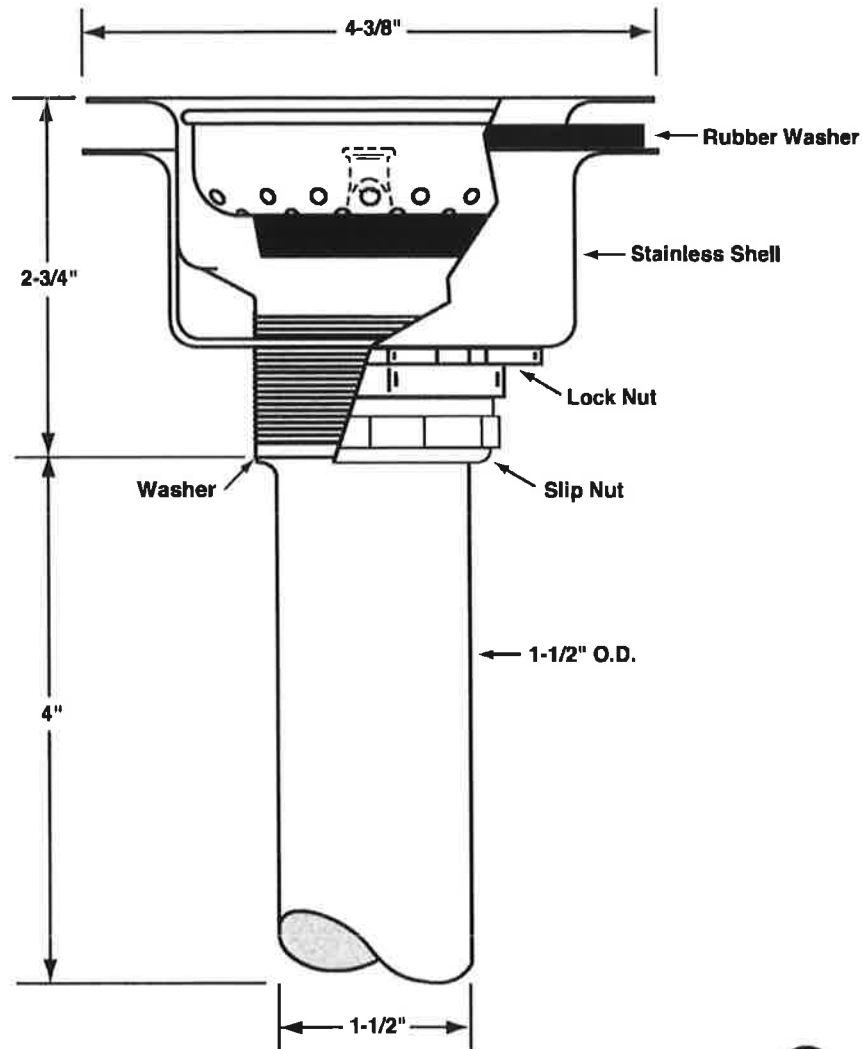PRODUCT SPECIFICATION**Part No.****151A****Stainless Steel
Basket Strainer****Job Name:****Submittal Number:**

See options and accessories section for details on product variations.

Specifications:

Heavy Duty Forged Stainless Steel Basket Strainer with 1-1/2" x 4" seamless brass tailpiece, die cast slip and lock nuts. Basket Strainer shall be in compliance with CSA or other recognized testing authority and bear both manufacturer and testing mark.



McGuire Manufacturing Co., Inc.

60 Grandview Court
P.O. Box 746 ♣ Cheshire, CT 06410
203-699-1801 ♣ Fax: 203-699-1813
www.mcguiremfg.com

PRODUCT SPECIFICATION

 
Part No.

8872CBECO, C8872CECO,
8912CBECO, C8912CECO,
8912CNCBECO, 8912C18BECO

Cast Body P-Trap With
or Without Cleanout

Job Name: _____

Submittal Number: _____

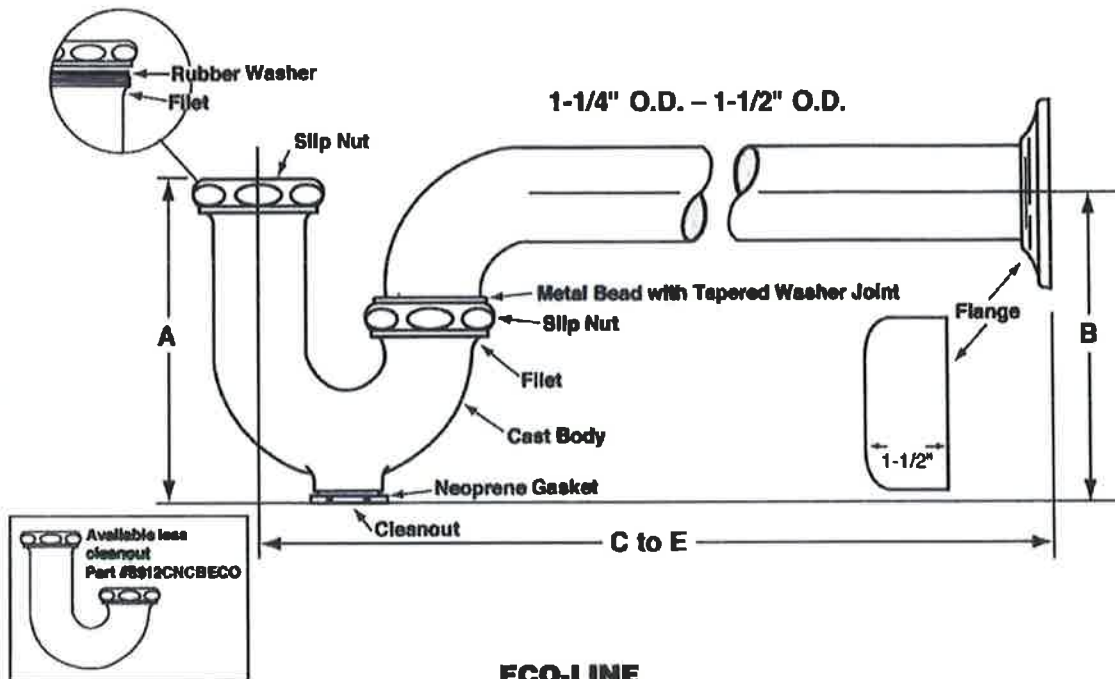

ECO-LINE

ROUGHING MEASUREMENTS

MODEL NO.	TRAP DIMENSIONS		A	B	C to E	FLANGE	SLIP NUT
	INLET	OUTLET					
8872CBECO	1-1/4"	1-1/4"	5"	4-1/2"	11"	Box	Brass
C8872CECO	1-1/4"	1-1/4"	5"	4-1/2"	10"	Shallow	Zinc
8912CBECO	1-1/2", 1-1/4"	1-1/2"	5"	4-1/2"	12"	Box	Brass
C8912CECO	1-1/2"	1-1/2"	5"	4-1/2"	10-1/2"	Shallow	Zinc
8912CNCBECO	1-1/2", 1-1/4"	1-1/2"	5"	4-1/2"	12"	Box	Brass
8912C18BECO	1-1/2", 1-1/4"	1-1/2"	5"	4-1/2"	18"	Box	Brass

FED SPEC W.W.P. 541
CAST BRASS P-TRAP
MINIMUM SEAL 2"

See options and accessories section for details on product variations.



Specifications:

Chrome plated P-Trap shall be cast brass body, with or without cleanout, with 17 gauge seamless tubular wall bend and flange.



McGuire Manufacturing Co., Inc.

60 Grandview Court

Cheshire, Connecticut 06410

(203) 699-1801 Fax (203) 699-1813

customerservice@mcguiremfg.com mcguiremfg.com

PRODUCT SPECIFICATION

Part No.


LFBV2165

**Quarter-Turn Brass
Ball Valve Lavatory Supply**

Job Name:

Submittal Number:

 Convertible™

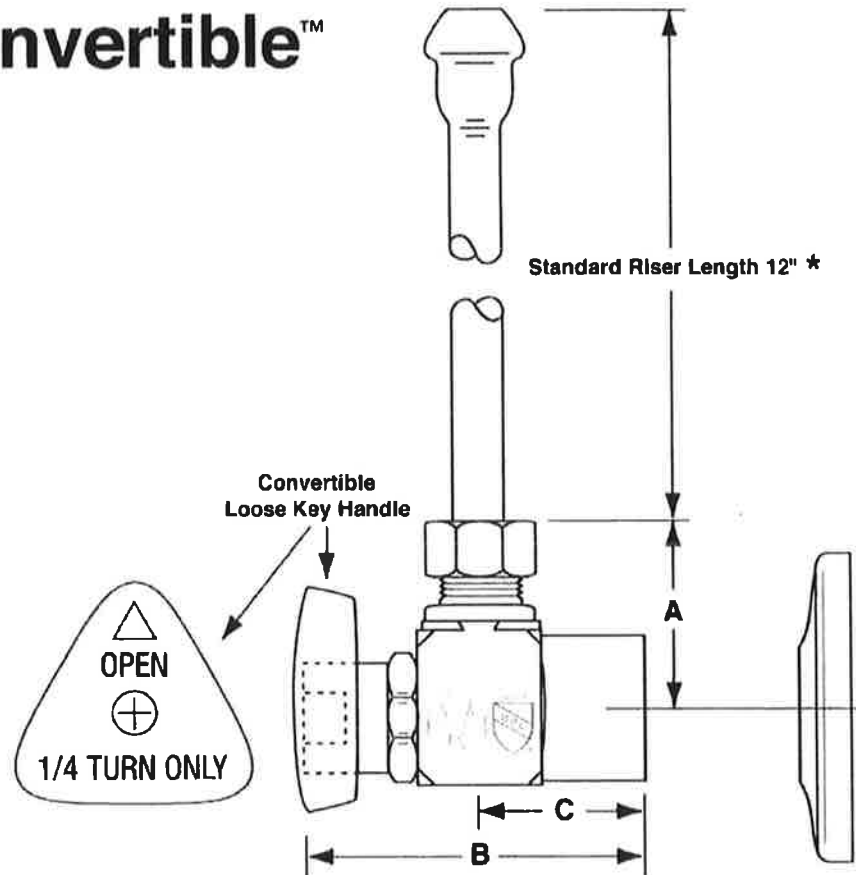

NO.	DESCRIPTION	ROUGHING MEASUREMENTS		
		A	B	C
LFBV2165	1/2" I.P.S. x 3/8" O.D.	1-3/16"	2-3/16"	1"



* See options and accessories section for details on product variations.

Specifications:

Supply kits shall include lead free chrome plated, commercial pattern Quarter-Turn Brass Ball Valve with convertible loose key handle, (chrome plated copper or braided stainless risers) and (shallow, deep, bell) (steel or brass) or (forged brass with set screw) flange. Inlet shall be (1/2) inch (IPS, sweat, compression). Outlet shall be (3/8) inch (compression). Supply kit shall be McGuire Supply kit shall be certified by recognized authority and bear manufacturer and testing mark.



WARNING:

This product can expose you to chemicals including lead, which is listed by the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.org

SK-5



INSTITUTIONAL GROUP

J-127- JHL

 
 
 
LAUNDRY TUB with INTEGRA FLOW
SINGLE COMPARTMENT

SUBMITTAL DATA



SPECIFICATION

Seamless welded construction, fabricated of 14 gauge type 304 stainless steel with Integra Flow. 1-1/2" dia. roll rim. Surfaces polished to a Hand-Blended Just Finish. Exposed exterior surfaces polished with a standard brush finish. Includes four 14 gauge type 304 stainless steel legs with angle frame. Drain punched for J-35-FS drain unless otherwise specified.

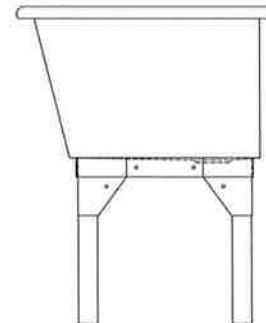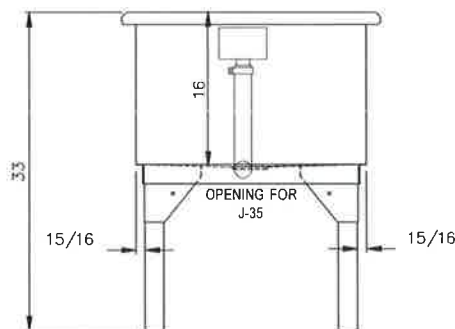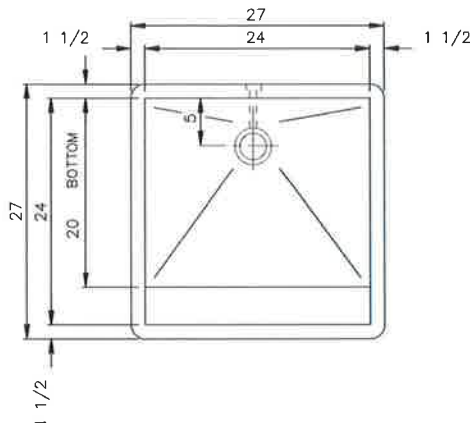

FUNCTIONAL DESIGN, QUALITY, AND SPECIFICATIONS LISTED DESCRIBE THE JUST STANDARD OF QUALITY. WHEN MAKING COMPARISONS WITH OTHER OFFERINGS, INSIST ON THE JUST QUALITY OF CONSTRUCTION. FOR ADDITIONAL INFORMATION REGARDING THE COMPLETE LINE OF JUST SINKS, FAUCETS AND DRAINS, VISIT OUR WEB SITE AT www.justmfg.com

Job Name _____

Customer _____

Architect/Engineer _____

APPROVED FOR MANUFACTURING

MODEL NO. J-127-JHL QTY. _____

COMPANY _____

TITLE _____ DATE _____

SIGNATURE _____

JUST MANUFACTURING COMPANY

9233 KING STREET . FRANKLIN PARK . ILLINOIS . 60131-2111

PH: 847-678-5150

FAX: 847-678-6817

E-MAIL: custserv@justmfg.com

www.justmfg.com



T&S BRASS AND BRONZE WORKS, INC.

2 Saddleback Cove / P.O. Box 1088
Travelers Rest, SC 29690

Model No.

MPZ-8WCN-06

Item No.

Travelers Rest, SC: 800-476-4103 • Simi Valley, CA: 800-423-0150 • Fax: 864-834-3518 • www.tsbrass.com

This Space for Architect/Engineer Approval

 
 
Job Name _____ Date _____

Model Specified _____ Quantity _____

Customer/Wholesaler _____

Contractor _____

Architect/Engineer _____

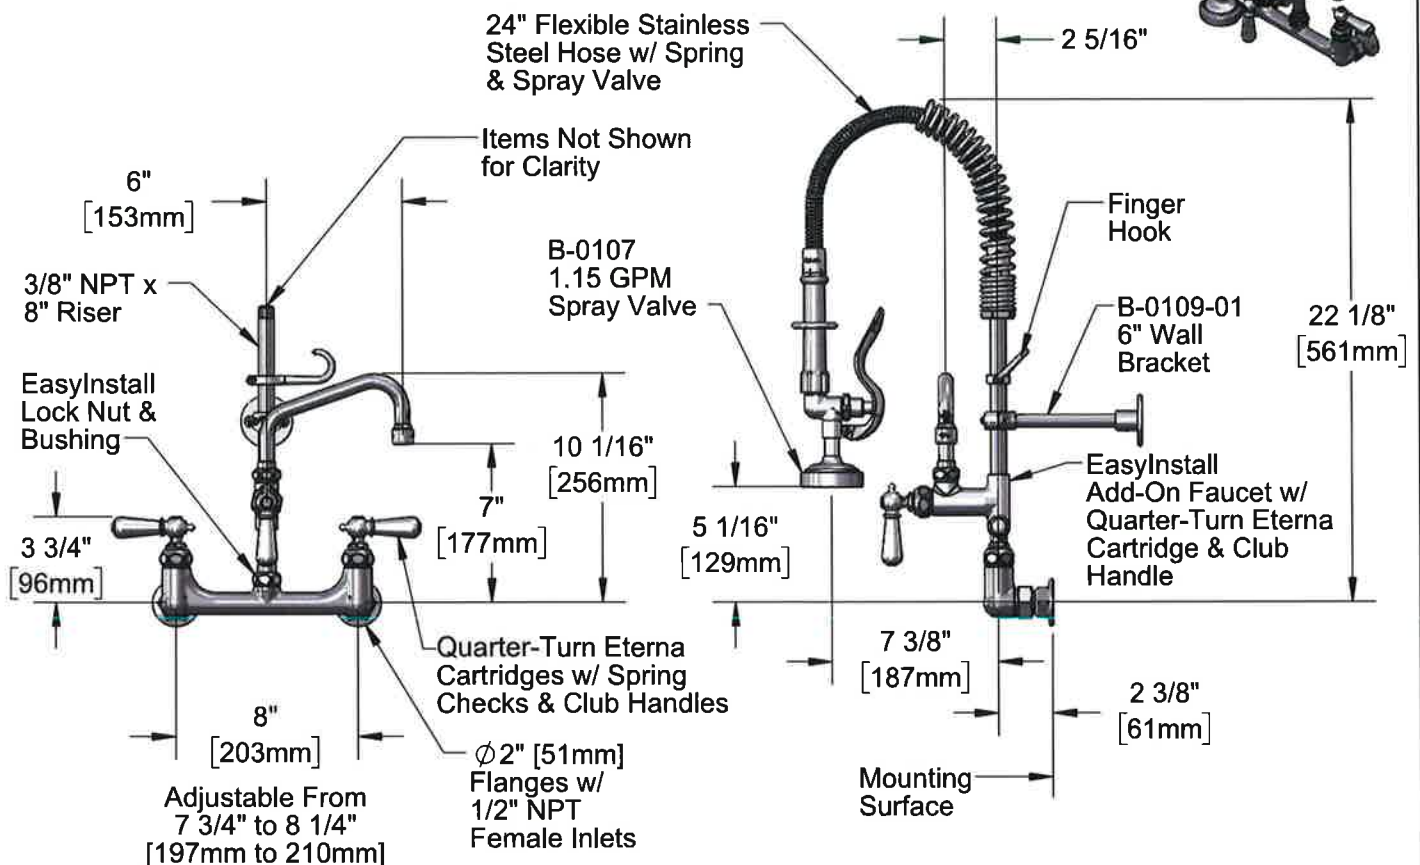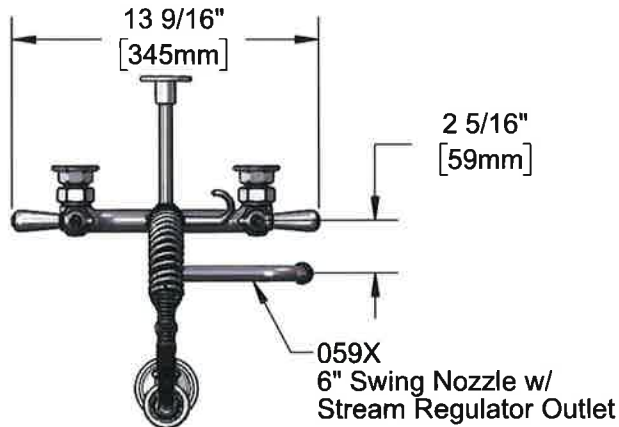

Product Specifications:

Pre-Rinse Unit: EasyInstall 8" Wall Mount Mixing Faucet, Quarter-Turn Eterna Cartridges w/ Spring Checks, Club Handles, Add-On Faucet w/ 6" Swing Nozzle, Compact Spring, 24" Flexible Stainless Steel Hose, 1.15 GPM Spray Valve, 6" Wall Bracket & 1/2" NPT Female Inlets

Product Compliance:

ASME A112.18.1 / CSA B125.1
NSF 61 - Section 9
NSF 372 (Low Lead Content)
2019 DOE PRSV - Class II
For Commercial Use Only



T&S BRASS AND BRONZE WORKS, INC.

 
2 Saddleback Cove / P.O. Box 1088
Travelers Rest, SC 29690

Model No.

MPZ-8WCN-06

Item No.

Travelers Rest, SC: 800-476-4103 • Simi Valley, CA: 800-423-0150 • Fax: 864-834-3518 • www.tsbrass.com

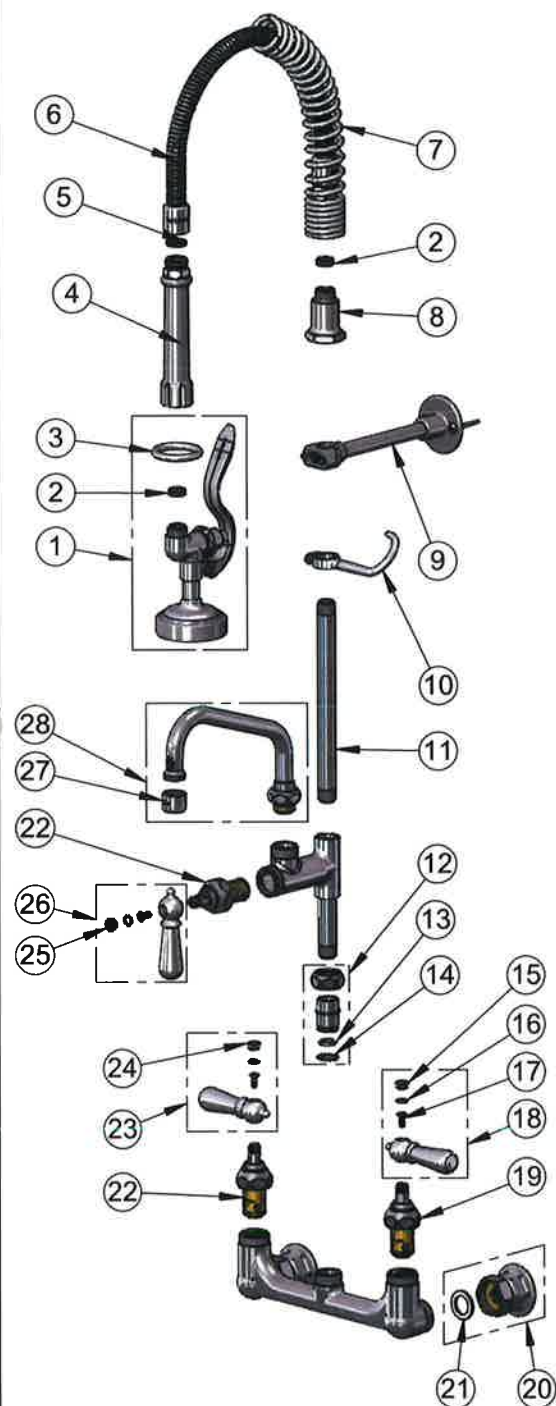

ITEM NO.	SALES NO.	DESCRIPTION
1	B-0107	1.15 GPM Spray Valve
2	010476-45	#27 Washer
3	000907-45	Spray Valve Hold Down Ring
4	002987-40	Grip Handle
5	001014-45	Washer, B-0100 Hose Barrel
6	B-0024-H2A	24" Flexible Stainless Steel Hose, Less Handle
7	016795-45	Compact Spring
8	000821-40	Spring Body
9	B-0109-01	6" Wall Bracket
10	004R	Finger Hook
11	078X	Nipple, 3/8" NPT x 8"
12	EZ-K	EasyInstall Kit
13	001065-45	O-Ring
14	014200-45	Star Washer, Anti-Rotation
15	009304-41	Decorative Cap Insert, Cold
16	001066-45	O-Ring
17	000922-45	Lever Handle Screw
18	009331-41	Decorative Club Handle Kit, Cold
19	012442-40NS	Quarter-Turn Eterna Cartridge w/ Spring Check, LTC
20	00AA	1/2" NPT Female Eccentric Flange
21	001019-45	Coupling Nut Washer
22	012443-40NS	Quarter-Turn Eterna Cartridge w/ Spring Check, RTC
23	009332-41	Decorative Club Handle Kit, Hot
24	009303-41	Decorative Cap Insert, Hot
25	009285-40	Cap Insert Blank
26	017181-41	Decorative Club Handle - Blank
27	B-PT	Full Flow Stream Regulator, 55/64-27
28	059X	6" Swing Nozzle

Product Specifications:


Pre-Rinse Unit: EasyInstall 8" Wall Mount Mixing Faucet, Quarter-Turn Eterna Cartridges w/ Spring Checks, Club Handles, Add-On Faucet w/ 6" Swing Nozzle, Compact Spring, 24" Flexible Stainless Steel Hose, 1.15 GPM Spray Valve, 6" Wall Bracket & 1/2" NPT Female Inlets

Product Compliance:

ASME A112.18.1 / CSA B125.1
NSF 61 - Section 9
NSF 372 (Low Lead Content)
2019 DOE PRSV - Class II
For Commercial Use Only

**McGuire Manufacturing Co., Inc.**

 60 Grandview Court
P.O. Box 746 ♣ Cheshire, CT 06410
203-699-1801 ♣ Fax: 203-699-1813
www.mcguiremfg.com

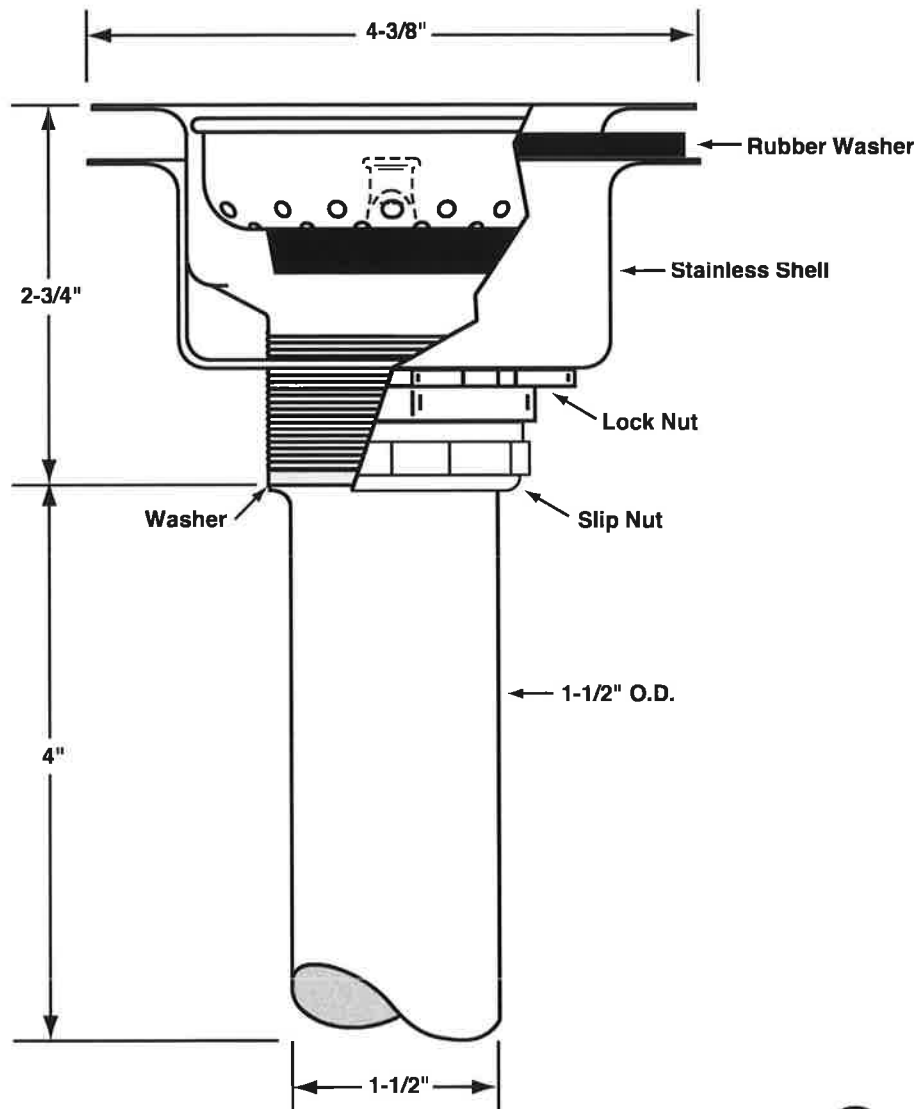PRODUCT SPECIFICATION**Part No.****151A****Stainless Steel
Basket Strainer****Job Name:****Submittal Number:**

See options and accessories section for details on product variations.

Specifications:

Heavy Duty Forged Stainless Steel Basket Strainer with 1-1/2" x 4" seamless brass tailpiece, die cast slip and lock nuts. Basket Strainer shall be in compliance with CSA or other recognized testing authority and bear both manufacturer and testing mark.

Engineering Specification

 
Job Name **CARTI Cancer**
 Job Location **LR**
 Engineer **Cromwell**
 Approval _____
 Tag **SK-5**

Contractor **Comfort Systems USA**
 Approval _____
 Contractor's P.O. No. _____
 Representative **Sanders Supply**

SI-750 Cast Iron Hair Interceptor Specification

Watts SI-750 epoxy coated cast iron hair interceptor with gasketed cover, slip joint inlet elbow, removable sediment basket and 1 1/2"(36) IPS threaded connections.

Note: 6 1/2"(165) clearance required below cover to remove basket.

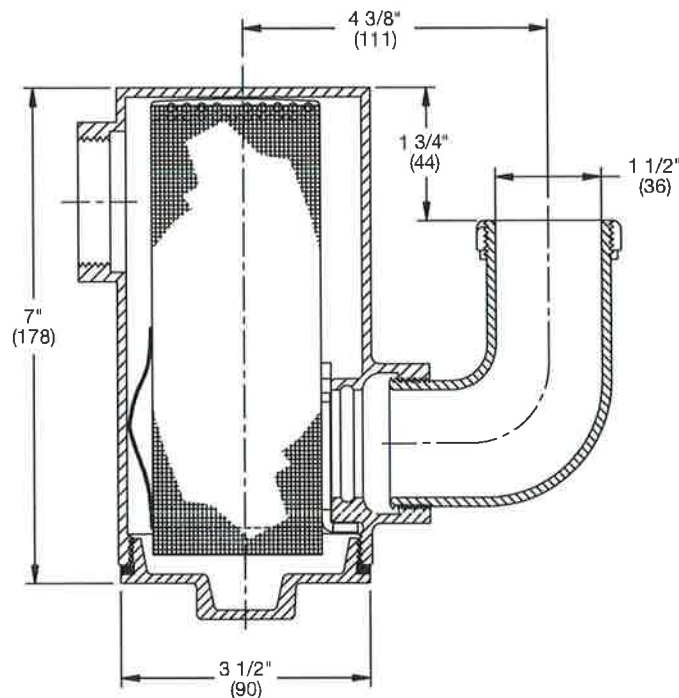

Approvals



NOTICE

The information contained herein is not intended to replace the full product installation and safety information available or the experience of a trained product installer. You are required to thoroughly read all installation instructions and product safety information before beginning the installation of this product.

Watts product specifications in U.S. customary units and metric are approximate and are provided for reference only. For precise measurements, please contact Watts Technical Service. Watts reserves the right to change or modify product design, construction, specifications, or materials without prior notice and without incurring any obligation to make such changes and modifications on Watts products previously or subsequently sold.

USA: T: (800) 338-2561 • F: (828) 248-3929 • Watts.com
 Canada: T: (888) 208-8927 • F: (905) 481-2316 • Watts.ca
 Latin America: T: (52) 55-4122-0138 • Watts.com



McGuire Manufacturing Co., Inc.

60 Grandview Court
Cheshire, Connecticut 06410
(203) 699-1801 Fax (203) 699-1813
customerservice@mcguiremfg.com mcguiremfg.com

PRODUCT SPECIFICATION

Part No.


LFBV2165

**Quarter-Turn Brass
Ball Valve Lavatory Supply**

Job Name:

Submittal Number:

 Convertible™

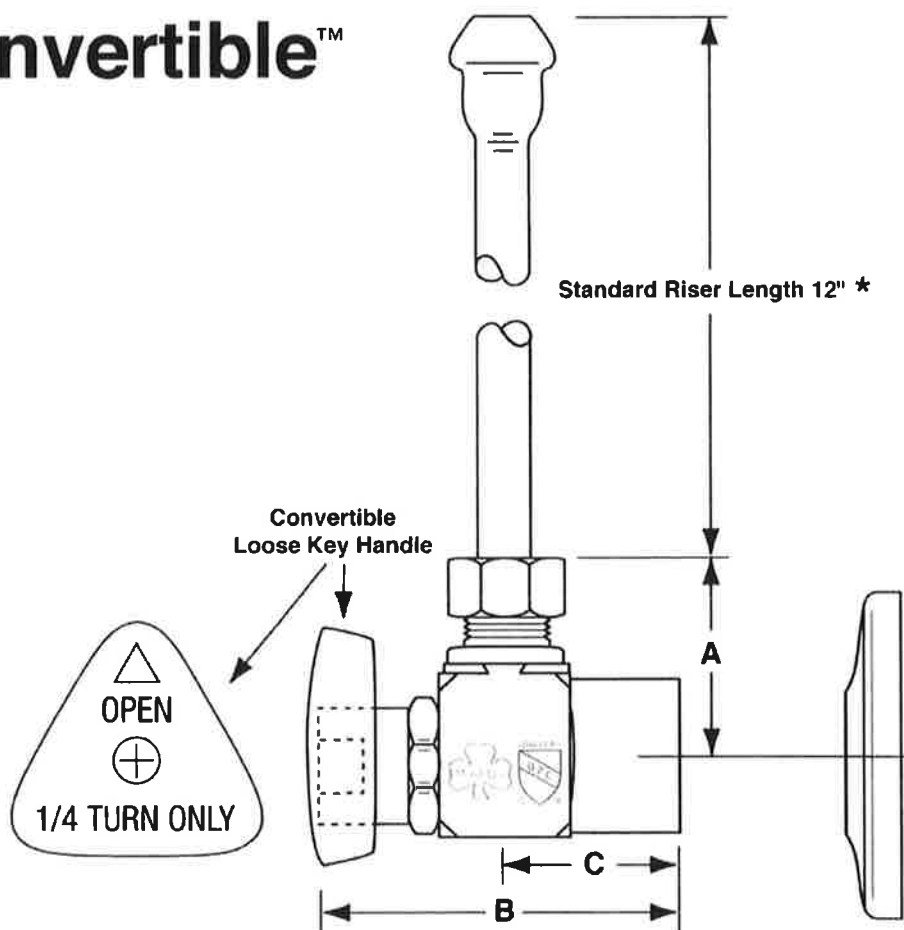

NO.	DESCRIPTION	ROUGHING MEASUREMENTS		
		A	B	C
LFBV2165	1/2" I.P.S. x 3/8" O.D.	1-3/16"	2-3/16"	1"

* See options and accessories section for details on product variations.



Specifications:

Supply kits shall include lead free chrome plated, commercial pattern Quarter-Turn Brass Ball Valve with convertible loose key handle, (chrome plated copper or braided stainless risers) and (shallow, deep, bell) (steel or brass) or (forged brass with set screw) flange. Inlet shall be (1/2) inch (IPS, sweat, compression). Outlet shall be (3/8) inch (compression). Supply kit shall be McGuire. Supply kit shall be certified by recognized authority and bear manufacturer and testing mark.



WARNING:

This product can expose you to chemicals including lead which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov