



ELECTRIC TANKLESS WATER HEATER - POINT OF USE

INSTANT-FLOW[®] SR - LOW FLOW

IDEAL APPLICATION: *hospitality sink, manual hand washing faucet*

PRODUCT FEATURES

- Unlimited hot water
- Saves water and energy - 99% energy efficient
- Vandal resistant rugged cast aluminum housing
- Space saving compact size:
6-1/4" (H) x 9-5/8" x 2-3/4"
(159 (H) x 244 x 70mm)
- Meets applicable building codes including ADA, UL, IAPMO, UPC, CSA.
- Environmentally friendly



Instant-Flow[®] SR - Low Flow

Chronomite Instant-Flow[®] SR - Low Flow models are manufactured to provide reliable point-of-use hot water. There is no pressure and temperature relief valve needed (unless required by code), saving time and money on installation.

Housing is fabricated from rugged cast aluminum alloy.

Element assembly is fabricated from Celcon plastic.

Heating coils are nichrome.

Faucet flow controls are supplied with each unit. 3/8" compression fittings are supplied (standard). Optional 1/2" male NPT water connections available.



Member of
U.S. Green
Building Council



Water
Conserving
Product

For the model being selected, please place the corresponding amps, volts and temperature rise values in the Guide Specifications to the right.

GUIDE SPECIFICATION

Tankless Water Heater shall be a Chronomite Laboratories Model

SR - 15 L / 277 OPTIONS
AMPS VOLTS

with Amps and Volts

To heat 0.4 GPM (1.5 LPM) at a temperature rise of

°F

Unit shall be provided with Celcon waterways, and Nichrome heating coils.

OPTIONS

- PA 765 ABS Housing (P)
- Satin Finish Stainless Steel Housing (SS)
- High Polish Finish Stainless Steel (SSP)
- Pressure & Temp Relief Valve Assembly (TP)
- 1/2" Male NPT (NPT08)
- Disconnect Switch, Rotary 40A - Lockable Nema 4X (2095-1)

MODEL	AMPS	VOLTS	WATTS	ACTIVATION GPM	°F TEMPERATURE RISE @		
					0.40 GPM	0.75 GPM	1.00 GPM
SR-15L/120	15	120	1800	0.35	31	--	--
SR-15L/277	15	277	4150	0.35	71	38	28
SR-20L/120	20	120	2400	0.35	41	22	--
SR-20L/208	20	208	4160	0.35	71	38	28
SR-20L/240	20	240	4800	0.35	82	44	33
SR-20L/277	20	277	5540	0.35	95	50	38
SR-30L/120	30	120	3600	0.35	61	33	25

Complies with Standards for:

LISTED TO:
UL STD 498



CERTIFIED TO:
CAN/CSA STD C22.2 NO. 88

LIMITED
ELECTRIC HEATING
APPLIANCE
IHT

Intertek
5001365

CALGreen

CHRONOMITE LABORATORIES, INC.

17451 Hurley St. :: City of Industry, CA 91744
 Phone 800-447-4962 :: 626-937-4270
 Fax 626-937-4279 :: www.chronomite.com

MEMBER OF



MORRIS GROUP



ELECTRIC TANKLESS WATER HEATER - POINT OF USE

INSTANT-FLOW® SR - LOW FLOW

INSTANT-FLOW® SR - LOW FLOW METRIC CHART

MODEL	AMPS/PHASE	1 ∅ VOLTAGE	WATTS	ACTIVATION LPM	°C TEMPERATURE RISE @		
					1.50 LPM	3.00 LPM	4.00 LPM
SR-15L/120	15	120	1800	1.3	17	--	--
SR-15L/277	15	277	4150	1.3	40	20	15
SR-20L/120	20	120	2400	1.3	23	11	--
SR-20L/208	20	208	4160	1.3	40	20	15
SR-20L/240	20	240	4800	1.3	46	23	17
SR-20L/277	20	277	5540	1.3	53	27	20
SR-30L/120	30	120	3600	1.3	34	17	13

TECHNICAL DIMENSIONS

INSTANT-FLOW® SR - LOW FLOW

Dimensions: 159 (H) x 244 x 70mm

Weight: 2.27 Kg

Materials: Rugged cast aluminum housing
Celcon plastic element assembly
with nichrome coils

Housing Color: White

Minimum Operating Flow Rate: 1.3 LPM

Minimum Operating Pressure: 172 kPa

Maximum Operating Pressure: 552 kPa

Maximum Pressure: 1034 kPa


Maximum Water Temperature: 71°C

Maximum Ambient Operating Temperature: 60°C

Listing: UL, IAPMO, UPC, ADA, ETL

GENERAL NOTES:

- 240V models when operated at 220V will have approximately a 15% temperature decrease.
- 120V models when operated 110V will have approximately a 15% temperature decrease.

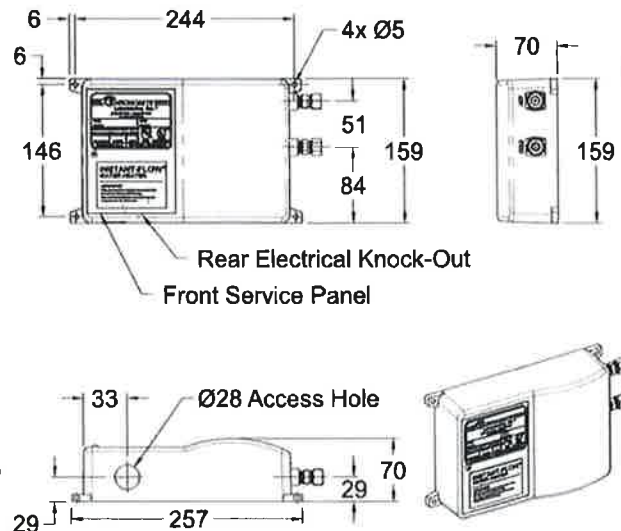

Chronomite Laboratories assumes no responsibility for use of void or suspended data. © Copyright Chronomite Laboratories, Inc.
Member of Morris Group International, City of Industry, CA Please visit www.chronomite.com for most current specifications.

SELECTION SUMMARY & APPROVAL FOR MANUFACTURING	Company _____	Quantity _____
	Model Number & Options _____	Quantity _____
	Contact _____	Title _____
	Signature (Approval for Manufacturing) _____	Date _____
	<div style="text-align: right;"> CHRONOMITE LABORATORIES, INC. PH. 800-447-4962 626-937-4270 FAX 626-937-4279 www.chronomite.com </div>	

INSTANT-FLOW® SR WATER HEATER

INSTALLATION AND OPERATION INSTRUCTIONS (LOW ACTIVATION MODELS)



TABLE OF CONTENTS

Technical Information	2
Dimensional Data	3
Installation	4-5
Specifications	6
Troubleshooting	7
Warranty Information	8

REQUIRED ITEMS FOR INSTALLATION NOT SUPPLIED

- ✂ Electrical Junction Supply Box
- ✂ Electrical Supply Conduit
- ✂ Electrical Supply Wire
- ✂ Dual Outlet Angle Stop
- ✂ 3/8" Flex Hose or 3/8" O.D. Tubing (2)
- ✂ Carpenters Level
- ✂ Flat Head Screwdriver
- ✂ Phillips Head Screwdriver

Acorn Engineering Company™ assumes no responsibility for use of void or superseded data. © Copyright Acorn Engineering, City of Industry, CA Member of Morris Group International. Please visit www.chronomite.com for most current specifications.

3100-005-001
II-929 11/20 REV 11

COMPLIES WITH
STANDARDS



CALGreen



Intertek
5001365

CHRONOMITE
Instantaneous
Water Heaters

17451 Hurley St.
City of Industry, CA
91744 U.S.A.
Phone 800-447-4962
626-937-4270

Member of
MORRIS GROUP

www.chronomite.com

INSTANT-FLOW® SR SPECIFICATIONS (LOW ACTIVATION MODELS)



Before installation of heater, review electrical requirements needed for model of heater selected.

INCOMING WATER TEMPERATURE INCREASE					
MODEL	VOLTAGE	ACTIVATION	0.40 GPM [1.3 LPM]	0.50 GPM [1.9 LPM]	0.75 GPM [2.8 LPM]
SR-15L/120 HTR-I	110/120	0.35 GPM [1.3 LPM]	31°F [17°C]	25°F [14°C]	-
SR-15L/277 HTR-I	277	0.35 GPM [1.3 LPM]	71°F [40°C]	57°F [31°C]	38°F [21°C]
SR-20L/120 HTR-I	110/120	0.35 GPM [1.3 LPM]	41°F [23°C]	33°F [18°C]	22°F [12°C]
SR-20L/208 HTR-I	208	0.35 GPM [1.3 LPM]	71°F [40°C]	57°F [31°C]	38°F [21°C]
SR-20L/240 HTR-I	220/240	0.35 GPM [1.3 LPM]	82°F [46°C]	66°F [36°C]	44°F [25°C]
SR-20L/277 HTR-I	277	0.35 GPM [1.3 LPM]	95°F [53°C]	76°F [42°C]	50°F [28°C]
SR-30L/120 HTR-I	110/120	0.35 GPM [1.3 LPM]	61°F [34°C]	49°F [27°C]	33°F [18°C]

OUTLET TEMPERATURE = INLET TEMPERATURE + TEMPERATURE INCREASE

TABLE 1					
MODEL	WATTAGE	VOLTAGE	AMPS	BREAKER SIZE	
				INTERMITTENT DUTY	CONTINUOUS DUTY
SR-15L/120 HTR-I	1800	110/120	15	15	20
SR-15L/277 HTR-I	4150	277	15	15	20
SR-20L/120 HTR-I	2400	110/120	20	20	30
SR-20L/208 HTR-I	4160	208	20	20	30
SR-20L/240 HTR-I	4800	220/240	20	20	30
SR-20L/277 HTR-I	5540	277	20	20	30
SR-30L/120 HTR-I	3600	110/120	30	30	40

NOTE: BEFORE INSTALLATION, COMPARE ELECTRICAL NEEDED FOR THE MODEL OF HEATER SELECTED.



INSTANT-FLOW® SR SPECIFICATIONS:

- DIMENSIONS:** 6-1/4" [159 mm] X 9-5/8" [244 mm] X 2-3/4" [70 mm]
- WEIGHT:** 5 LBS. [2.27 Kg]
- MATERIALS:** ALUMINUM HOUSING, CELCON WATERWAYS, NICHROME PARTS
- COLOR:** WHITE
- PIPE FITTINGS:** 3/8" COMPRESSION
- OPERATING PRESSURE RATING:** 25 PSI [172 kPa] MINIMUM, 80 PSI [551.6 kPa] MAXIMUM
- MAXIMUM PRESSURE RATING:** 150 PSI [1034.2 kPa] NO PRESSURE RELIEF VALVE NEEDED UNLESS REQUIRED BY LOCAL CODES.
- MAXIMUM OPERATING TEMP:** 160°F [71°C]
- MAXIMUM INLET WATER TEMP:** 80°F [27°C]
- MINIMUM OPERATING FLOW RATE:** 0.35 GPM [1.3 LPM]
- LISTINGS:** UL, HUD, IAPMO, UPC, ETL

HOW INSTANT-FLOW® SR WORKS

The engineered plastic case houses a series of ingeniously designed coils that instantly heat water as it flows through the vessel. A unique power switch automatically applies electrical current to the coils when hot water is requested. The electrical current is not applied when the water is not in use.

INSTANT-FLOW® SR DIMENSIONAL DATA

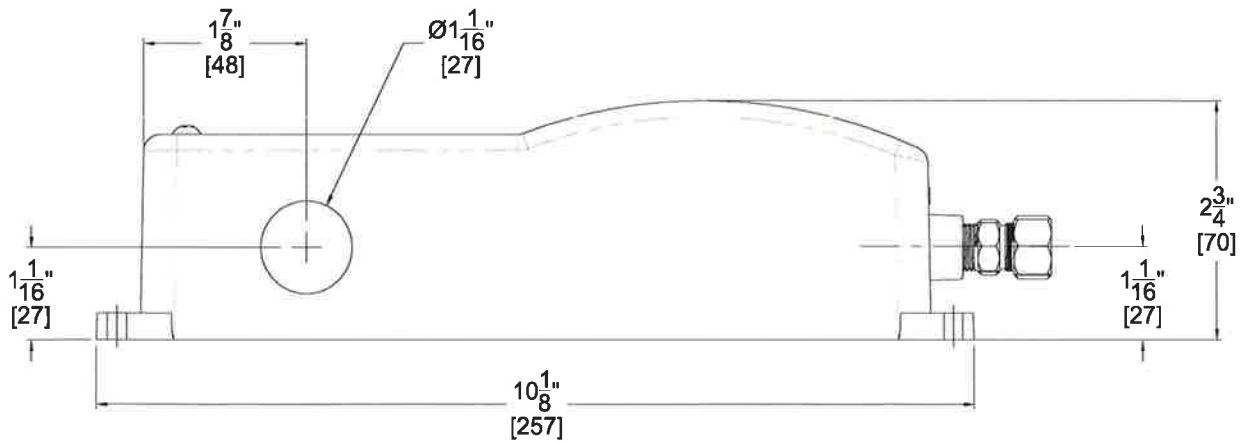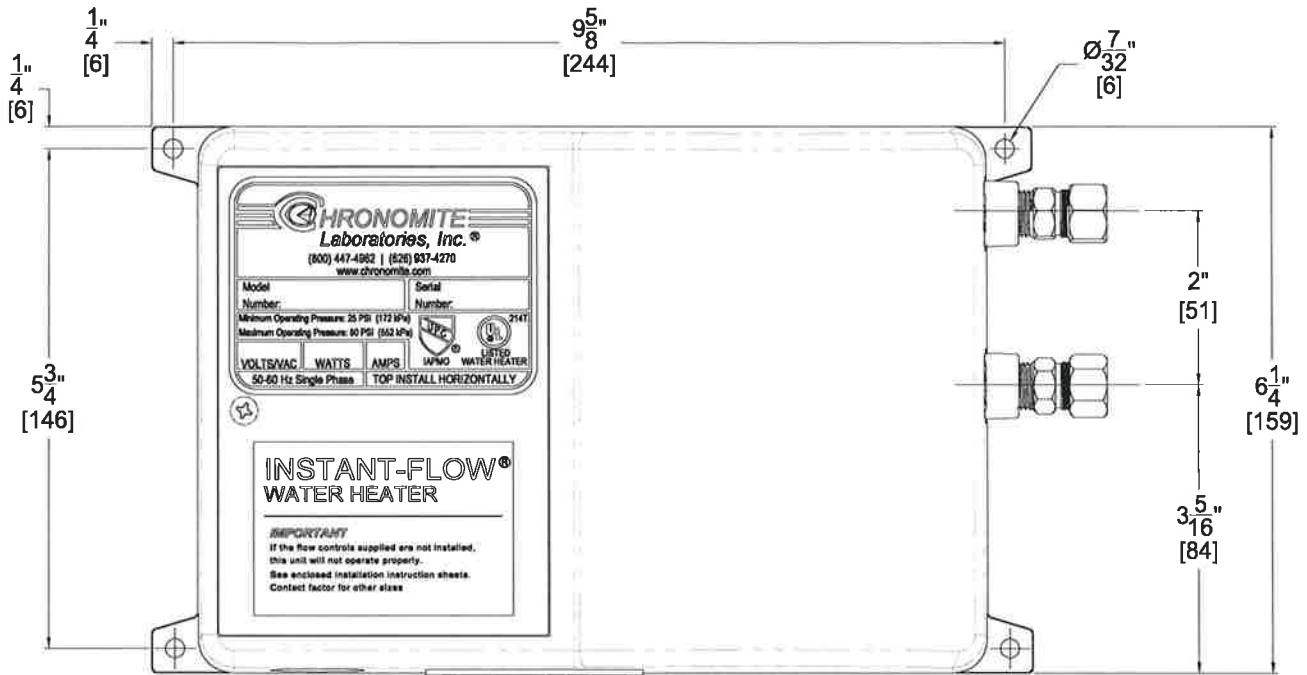

INSTANT-FLOW® SR INSTALLATION



- A) Turn off the circuit breaker to avoid dangerous electrical shocks.
- B) Turn off the water supply.
- C) Do not apply heat to inlet or outlet fittings on heater. Do not solder direct.
- D) Flush supply line of all foreign material such as pipe dope, pipe chips, solder, sand, etc. before making up supply connections after working on water piping.

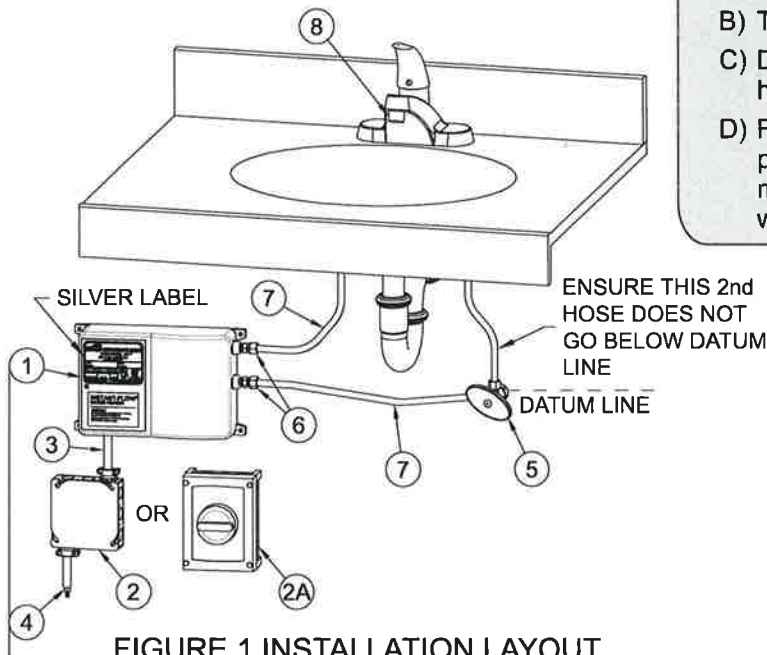


FIGURE 1 INSTALLATION LAYOUT

- ① Chronomite Instant-Flow SR See page 2 for selection
- ② Electrical Junction Supply Box (optional)
- ②A 2095-1 Disconnect Switch (optional)
- ③ Electrical Supply Conduit
- ④ Electrical Supply Wire
- ⑤ Dual Outlet Stop 3/8" Comp Outlet Connections
- ⑥ Fittings (supplied) 3/8" Comp x 1/4" NPT
- ⑦ Faucet Supply Inlet Hoses 3/8" NPS
- ⑧ Flow Control (supplied) Dual Threads 15/16" Male and 55/64" Female

HEATER INSTALLATION:

1. Remove cover off of Water Heater. Attach conduit to the conduit connection punching. Then feed wires. Do not attach wiring.
2. Mount unit horizontally against the wall so the silver label reads correctly (See Figure 1). Use level to ensure unit is level and mount with four screws through the flanges located on each corner using molly anchors or fasteners.
3. Connect plumbing. Use female 1/4" NPT or hose with 3/8" compression at cold water inlet and hot water outlet to 3/8" compression faucet inlet connections (See Figure 1). **DO NOT APPLY HEAT TO THESE FITTINGS.**
4. Run water through the unit to expel all air bubbles. Cycle hot side of faucet 10 times to assist in removing air bubbles. Check for leaks at all fitting joints. If no leaks proceed to electrical installation.

CAUTION: HEATING ELEMENTS MAY BURN OUT IF UNIT IS NOT MOUNTED HORIZONTALLY

ELECTRICAL INSTALLATION:

1. Connect power supply wires appropriately sized and protected by circuit breaker to the input terminals on the heater (hard wired) as shown in the Figure 2 wiring diagram.
2. Refer to Table 1 above on Page 2 for the voltage and amperage of the supply power.
3. Ensure each wire L2/N, G, L1 are connected to the respective terminals. Only connect to rated voltage on nameplate.
4. Ensure water inlet valve to heater is fully open. Do not throttle inlet
5. Turn on circuit breaker. Turn on water flow to exceed activation point listed in chart 2. The unit is almost ready for use. Shut off circuit breaker.
6. Check for leaks at all fitting joints and also inside heater.
7. Install cover. Turn on circuit breaker. Unit is now ready for use.
8. Local plumbing and electrical codes must be followed in this installation of water heater and the accessories.


NOTES:

1. Failure to comply with code requirements voids the warranty.
2. Failure to install faucet flow control as shown on (Figure 3 page 6) may cause unsatisfactory operation of the heater.
3. Do not use SR series as a booster heater. Use CM or M series.

INSTANT-FLOW® SR INSTALLATION (cont.)

! IMPORTANT

The manufacturer of this water heater will not be liable for any damages due to the failure to follow these installation and operation instructions.

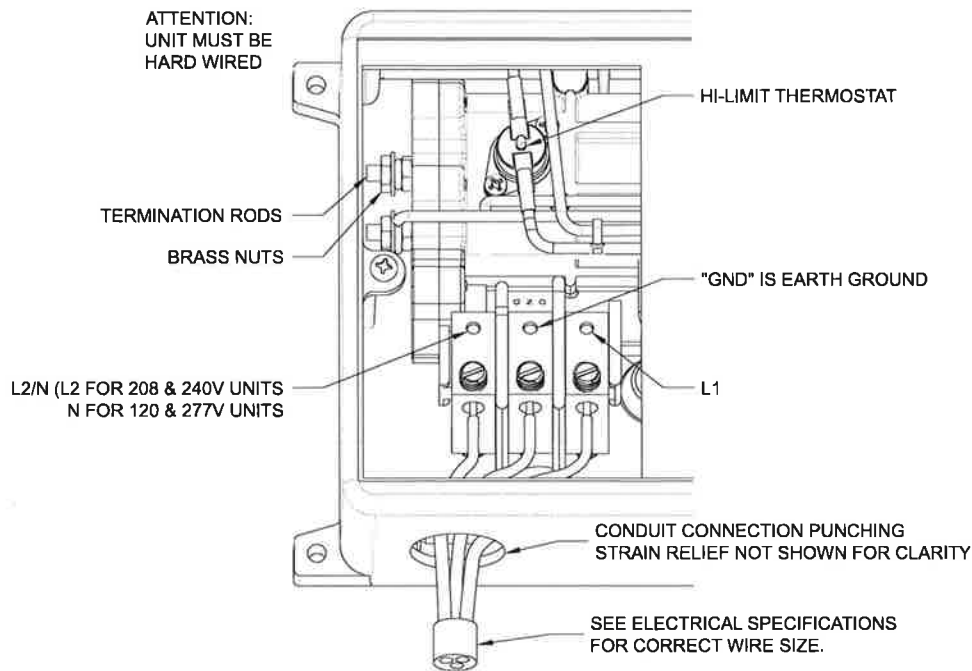

NOTE:
HEATERS ARE SINGLE PHASE. ALL TESTS ARE
MEASURED AT THE OUTPUT OF THE HEATER.

FIGURE 2 WIRING CONNECTION

! NOTICE

Air in the heater may cause the elements to burn out. If the water lines are drained, allowing air into the heater, be sure to follow the following start-up procedure:

START UP PROCEDURE:

1. Turn off electrical supply - open circuit breaker
2. Turn on water supply. Cycle hot side of faucet 10 times to assist in removing air bubbles.
3. Expel all air from lines and heater. Check for leaks at all fittings, joints and at water heater.
4. Turn on electrical power supply - close circuit breaker.

INSTANT-FLOW® SR SPECIFICATIONS (LOW ACTIVATION MODELS)

OPERATION INSTRUCTIONS:

- Turn the hot water fixture to activate the Flow Switch. The Flow Switch activates at 0.35 gallons per minute (GPM) [1.3 LPM] and deactivates at 0.30 gallons per minute (GPM) [1.1 LPM].
- If you increase the flow rate of the water above the KW capacity, the water temperature will become cooler. Cold water can always be mixed just as with a conventional system if using a two handle faucet. Select the appropriate Flow Control.
- Once you decrease the hot water flow rate to 0.30 GPM [1.3 LPM] the unit will deactivate. It is not advisable to operate the heater at 0.30 GPM [1.3 LPM] hot water flow rate.

NOTES:

1. Periodically inspect (4 times a year) the supply lines, connections and heater for any moisture, corrosion or other potential preventable problems.
2. Prior to shutting off water valves for servicing, winterization, etc, always disconnect power from unit 1st.
3. Unit is intended to heat water only, and does not provide a means of cooling. Cold water feed to inlet only.

Outlet Temperature = Inlet Temperature + Temperature increase (See Chart on Page 2)

OPTIONS:

- PA 765 ABS Housing (P)
- Satin Finish Stainless Steel Housing (SS)
- High Polish Finish Stainless Steel (SSP)
- Pressure & Temp. Relief Valve Assembly (TP)
- 1/2" Male NPT (NPT08)
- Disconnect Switch, Rotary 40A - Lockable Nema 4X (2095-1)

FLOW CONTROLS:

You may want to install the supplied Flow Control in your design. This high-quality control makes the water heating system operate more effectively, as well as save water. The supplied GPM [LPM] Flow Control assures that the flow rate will not exceed GPM [LPM], however, less water can always be used. Consumer can mix the cold water as with a conventional system. See Flow Control Models Chart below.

FLOW CONTROL SPECIFICATIONS

MATERIAL: Chrome Plated, Brass Housing.
THREADING: DUAL threads 15/16" Male
55/64" Female


NOTE: Flow Controls are adaptable to other thread configurations. Vandal resistant models are available. Please call factory if adapter or vandal resistant model is needed.

FLOW CONTROL MODELS CHART			
KW	ACCESSORY PACKAGE	≥ 45 PSI	< 45 PSI
1.8 - 3.6	AP-1-P	L412-0.5-NP 0.5 GPM SPRAY	L412-1.0-NP 1.0 GPM SPRAY
4.0 - 5.0	AP-2-P	A412-1.0-NP 1.0 GPM LAMINAR	A412-1.5-NP 1.5 GPM LAMINAR



•Flow controls are adaptable to other thread configurations. Please call factory if adapter is needed.

FIGURE 2
FLOW CONTROL
INSTALLATION
(See Parts List #8)

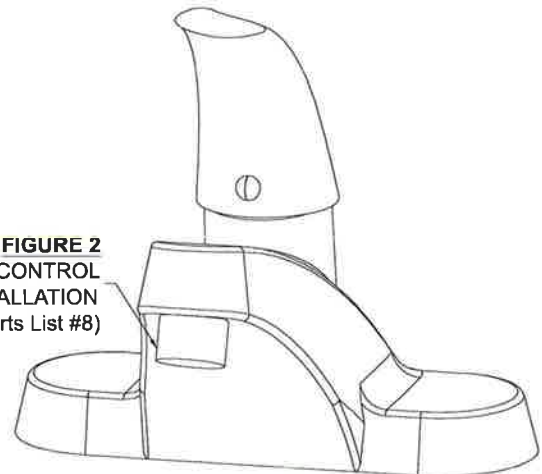

Periodically inspect (4 times a year) the supply lines, connections and heater for any moisture, corrosion or other potential preventable problems.

INSTANT-FLOW® SR TROUBLESHOOTING GUIDE

TROUBLESHOOTING GUIDE

Your Instant-Flow SR water heater has no internal user serviceable parts and should be returned to the factory for repair or replacement. Please contact factory for return authorization. If after following the Installation Instructions, your Instant-Flow SR does not heat water in accordance with this literature, please check the following:

1. **Low Power** – Verify your voltage by using a voltage meter. You should obtain your reading off the two outside terminals located on the heater. Compare the reading against the voltage specified in the Installation Instructions. The center terminal is always the earth ground. The hot and neutral legs, in the case of 110 V heaters, are attached on the two outside terminals.
2. **Low Voltage** – The percentage of reduction in voltage will result in a like reduction in temperature increase.
3. **Check Low Amperage Draw** – Check amperage draw using an Amperage Probe. Please compare your results with the Installation Instructions (Table 1) to determine if the heater is operating correctly.
4. **Length of Pipe** - Length of pipe run will affect the temperature increase. The heater should be mounted no more than 12-18 inches [305mm-457mm] from the point of use.
5. **Check shut off valve.** Check shut-off valve and make sure valve is open 100% to allow full water pressure and flow to the heater.
6. **High-Limit Thermostat** - Shut off power on breaker. Remove cover. Push in reset button on module. Refer to Figure 2 for location. Reinstall cover. Turn on breaker. If problem persists, contact factory.
7. **Heater Element** - Shut off power on circuit breaker. Remove cover. Measure element resistance by using an ohmmeter or multi-meter. Obtain your reading off of termination rods with brass nuts on each heater module. Refer to Figure 2 for location. This reading should be between 6 and 30 ohms for each element.
8. **Check Flow Rate** – Controlling flow rate is essential to insure proper temperature increase. In the case of the low flow rate heater it is mandatory that the flow control be attached to the end of the faucet. Check your flow rate to insure proper operation of the heater. Low Flow Rate Models require 0.35 GPM (1.3 LPM) to activate.
9. **Installation** – Heater must be installed in a horizontal position. The silver label will then be located in the upper left corner as you face the heater.
10. **Water Supply** – Do not throttle water supply to inlet of Instant-Flow SR. Operating conditions shall not exceed specification on page 2.
11. **Freezing** – Instant-Flow SR heaters must be drained and stored if installed in a location subject to freezing. Disconnect the inlet/outlet compression fittings and blow air through one side of the heater to assist draining. Failure to completely remove water from the unit will result in freezing and cracking.
12. **Problems?**- Call our toll-free hotline 800-447-4962 or 626-937-4270

WARNING

- This water heater is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the water heater by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the water heater.
- The water resistivity must not be less than 1100 OHM-CM.
- The water heater must be earth grounded.
- The water heater is not to be installed in locations where freezing can occur.



MAIL ADDRESS

P.O. BOX 3527
CITY OF INDUSTRY, CA 91744 U.S.A.

PHYSICAL ADDRESS

17451 HURLEY STREET
CITY OF INDUSTRY, CA 91744 U.S.A.

TOLL FREE 800-447-4962 • LOCAL 626-937-4270
FAX 626-937-4279 • WEB www.chronomite.com

WARRANTY INFORMATION

Your Instant-Flow SR water heater has been engineered and built to the highest quality standards and is backed by a full, factory warranty. Every Instant-Flow SR water heater is guaranteed to be free from defects in material and workmanship for a period of (1) year from the date of purchase. The above warranty applies to original purchaser if unit is installed per Chronomite Laboratories, Inc.'s Installation Instructions. Chronomite Laboratories, Inc. will repair or exchange parts at the factory at no cost. This warranty is limited to repairing or replacing said products which prove to be defective upon factory inspection, F.O.B. City of Industry, California.

EXCLUSION OF COVERAGE FROM THIS LIMITED WARRANTY:

1. Chronomite is not liable under this limited warranty or otherwise if the water heater has not been installed or maintained in accordance with Chronomite's printed instructions or installed with improper installation materials. In addition, the water heater or any of its component parts have been subject to misuse, neglect, alteration or accident and the water heater has not been installed in accordance with the applicable local plumbing and or building codes and/or regulations.
2. Chronomite is not liable under this warranty if the water heater has not been continuously supplied with potable water or the water inlet temperature is above Chronomite's recommended maximum temperature. In addition, water heater experiences any water pressure or flow interruptions, normal operation inlet water pressure is outside of the published specification (UPC 2009), or exposed to any condition that causes the heater to turn on before the air is purged from the heater also known as "dry fire."
3. Chronomite is not liable if the water heater has been exposed to conditions resulting from floods, earthquakes, winds, fire, freezing, lightning or circumstances beyond Chronomite's control, or has been used for other than the intended purpose.

If violation occurs from the stated exclusions of coverage from this limited warranty or thereafter; owner, and not Chronomite or its agent/representative, is liable for and shall pay for all field charges, labor, water heater, damage or other expenses incurred in the repair or replacement of the water heater.