

Quality People. Building Solutions.

Comfort Systems USA (Arkansas), Inc.
P.O. Box 16620
Little Rock, AR 72231
Phone 501-834-3320
Fax 501-834-5416

Date: 11/9/2023
Return Request: 11/19/2023
Project: UCA Snow – Fine Arts Center
Supplier: Fluid Solutions
Manufacturer: Griswold
Submittal: Hydronic Piping (Valve Packages)
Submittal Number: 23 21 13-02
Drawing # and Installation: Mechanical Drawings

ARCHITECT

H+N Architects
1009 Main Street
Conway, AR 72032
501-327-7525

ENGINEER

Pettit & Pettit
201 E. Markham St. #400
Little Rock, AR 72201
501-374-3731

GENERAL CONTRACTOR

Wagner General Contractors
600 W. Race Ave.
Searcy, AR 72143
501-203-0704

MECHANICAL SUBCONTRACTOR

Comfort Systems USA (Arkansas), Inc.
9924 Landers Rd.
N. Little Rock, AR 72117
501-834-3320

Notes:

Project Name: **Snow Fine Arts HVAC
Upgrades**

Reviewer Name:	Dakota Ellis
Date:	11/10/2023
Submittal #:	18
Company Name:	Wagner General Contractors, Inc.

Status: Reviewed

This review is only for general conformance of the project and general compliance. Contractor is responsible for all dimensions and fabrication to be confirmed and correlated at the job site.

**CSUSA PROJECT NO.
23-2020**

chowell@comfortar.com

IMPORTANT NOTE!

**Please take the time to read this instruction sheet.
Disregarding these guidelines may adversely affect your piping components**


GENERAL INFORMATION 1
 O-RING REPLACEMENT 2
 CLEANING 2
 ALTERNATE FLUIDS 3
 INSTALLATION GUIDELINES 3
 Threaded Valves 3
 ProPress Valves with Smart Connect™ Feature 3
 Sweat Valves 3
 Flanged Valves 4
 Grooved End Valves 4
 Weld End Valves 5
 Actuator Operated Valves 5
 Actuator Wiring Diagrams 6
 Hoses 7
 VERIFYING THE FLOWRATE 9
 Automatic Flow Limiting Valves 9
 Manual Balance Valves (SpeedSet™ and QuickSet®) 10
 Manual Balance Valve Meter Kit 10
 CARTRIDGE REMOVAL 11
 Isolator™R, Isolator™Y, Automizer®, K Valve, PIC-V®, Uni-Flange 11
 Threaded Mini, Combo Valve 11
 Wafer, Grooved End, Flange End 11
 BALL VALVE STEM REMOVAL 12
 Handle Operated Stem 12
 Actuator Operated Stem (Non Direct Mount) 12
 Actuator Operated Stem (Direct Mount) 13
 REPLACING THE SEALS AND O-RINGS 14
 Unimizer® (1/2" - 3") 14
 Automizer/PIC-V 15
 TROUBLE SHOOTING AUTOMATIC FLOW LIMITING VALVES 15
 WARRANTY 16

Griswold Controls assumes no responsibility for damages or injuries resulting from non-compliance with installation instructions or standard good practice when installing, operating, or maintaining the valves, even if not explicitly mentioned in the installation instructions.

Griswold Controls uses many quality control checkpoints during its manufacturing process. Handling during transport, unpacking or installation can alter a product’s performance, including joint connections. If torque is applied to the product during installation, dope will crack and a leak may occur. We rely on you as professional contractors to inspect, install and perform a thorough test during startup to correct any adverse handling or installation conditions that may affect the performance of the product. Thank you for your assistance.

GENERAL INFORMATION

1. Griswold Controls’ valves may contain drain valves and/or combination P/T test valve and manual air vent (CPTA). Both types of accessory components have a straight thread and do not require any pipe dope or tape sealant. Using pipe dope or sealant may cause problems with the seal and may clog the hole in the housing that is used to vent air with the CPTA. Extensions for these components also have a straight thread.

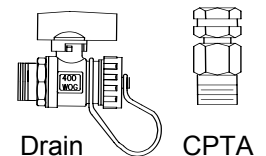

2. **Flow Limiting/Manual Balancing Systems:** Air should be eliminated from the system so the Griswold Controls flow control valves remain full of fluid during operation. To eliminate the air from the system the

Griswold Controls CPTA can be used. To remove the air back out the CPTA half a turn from the housing to vent air using a small wrench. **Do not back the CPTA out all the way when the system is pressurized.** When you begin to see water come out the air hole in the housing, tighten the CPTA. If an extension is used the hole is in the extension piece and the CPTA can be backed out of the extension a half a turn to eliminate the air. A second wrench will be required to hold the extension in place while the CPTA is being rotated. Make sure to install the valve with the air vent hole on the top of the valve. If the CPTA needs to be tightened to prevent water leaking please back the CPTA out 1 full turn and then retighten the CPTA to hand tight and then use a wrench to tighten an additional ¼ turn.

3. **Pressure Independent (PIC-V) Systems:** All PI valves trap air in the regulator section of the valve. If the air is not removed, one of the effects is a valve that may pulsate with a mild or violent shaking force. The normal process of bleeding air from a system will not remove this air because the air is trapped within a chamber. A convenient way to bleed the air is to cycle the valve closed, wait 10-15 seconds, then open it. This exhausts air out of the diaphragm chamber and into the pipe where it can later rise to a high point for extraction. In a building with several valves, it is most convenient to perform this from a central building automation control. We recommend sequentially closing one valve at a time to minimize the disruption to occupants. If the building is not occupied it is acceptable to cycle all the valves at once as long as there is a method in place to keep the system pressure differential to within the valve differential pressure range.
4. Clean the lines upstream of the valve particles larger than 1/16" diameter (welding slag, pipe scale & other contaminants). Upstream installation of a 20 mesh strainer is recommended.
5. Do not use boiler additives, chemicals which are petroleum based or contain mineral oil, hydrocarbons, azole compounds or ethylene glycol acetate. Compounds which can be used, with minimum 50% water dilution, are diethylene glycol, ethylene glycol, and propylene glycol. If installing these valves in an addition or retrofitting an existing building, do not assume that the fluid in the existing piping meets these criteria.
6. Flow control valves may be inserted in the pipe line either horizontally or vertically. Straight sections of piping upstream and downstream of the valves are not necessary for proper operation. Reducing bushings or flanges may be attached directly to flow control valves. Standard adapters are adequate for installation of flow control valves. Please follow good piping practices, system design, and maintenance as outlined in ASHRAE published standards. For example do not pipe valves after two consecutive elbows.
7. All styles of flow control valves are marked to show the direction of flow. THE FLOW ARROW MUST POINT IN THE DIRECTION OF FLOW FOR PROPER OPERATION.
8. Do not install valves at pump discharge. Minimum of 8 pipe diameters (or 8 feet) is required before the valve.

O-RING REPLACEMENT

Assembly must be made with care to protect the O-ring from damage during installation. Some of the more important features to ensure this are:

- Cleanliness is important for proper seal action and long O-ring life. Foreign particles like dirt, metal chips, etc. in the O-ring groove may cause leakage and can damage the O-ring thus reducing its life.
- Using silicon oil or grease lubricant at assembly helps protect the O-ring from damage by abrasion, pinching, or cutting. Do not use aerosol products or petroleum based lubricants. The lubricant should not excessively soften or harden.
- Depending on the application, the O-ring should be placed in the groove or stretched over the threads. O-rings should not be twisted, forced or rolled over sharp corners, threads, or other sharp edges.
- Pipe dope or sealant should never be used on o-rings or in the o-ring groove even if the o-ring is used to seal brass components. Using sealant on the o-ring will shorten the life of the o-ring.

CLEANING

If the system experiences large amounts of pipe scale due to poor water conditions, as sometimes found in older or retrofit systems, provisions should be made to keep the system clean. Proper water treatment is also recommended by the use of a Griswold Separator. If a Griswold Separator is not used for system cleaning, the flow control valves should be inspected annually.

Depending on the system, strainers should be cleaned annually. All Griswold valves with strainers can be blown down with a drain valve. If the strainer is very dirty then the cap can be removed for thorough cleaning of the strainer element. Please follow instructions for lubricating the cap o-ring when reinstalling the strainer and cap.

ALTERNATE FLUIDS

The operation of the Griswold flow control valve is dependent on the characteristics of the flowing medium. It is therefore important that when ordering a valve, complete fluid specifications are included (if the fluid is anything other than 100% water, example: If the fluid is 50/50 ethylene glycol and water).

1. Specific Gravity

Specific gravity is the most important attribute of a liquid used in a Flow Control Valve. The specific gravities of fluids at temperatures other than 60° F are referenced to water at 60° F. Correction will need to be made for any fluid with a specific gravity other than 1.

The flow control valves are available in specific flow rate increments. When the flow rate is corrected for specific gravity, it may fall in-between two available flow rates. We will supply a valve that is closest to the theoretically determined flow unless otherwise requested.

2. Viscosity & Temperature

The viscosity of a fluid is mainly dependent on the fluid temperature. For some fluids such as water, the viscosity change with temperature is immaterial. In other fluids the viscosity change with temperature is quite noticeable. Both fluid viscosity and operating temperature must be specified.

INSTALLATION GUIDELINES

Threaded Valves

This package may contain factory sealed and tightened threaded connections. Please check components to ensure that transportation and unpacking did not crack the pipe dope or loosen connections. All union tail pieces and sweat adapters are hand-tightened only to assist your final field connection.

Standard threaded flow control valves are tapped with NPT (BSP threads optional). Seal valves with pipe sealant. Please be advised that using tape on a threaded connection can lead to over tightening and cracks in FNPT components. Torque should not exceed 75 foot/pounds.

Use two wrenches. Secure one wrench on the hex pads nearest the joint being tightened while using the second wrench to screw in the threaded end, thereby preventing the retainer-to-body seal from being broken. When all the pipe connections have been made, proceed with electrical connections if applicable.

ProPress Valves with Smart Connect™ Feature

Please refer to instructions supplied by www.viega.com for installation of all ProPress parts.

Sweat Valves

WARNING! Failure to follow these installation guidelines can lead to loss of warranty.

Griswold products with sweat connections are designed to be soft soldered. The use of a heat sink is required because excessive heat can harm internal polymer materials such as O-rings, P/T seals, and Teflon seals. If the product contains a ball valve it should be soldered in the closed position.

To insure perfect, leak-free joints the following instructions should be followed:

1. Make sure the copper tube ends are cut square, and all burrs and rough edges are removed.
2. Clean tubing ends and the inside of the valve socket with a wire brush and sandpaper suitable for copper tubing and bronze valves. The inside of the valve ends should be made bright with a wire brush and the tube ends made bright with sand or emery paper.
3. Carefully coat the inside of the valve sockets and outside of the tubing with non-corrosive solder flux. In extremely cold weather, warm the valves to room temperature before applying flux.

Replaces form F-709N, F-2049, F-2425, F-4030, F-4045, F-4047, F-4273

Page 3

8/11

F-709X

This specification © 2011 Griswold Controls

2803 Barranca Parkway, Irvine, CA 92606
(949) 559-6000 Fax (949) 559-6088
www.GriswoldControls.com



4. After coating the valve sockets and copper tubing with flux, insert the tube ends into the valves socket until it seats against the shoulder. Rotate the tubing a few times to insure proper flux coverage.
5. Use a heat sink (wet towel) around the valve to protect o-rings from heat.
6. Ball valves should be soldered in the closed position and the valves allowed to cool before opening.
7. Using a soldering torch, heat the outside of the valve socket until it is hot enough to melt the solder. The correct temperature can be determined by the touching of the valve socket with the solder.
8. Once the valve is heated enough to accept the solder, apply the flame to the bottom of the valve socket until all the solder is absorbed, remove the flame and any excess solder. Let the valve cool before operating.

WARNING! DO NOT, under any circumstances, solder the downstream end of the valve while there is upstream pressure, or with fluid trapped in the cavity around the ball. Thermal expansion of this fluid can produce excessive internal pressure that could damage seat or body materials. Always drain the system and cycle the valve two to three times after draining is complete before applying heat. Steam created from trapped fluid in cavity around ball could cause the valve to BURST if it is heated excessively.

When soldering valves with union tailpieces remove the union nut and slide over the pipe. Then sweat the tailpiece to the pipe. If there are sweat ends on both sides, repeat the same steps for each end. Next, install the valve body and tighten the union nut(s). This will prevent damage to the O-rings.

Flanged Valves

Gray Iron (Class 150) valves (through 20") (ASTM A48(30)) are mechanically compatible with standard ANSI 150lb. flat-faced or raised-face steel flanges, or with 125lb. cast iron flanges. 30" valves are mechanically compatible with 150lb. flanges per MSS SP-44.

Ductile Iron (Class 300) valves (through 20") (ASTM A-45-70, Class 60-40-18) are mechanically compatible with standard ANSI 300lb. flat-faced or raised-faced steel flanges or with 250lb. cast iron flanges. 30" valves are mechanically compatible with 300lb. flanges per MSS SP-44.

Appropriate gasketing material must be used when installing flange-mounted flow control valves (for example, 1/16" thick ring type filled asbestos gaskets). (Not supplied by Griswold).

If the flow control valve is furnished with valve kits or direct mounted meter kits, make sure that clearance is left around the valve for these items.

Before tightening any bolts on butterfly type valves, turn the disk of the butterfly to full open position. Center the valve and hand tighten all bolts. Slowly close the disk to check for adequate disk clearance. When properly aligned, return the disk to full open position and evenly cross-tighten all bolts. Make sure the disk opens and closes correctly.

Grooved End Valves

1. Grease the pipe ends, valve ends and rubber gasket lips with cup grease, graphite paste or similar grease.
2. Slip the rubber gasket over the pipe end of each joint. Note: in 10" and larger valve connections, turn the gasket out and slip it over the pipe ends. Roll the gasket back after bringing the valve into position.
3. Position the grooved end valve between the pipe ends and slide the gasket back into central spanning position. Smear grease on the outside of the gasket.
4. Put housing clamps over gasket – insert bolts and nuts.
5. Tighten nuts evenly, using socket or other wrench. (Note: best speed of assembly is obtained with brace or T-Handle wrenches.) Tighten so that housing clamps come together evenly. This avoids gasket pinching. When housing clamps meet metal to metal, further tightening of bolts is not necessary or desirable.
6. Pre-assemble large diameter multi-segment housing clamps loosely, and install them as half-housings. Take up evenly from top to bottom on alternate bolts.

Weld End Valves

1. Clean the end of the valve and pipe where the weld will be made. Make up the assembly butting the connections together.
2. Tack weld the assembly together and observe fit. **WARNING: If valve contains a butterfly valve do not finish welding the flanges to the pipe with the butterfly valve bolted between the flanges. This will result in serious heat damage to the rubber gaskets and valve seat.**
3. Remove the bolting and flange from between the flanges. Finish welding the piping together and allow flanges to cool completely before reinstalling and bolting the butterfly valve in its original position.



Actuator Operated Valves

Griswold Controls actuators are factory aligned with valve position and end stop set when part of a pre-assembled valve and will rotate 90°. Field mounting requires the installer following good industry practice, to align actuator settings with valve positions and set the end stops before operation.


Non Failsafe models: Clockwise/Counterclockwise rotation can be changed via a field accessible switch on the actuator housing. See actuator cover for direction.

Failsafe models: Turn actuator upside down to change rotation.

1. To prevent moisture from collecting in the actuator motor casing, install the actuated ball valve so that the actuator is above the valve. Never drill into the motor casing!
2. ½” – 3”: Ball rotation is clockwise for “OFF” and counterclockwise for “ON”.
4”-6”: Ball rotation is clockwise for “ON” and counterclockwise for “OFF”.
3. Assemble 3-way valves in either diverting or mixing configuration.

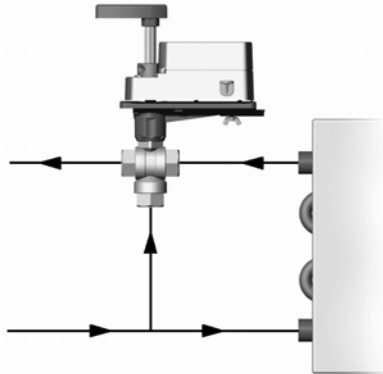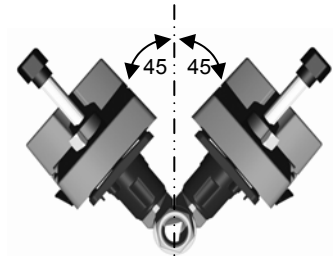

MIXING – fluid enters through two inlets (A, B) and exits through one outlet (AB)

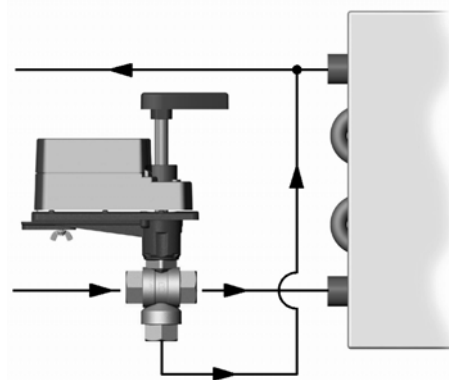

DIVERTING – fluid enters through one inlet (AB) and exits through two outlet (A, B)


4. Remove the cover from the motor. Safeguard the screw. The terminal block is now easily accessible. Wire the terminal block according to the appropriate diagram for your actuator. Position the reverse/direct acting switch for the operational direction on all units and the two jumpers or dip switch for the fail direction on electronic failsafe models.
5. Replace the cover and secure.
6. Once both the mechanical and electrical installations have been completed, cycle the actuator to verify that the direction of rotation suits the control sequence. If not, in a 3-wire motor, reverse the two digital outputs. In the case of an analog control signal, reposition the reverse/direct acting switch.

7. If the unit is a failsafe model, make certain that upon removal of power, the fail position coincides with the sequence of control. If not, reposition the actuator to fail in the correct direction.


Actuator Wiring Diagrams

	GDE131.1P	GDE161.1P	GMA121.1P	GMA131.1P	GMA161.1P
Control Signal: On/Off			•		
Control Signal: 3 Point	•			•	
Control Signal: Modulating 0–10 VDC		•			•
Speed: 90 sec	•	•	•	•	•
Fail Safe (Spring Return)			•	•	•
Operating Power	3.3 VA	3.3 VA	5 VA	5 VA	5 VA
Wiring Diagram	<p>Power Supply Where 6 is CW and 7 is CCW</p>				


MEP-4001

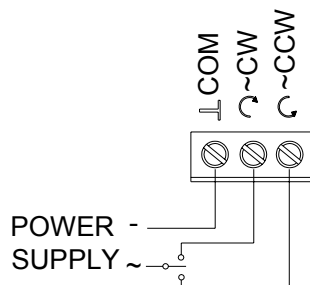


MEP-4002

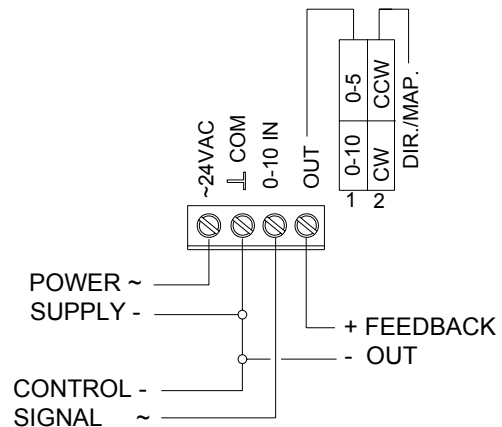

MEP-5372

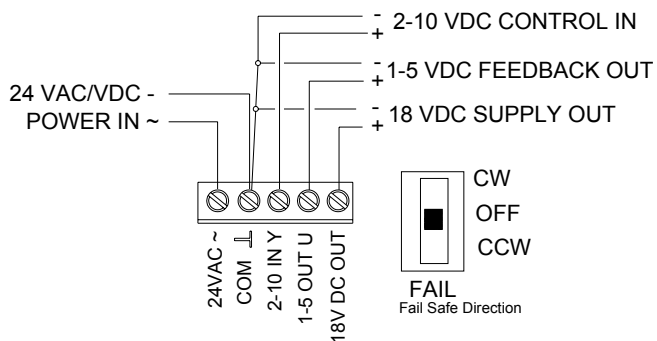

MEP-5373

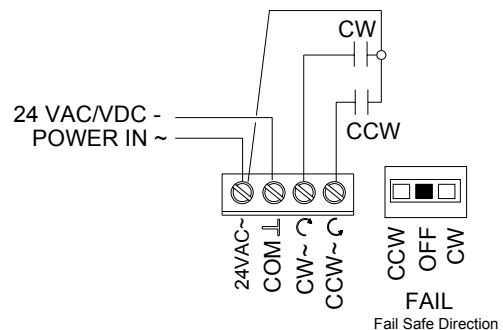

Hoses

WARNING! Ignoring these installation guidelines can lead to catastrophic hose failure.

Proper hose installation is essential for satisfactory performance. If hose length is excessive, the appearance of the installation will be unsatisfactory and unnecessary cost of equipment will be involved. If hose assemblies are too short to permit adequate flexing and changes in length due to expansion or contraction, hose service life will be reduced. Hoses can shrink in length by as much as 1 3/4" when under pressure, making proper length selection critical to service life.

HOW TO DETERMINE HOSE LENGTH

1. Dimension A (Fig. 1) should be at least double the external diameter (O.D). Example: If the O.D. of the hose is 1 1/8", dimension A should be 2 1/4" in length.
2. The radius of curvature, R (Fig. 1), should be at least four times the O.D. of the hose. Example: If the O.D. of the hose is 1 1/8", radius R should be 4 1/2".
3. Hose length should be long enough to not pinch the hose at the ferrule or end fitting.



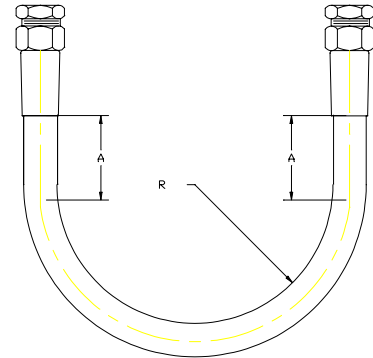


Fig. 1

<u>I.D.</u>	<u>O.D.</u>	<u>A</u>	<u>R</u>
1/2"	3/4"	1 1/2"	3"
3/4"	1 1/8"	2 1/4"	4 1/2"
1"	1 3/8"	2 3/4"	6 1/2"
1 1/4"	1 3/4"	3 1/2"	7"
1 1/2"	2 1/8"	4 1/2"	8 1/2"

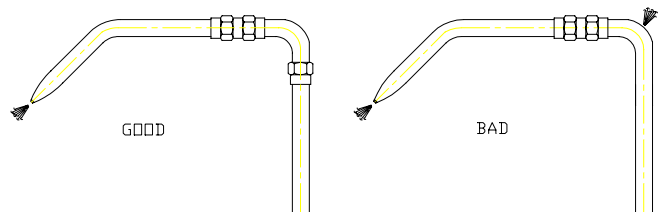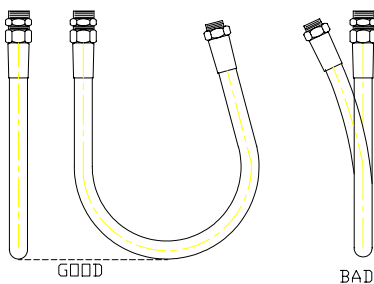


Torque (twisting) is highly destructive. This can occur while installing the hose. The bend in a hose should always be in one plane. Looped hose should have both ends on the same plane or centerline.


Sharp bends can reduce flow and will reduce service life.




Sharp bends near the ferrule with apply torque (twisting) cause reduced service life.

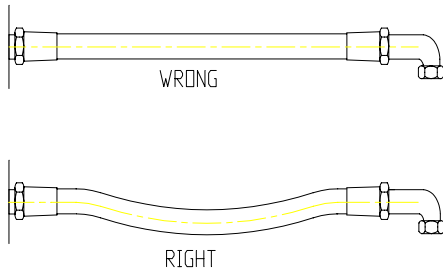


Under pressure, a hose will change in length. Always provide some slack in the hose to allow for shrinkage or expansion. (However excessive slack will cause poor appearance.)

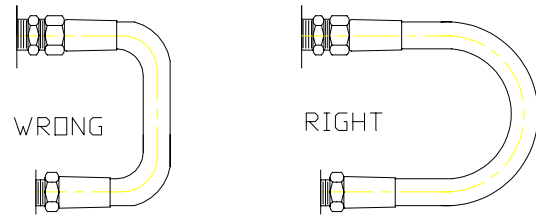


To avoid hose collapse and restricted flow, keep the hose and radius as large as possible. Use the table on page 1.

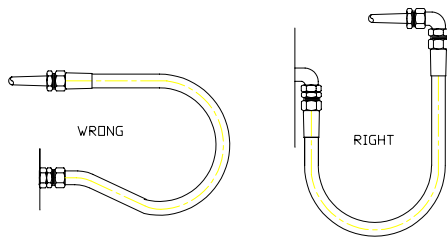


When radius is below the the required minimum use an angle adapter to avoid sharp bends.

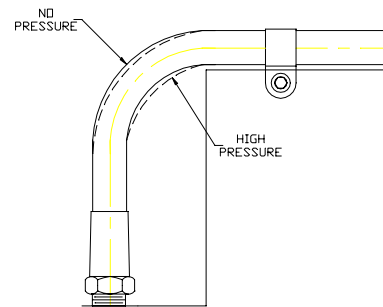


To allow for length changes when hose is pressurised, do not clamp at bends so that the radius will absorb the changes.

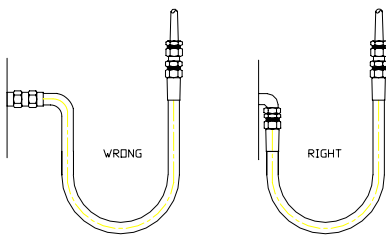

Use proper angle adapter to avoid sharp twists or bends in the hose.

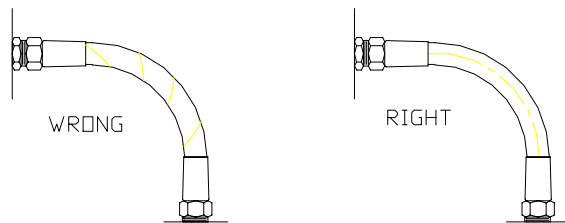

When installing a hose, make sure it is not twisted. Pressure applied to a twisted hose can result in hose failure or loosening of connectors.

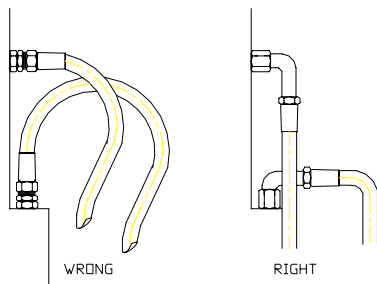

Elbows and adapters should be used to relieve strain on the assembly, and to provide neater installations and easier maintenance.


VERIFYING THE FLOWRATE

Automatic Flow Limiting Valves

All Griswold Controls Automatic Flow Limiting valves contain a flow limiting cartridge that is preset at the factory. Therefore there is no need to set the valves in the field. If commissioning is required a pressure drop across the valve can be taken to verify the valve is within the pressure differential required to limit flow at +/-5%.

Below and above this PSID control range, Griswold Controls valves work as fixed orifice-type valves and allow flow to vary.

1. Connect your meter kit to the test plugs located on the valve body.
2. Determine the pressure differential (PSID or feet of head) across the flow limiting cartridge by subtracting the downstream pressure from the upstream pressure.
3. Determine which PSID control range the valve is set for. Nine ranges are available. (Note: the fourth number of the valve model denotes the control range. #3522 means the valve has a 2-32 cartridge.)
4. If the PSID reading falls within the valves pressure differential range, then the valve is limiting the flow rate with ±5% accuracy. The minimum pressure differential required for flow limiting is provided in the table.
5. If the actual PSID reading lies outside the valve's PSID operating range (either above or below) then calculate how much the flow rate has varied from the specified rate using the following equations and table.

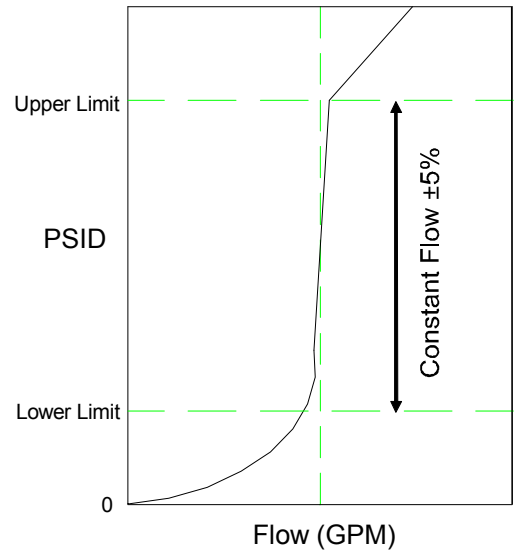

$$Q = C_f Q_o \sqrt{\Delta P}$$

Where:

Q = Flow rate through valve (GPM)

C_f = Flow coefficient (See table)

Q_o = Specified (factory set) flow rate of valve (GPM)

ΔP = Pressure differential across the valve (PSID)

Example: If the pressure differential PSID reading across your valve is 3 PSID, the valve is pre-set at 50 GPM for an operating control range of 4-57 PSID, what is the flow through the valve?

$$Q = C_f Q_o \sqrt{\Delta P} = .41 * 50 * \sqrt{3} = \text{Therefore } Q = 35.5 \text{ GPM}$$

Model # Code	Nominal PSID Control Range	Minimum Pressure Differential Required for Flow Limiting		Maximum Pressure Differential Allowed for Flow Limiting		C _f	
		PSID	Head Loss in Feet	PSID	Head Loss in Feet	Below Control Range	Above Control Range
1	1-14	1.5	3.5	14	32.2	0.82	.27
1	1-20	1.3	3.0	20	46.0	0.72	.22
1	4-20	4.0	9.2	20	46.0	0.72	.22
2	2-32	3.2	7.4	32	73.6	0.58	.18
2	8-32	8.0	18.4	32	73.6	0.58	.18
3	3-18	2.5	5.8	18	41.4	0.63	.24
4	4-57	5.8	13.4	57	131.2	0.41	.13
5	5-32	5.0	11.5	32	73.6	0.45	.18
8	8-128	13.0	30.0	128	294.5	0.29	.09

Manual Balance Valves (SpeedSet™ and QuickSet®)

1. SpeedSet and QuickSet valve(s) are ordered by line size. Flow rates are set by adjusting the ball valve or butterfly valve until the differential pressure reading across the valve corresponds to the required flow (GPM). Use the flow graphs (1/2"–2": Form #F-4040; 2-1/2"–18": Form #F-4439)
2. Once the Valve(s) has been installed and the system has been filled and purged, each valve loop must be set to the correct flow setting. Multiple passes are generally required to get the system in balance as the adjustment of each new valve affects the pressure drop (and flow) through the previously adjusted valves.
3. A meter kit can be purchased from Griswold Controls to take the differential pressure readings. The kit consists of either a 0-100" or 0-300" water column test gauge with the appropriate control valves, hoses and fittings.
4. When all valves in the system have been correctly adjusted, the locking Memory Stop should be set to prevent changes in flow rate. To set the memory stop, loosen the screw on the handle and re-tighten the screw after setting handle to correct position.
5. The memory stop will allow the valve to be used for isolation (full closed) and then be reopened to the preset flow position.

Manual Balance Valve Meter Kit

The meter kit is a portable device designed for field measuring or monitoring of differential pressure across a flow element, such as a venturi, for balancing heating and cooling systems.

The 6" test gauge is mounted in a lightweight, extremely rugged plastic case with the appropriate control valves, fittings and 10' hoses.

The 6" test gauge is scaled for 0-100" or 0-300" H₂O.

Connect and use the meter kit with the SpeedSet™ or QuickSet® manual balance valves as follows:

1. Open the balance control valve at the bottom of the meter kit face.
2. Connect the High pressure hose to a port on the SpeedSet or to the QuickSet port marked H. (H is the port pointing in the same direction as the handle when the valve is closed.)
3. Connect the Low pressure hose to a port on the SpeedSet or to the QuickSet port marked L.
4. The gauge should show a pressure reading.
5. Open and close the Bleed valves to release any air trapped in the hoses and gauge assembly.
6. Close the balance control valve on the meter kit face.
7. The meter is now ready to take accurate differential pressure readings.

Setting the SpeedSet or QuickSet

1. Select the correct pressure drop for the desired flow rate for the valve using the flow table.
2. With the system pressure on, and the valve handle in the full open position, take a reading of the flow across the venturi (valve).
3. If a reading of 0 (zero) is present, there may be other isolation or control valves in the system loop that are closed and will need to be opened to allow flow in this portion of the system.
4. If a reading other than 0 (zero) is present, use the valve handle to adjust the flow to the correct pressure reading for the coil unit. Closing the handle will decrease to flow.
5. Repeat this adjustment for all valves in the system, taking three passes to insure accuracy.
6. Use the adjustable Memory Stop to set the opening limit of the valve to the corrected setting. The Memory stop will allow the valve to be used (closed) as an isolation valve and then reopened to the pre-set flow rate without the need for reconnection of the meter kit.

CARTRIDGE REMOVAL***Isolator™R, Isolator™Y, Automizer®, K Valve, PIC-V®, Uni-Flange***

Cartridge removal in these valves can be accomplished without removing the valve from the line. Isolate the system, relieve pressure and drain water. Carefully remove the cap and pull the cartridge(s) out with your fingers. When refitting a cartridge, make sure the O-ring or gasket on the cartridge and O-ring on the cap are in place.

Threaded Mini, Combo Valve

Cartridge removal in these valves can be accomplished after the valve housing is removed from the line.

Tools Required

No tools are required for 1/2" & 3/4" FCV's. Use 1/2" SCH 40 PVC x 5" long with bolt head to remove the cartridge from 1", 1-1/4", and 1-1/2" FCV models.

Use 1" SCH 40 PVC x 5-1/2" long with aluminum head to insert the 1-1/4" cartridge in the 1", 1-1/4" & 1-1/2" FCV's.

Removing Cartridge

1. Isolate the system, relieve pressure and drain water. Remove the FCV housing from the system.
2. With a screwdriver, remove the clip ring from inside the housing (around cartridge at the base of cup, up-stream side).
3. For 1/2" & 3/4" FCV only - Cartridge is slip fit with an O-ring seal. Do not use pliers on cup (damage may result). For 1" to 1-1/2" housing, insert the tool completely inside the cartridge and tap it out with a hammer. The tool should rest on the inside of the cup with the orifice openings to prevent damage to the spring.

Inserting the Cartridge

1. On 1/2" & 3/4", reverse procedure used in removal.
2. For 1" to 1-1/2" housing, place the cartridge in the FCV housing and then place the housing on a solid surface. Use hammer to tap down the cartridge into the housing seat (approximately 3/4" travel).
3. Reinstall, or replace the clip ring in the housing grooves and reassemble the end pieces and O-rings.

Wafer, Grooved End, Flange End

Cartridge removal in these valves can be accomplished after the valve housing is removed from the line.

Removing Cartridge

1. Isolate the system, relieve pressure and drain water. Remove the FCV housing from the system.
2. With a screwdriver, remove the screws that hold the cartridge(s) in place.
3. Remove the cartridge(s) from the housing.

Inserting the Cartridge


1. Reverse procedure used in removal.

BALL VALVE STEM REMOVAL

Handle Operated Stem

This procedure applies to all handle operated valves. Please reference the “Actuator Operated Stem” section below for instruction on actuated stems.


1. Isolate the system by closing the ball valves on the supply and return side.
2. Relieve excess pressure from the isolated portion of the system. (Possible ways include opening an airvent or drain valve.)
3. Remove the handle screw, memory stop (if installed), and handle.
4. Remove packing nut.
5. Use the handle to remove stem. Replace handle and handle screw, then pull out old stem assembly.
6. If the lower Teflon wedge is stuck, remove it with the wedge removal tool. Caution: Avoid scratching the inside of the valve!
7. Carefully remove any fouling or corrosion from the inside of the valve’s stem hole.
8. Re-attach handle and new handle screw to the new stem assembly.
9. Insert the new stem assembly into the valve by holding onto the handle. The stem, o-ring and Teflon wedges should be covered in protective grease. We recommend DOW-111. (Be sure to line up the stem key with the ball slot.)
10. Remove the handle & handle screw, then replace the packing nut. (Do not use thread sealant on packing nut or handle screw.) Packing nut requires the following torque: ½” – 1”: 200in-lbs; 1”L – 1½”: 250in-lbs; 1½”L – 3”: 300in-lbs
11. Replace the handle, memory stop (if applicable), & new handle screw.

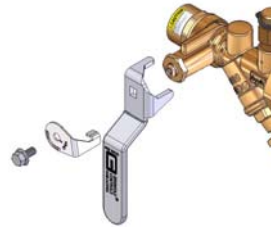


Step 3




Step 4

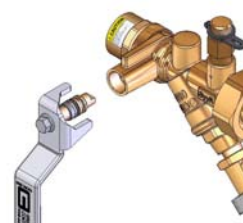

Step 5

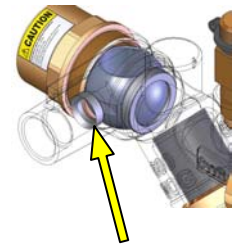

Step 6

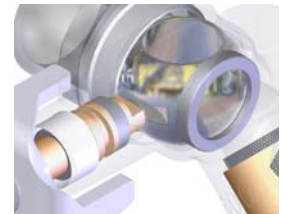

Actuator Operated Stem (Non Direct Mount)

This procedure applies to all actuator operated valves.

1. Isolate the system by closing the isolation ball valves on the supply and return side. Rotate actuator operated valve to closed.
2. Relieve excess pressure from the isolated portion of the system. (Possible ways include opening an airvent or drain valve.)
3. Snap off handle from actuator shaft.
4. Loosen wing nut at the back of the mounting plate and remove metal retaining clip.
5. Remove actuator from mounting plate.
6. Remove shaft cover, thermal break and shaft from valve.
7. Remove the screws and mounting plate.





Step 6



Step 7

8. Carefully remove the yellow stem retainer plate and the stem.
9. If the lower Teflon wedge is stuck remove it with the wedge removal tool. Caution: Avoid scratching the inside of the valve!
10. Carefully remove any fouling or corrosion from the inside of the valve's stem hole.
11. Align the arrow on the valve with the short leg of "T" symbol on new stem assembly. Note: "T" symbol will vary.
12. Insert the new stem assembly. The stem, o-ring and Teflon wedges should be covered in protective grease. We recommend DOW-111.
13. Be sure to line up the stem key with the ball slot.
14. Fasten the new yellow stem retainer plate to the valve using the new countersunk screws. Then fasten the mounting plate to the valve.
15. Slide the sub shaft over the stem with the tab oriented as shown.
16. Replace the thermal break, shaft, & shaft cover. If shaft has come loose from thermal break, push firmly on end of shaft until pin in shaft snaps into thermal break.
17. Replace actuator & secure it to shaft & mounting plate. Snap handle onto top of shaft.

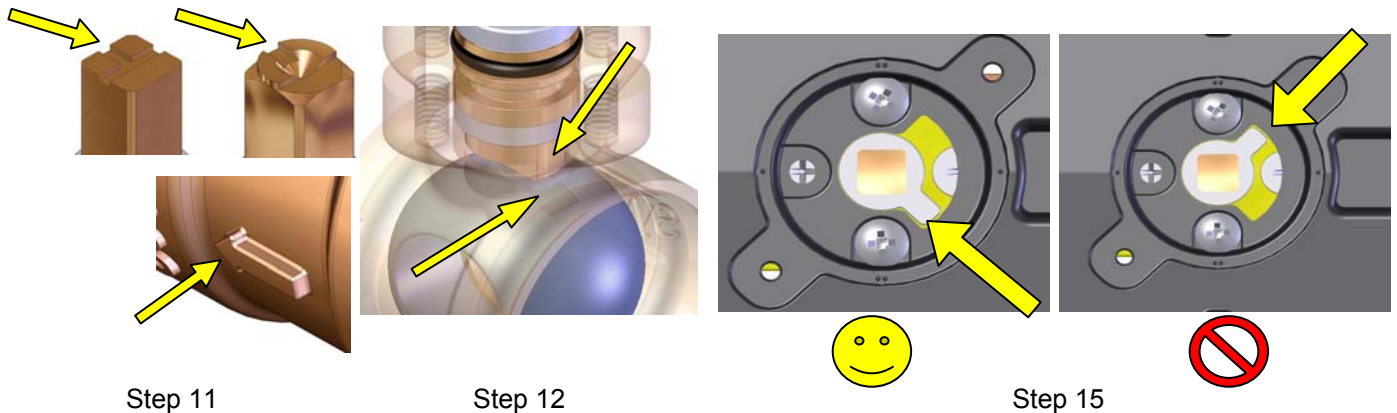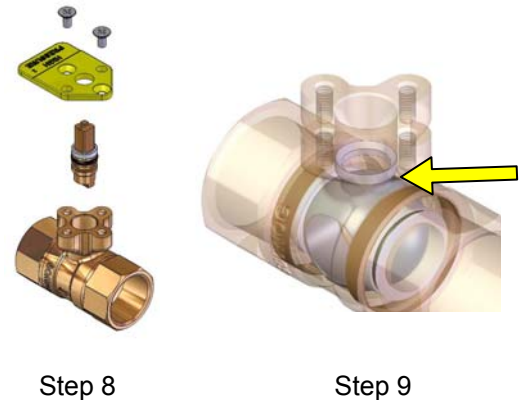

18. Once both the mechanical and electrical installations have been completed, cycle the actuator to verify that the direction of rotation suits the control sequence. If not, in a 3-wire motor, reverse the two digital outputs. In the case of an analog control signal, reposition the reverse/direct acting switch.
19. If the unit is a failsafe model, make certain that upon removal of power, the fail position coincides with the sequence of control. If not, reposition the actuator to fail in the correct direction.

Actuator Operated Stem (Direct Mount)

This procedure applies to all actuator operated valves without a mounting kit.

1. Isolate the system by closing the isolation ball valves on the supply and return side. Rotate actuator operated valve to closed.
2. Relieve excess pressure from the isolated portion of the system. (Possible ways include opening an airvent or drain valve.)
3. Remove actuator from valve.
4. Follow steps 8 through 10 above.
5. Attach new stem retainer plate to new stem assembly. Align slot in stem with knob on stem retainer plate.

6. Fasten the new stem assembly & new retaining plate to valve using new countersunk screws. Be sure to line up the stem key with the ball slot.
7. Replace actuator & secure it to stem.
8. Once both the mechanical and electrical installations have been completed, cycle the actuator to verify that the direction of rotation suits the control sequence. If not, in a 3-wire motor, reverse the two digital outputs. In the case of an analog control signal, reposition the reverse/direct acting switch.
9. If the unit is a failsafe model, make certain that upon removal of power, the fail position coincides with the sequence of control. If not, reposition the actuator to fail in the correct direction.


REPLACING THE SEALS AND O-RINGS

In the event that the valve begins to leak through even when in a fully closed position, the ball seals and seal o-rings can be replaced.

Unimizer® (1/2" - 3")

Due to the expense involved it is suggested that only valves greater than 1-1/4" be repaired by the following procedure and valves smaller than this size be replaced.

1. Remove the valve from service.
2. Depress the actuator's clutch and rotate the handle such that the valve is in its fully closed position.
3. Remove handle from actuator shaft.
4. Loosen the actuator shaft mounting screw and rear wing nut. Separate the actuator from the valve assembly. Remove the two mounting screws. Safeguard the screws.
5. Lift off shaft and plastic mounting pieces.
6. Remove the fixed end by turning counterclockwise. Because LOCTITE HYDRAULIC SEALANT was used in the manufacturing process, a small amount of heat may be applied with a propane torch to soften the sealant in order to facilitate removal of the fixed end without damage to the valve. The seal will come out when the fixed end is removed. Insert a finger into the opening to dislodge the ball and carefully remove.
7. Reassemble the valve by reversing these procedures and using LOCTITE or an equivalent sealant on the retainer threads. Torque the fixed end to the required torque below. ALL O-RINGS MUST BE LUBRICATED TO ENSURE LONG LIFE!
8. Place motor and linkage assembly on the repaired valve and secure with the screws. Apply power and test the actuated valve both with and without the medium before returning the valve to service.
9. Once both the mechanical and electrical installations have been completed, cycle the actuator to verify that the direction of rotation suits the control sequence. If not, in a 3-wire motor, reverse the two digital outputs. In the case of an analog control signal, reposition the reverse/direct acting switch.
10. If the unit is a failsafe model, make certain that upon removal of power, the fail position coincides with the sequence of control. If not, reposition the actuator to fail in the correct direction.

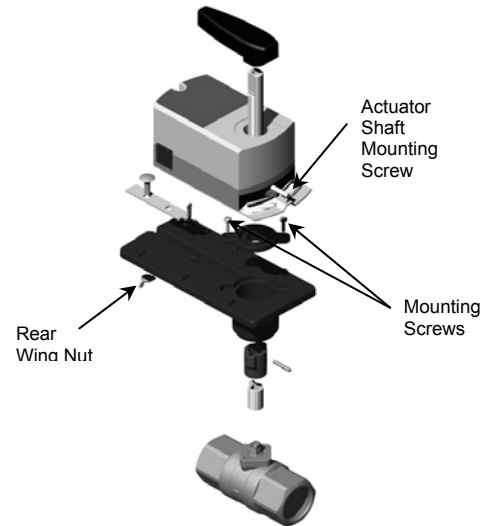

Valve Size	Required Torque (foot-lbs)
1/2"	75
3/4"	95
1"	130
1-1/4"	145
1-1/2"	150
2" - 3"	330

Automizer/PIC-V

1. Follow Unimizer steps 1 through 5.
2. Remove the union end by turning counterclockwise. Replace union O-ring if necessary.
3. Remove internal retainer. The seal and ball will come out when the retainer is removed.
4. Remove and then discard the old end seals and O-ring.
5. Reassemble the valve by reversing these procedures and using LOCTITE or an equivalent sealant on the retainer threads. ALL O-RINGS MUST BE LUBRICATED TO ENSURE LONG LIFE!
6. Place motor and linkage assembly on the repaired valve and secure with the screws. Apply power and test the actuated valve both with and without the medium before returning the valve to service.

TROUBLE SHOOTING AUTOMATIC FLOW LIMITING VALVES

Selection of the correct valve control range is probably the most common field problem. This can be corrected by reading our "Design Guide" brochure (F-4367).

Refer to the following table to identify the type of problem and the solution.

CONDITION	PROBABLE CAUSE	SOLUTION
Low Flow	Pump not sized correctly.	Change pump impeller or go to larger pump.
	System valve partially closed.	Open all system valves.
	Strainer clogged.	Clean strainer.
	Cartridges clogged (no strainer).	Remove and clean cartridges. Install a Griswold Separator.
	Installed in wrong location.	Check prints for correct location.
	System pressure too low.	Check delta P across valve. Change cartridge to appropriate spring range if delta P reads above or below specified range.
High Flow	Installed equipment different from original design.	Check original submittals with "as built".
	Pump not sized correctly.	Change pump impeller or go to smaller pump.
	System pressure too high.	Check delta P across valve. Change to appropriate spring range if delta P reads above or below specified range.
	Installed in wrong location.	Check prints for correct location.
	Installed backwards.	Check direction of arrow on housing indicating direction of flow.
Pipe Vibration/ Surge Noise	Installed equipment different from original design.	Check original submittals with "as built".
	Cartridge has wrong spring range for system pressure.	Check delta P across valve. Change to appropriate spring range if delta P reads above or below specified range.
	Two flow controls installed in series.	Remove one flow control from line.
	System valve (2-way or 3-way) opening and closing incorrectly.	Check valve operation.
	Air in lines.	Bleed off air. (See General Information section for details.)
No pressure drop across flow controls	Pump cavitation.	Check pump operation.
	Installed backwards.	Check direction of arrow on housing indicating direction of flow.
	Pump cavitation.	Check pump operation.
	System not running.	Start pump.
	Control valve is closed.	Open valve.

WARRANTY

Griswold Controls agrees to repair or replace, at Griswold Controls' option, any Product found to be defective in workmanship or material during the warranty period. Griswold Controls Limited Warranty does not include labor or additional materials to repair or replace defective Product. Claims under this warranty will only be honored if written notice is given to Griswold Controls immediately upon discovery of the defect and within the specified warranty period from the date of shipment. A Product is not defective unless it fails to perform according to Griswold Controls' written specifications, but in the event Griswold Controls has not drafted or adopted written specifications for a particular Product, a Product will be defective if it fails to perform as would be expected of the same or similar Product in the industry. Customer shall pay freight charges for return.

There is no warranty for any Product that has been (i) subjected to misuse, neglect or accident, or (ii) altered or repaired in an improper manner. Refer to Griswold Product Installation, Operation, and Maintenance instructions for proper handling and use. Questions regarding Warranty Returns should be directed to your Customer Service Representative at (949) 559-6000 or via fax at (949) 559-6088.

Disclaimer of Liability

THIS WARRANTY IS IN PLACE OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF.

THIS IS GRISWOLD'S ONLY LIABILITY TO ANYONE FOR ANY CLAIM IN CONNECTION WITH THE PRODUCTS. GRISWOLD SHALL NOT BE LIABLE FOR INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR FOR DAMAGES IN AN AMOUNT EXCEEDING THE COST OF ANY DEFECTIVE PRODUCT(S) EVEN IF GRISWOLD HAS BEEN TOLD IN ADVANCE OF THE POSSIBILITY OF SUCH DAMAGES. IT IS AGREED THAT THE BUYER'S SOLE REMEDY AGAINST GRISWOLD IN CONNECTION WITH THE PRODUCT IS REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT OR REFUND OF THE PURCHASE PRICE OF THE PRODUCT.

No agent, distributor or any other person is authorized to modify or extend the terms of this warranty in any manner whatsoever. Some states do not allow the exclusion or limitation of incidental or consequential damages, nevertheless, the foregoing paragraph should be construed to limit Griswold Controls' liability to the fullest extent permitted under the laws of any particular jurisdiction, as applicable. This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state. This warranty applies only to Products installed in the United States.

To obtain service under this Limited Warranty write to:

Griswold Controls
2803 Barranca Parkway,
Irvine, California 92606.

Products may be returned for replacement or credit due to Product failure or defect during the standard warranty period. Griswold Controls Standard Product Warranty Periods are as follows:

Product Category	Warranty Period (From Date of Purchase)
Ball Valve/ Flow Control Valve Assembly (Excluding Cartridge)	18 Months (1 Year in Service)
CPP Components	18 Months (1 Year in Service)
Hoses	18 Months (1 Year in Service)
MVP Valves	18 Months (1 Year in Service)
Stainless Steel Cartridges	66 Months (5 Years in Service)
PIC-V Cartridges	66 Months (5 Years in Service)
Actuators	30 Months (2 Years in Service)
Diaphragm Valves	18 Months (1 Year in Service)

Proudly Printed in USA

Replaces form F-709N, F-2049, F-2425, F-4030, F-4045, F-4047, F-4273
This specification © 2011 Griswold Controls





REVIEW OF MECHANICAL SUBMITTALS

Project: UCA – Snow Fine Arts Center Renovation
Location: Univ. of Central Arkansas, Conway, AR
Date of Receipt: Monday, November 13, 2023
Date of Review: Tuesday, December 5, 2023
Reviewed by: Stephen Jewell
Email: sjewell@pettitinc.com

P&P Job No. 22-002

Signed: 

Checking is for conformance with the design concept of the Project and compliance with the information given in the Contract Documents. The Contractor is responsible for dimensions to be confirmed and correlated at the job site; for information that pertains solely to the fabrication processes or to techniques of construction; and for coordination of the work of all trades.

Item	Approval Status		Comments
Section 23 21 14 – Hydronic Piping Specialties	Approved as Noted	●	<ul style="list-style-type: none"> - Provide with stainless steel ball and stem. - Automatic air vent shall be provided where required per details.






 Note:



SUBMITTAL DATA

DATE: November 6, 2023

PROJECT: UCA Snow Fine Arts

CONTRACTOR: Comfort Systems USA

ENGINEER: Pettit & Pettit Engineers

GRISWOLD VALVE PACKAGES

*Pipe, 2-Way/3-Way ATC Valve (by others), and coil sizes will be coordinated in the field. We will coordinate actual sizes with approved equipment submittals before ordering.

*TBD - Incoming line sizes will also be coordinated with field conditions.

TAG	MODEL	Pipe Size	Coil Size	GPM	ATC Size
VAV	CPP2IRIS	¾"	TBD	As Scheduled	TBD
RHC-1	CPP2IRIS	Per Plans	TBD	As Scheduled	TBD
RTU-1 HW	CPP2IRIS	Per Plans	TBD	As Scheduled	TBD
AH-6 HW	CPP2IRIS	Per Plans	TBD	As Scheduled	TBD
RTU-1 CW	CPPAHU	Per Plans	TBD	As Scheduled	TBD
AH-6 CW	CPPAHU	Per Plans	TBD	As Scheduled	TBD

Isolator R: Automatic Flow Limiting Valve

Isolator U: Union with CPTA (Optional CPTA and Coin-Op Airvent or CPTA and Drain Valve)

Control Valve (CV): Supplied By Others

Isolator S: Combination Y-Strainer and Ball Valve with CPTA & Drain Valve (Optional 2nd CPTA)

2-WAY ATC F x F

LINE TYPE:		COIL TYPE:	
<input type="checkbox"/> FNPT	<input type="checkbox"/> SWT	<input type="checkbox"/> FNPT	<input type="checkbox"/> SWT <input type="checkbox"/> MNPT
<input type="checkbox"/> QuickPress ¹		<input type="checkbox"/> QuickPress ¹	
LINE SIZE:	COIL SIZE:	CV SIZE:	
<input type="checkbox"/> 1/2"	<input type="checkbox"/> 1/2"	<input type="checkbox"/> 1/2"	
<input type="checkbox"/> 3/4"	<input type="checkbox"/> 3/4"	<input type="checkbox"/> 3/4"	
<input type="checkbox"/> 1"	<input type="checkbox"/> 1"	<input type="checkbox"/> 1"	
<input type="checkbox"/> 1-1/4"	<input type="checkbox"/> 1-1/4"	<input type="checkbox"/> 1-1/4"	
<input type="checkbox"/> 1-1/2"	<input type="checkbox"/> 1-1/2"	<input type="checkbox"/> 1-1/2"	
<input type="checkbox"/> 2"	<input type="checkbox"/> 2"	<input type="checkbox"/> 2"	
BALL & STEM:			
<input type="checkbox"/> Nickel-plated brass ball & brass stem			
<input type="checkbox"/> Stainless Steel ball & stem			
COMPONENT OPTIONS:			
<input type="checkbox"/> 1-1/2" Ext Kit		<input type="checkbox"/> 2" Ext Kit	
<input type="checkbox"/> Strainer 20 Mesh		<input type="checkbox"/> Strainer 50 Mesh	
<input type="checkbox"/> Isolator S 2 nd CPTA		<input type="checkbox"/> Union Coin-Op	
HOSE OPTIONS (FNPT COIL):			
Swivel Type: <input type="checkbox"/> MNPT <input type="checkbox"/> SWT			
Length: <input type="checkbox"/> 12" <input type="checkbox"/> 18" <input type="checkbox"/> 24" <input type="checkbox"/> 36"			
CONTROL VALVE (CV):			
<input type="checkbox"/> Customer Supplied and Installed CV			
<input type="checkbox"/> Customer Supplied CV - Installed By Griswold Controls			

SPECIFICATIONS

Isolator R: Forged brass (ASTM B283) automatic flow control valve assembly includes integrated isolation ball valve and stainless steel flow control cartridge. Cartridge can be removed for inspection, or can be replaced without disturbing piping connections. Valve housing includes field repairable dual Teflon and EPDM o-ring seal stem, with Nickel plated ball. Valve includes one fixed end connection and one union connection. Union end includes union nut and EPDM o-ring. Valve body has two ports with (1) Pressure/Temperature Test Valves, and (1) combination Pressure/Temperature Test Valves and manual air vent (CPTA). PSI/Temp Rating: 1/2"-1-1/2": 600WOG-400PSI/250°F. 1-1/2"L-3": 400WOG-275PSI/250°F

Isolator S: Ball valve and integrated strainer. Valve housing is forged brass with field repairable dual Teflon and EPDM o-ring seal stem. Strainer is 20 mesh Stainless Steel and can be removed from housing without disturbing pipe connections for inspection or replacement. Valve includes one fixed connection and one union connection. Union end includes union nut and EPDM o-ring. Body has one port with combination Pressure/Temperature Test Valves (CPTA). Assembly includes drain valve with 3/4" hose connection with cap. PSI/Temp Rating: 1/2"-1-1/2": 600WOG-400PSI/250°F. 1-1/2"L-3": 400WOG-275PSI/250°F

Union: Forged brass (ASTM B283) union. Union includes one fixed end (FNPT or SWT) connection and one union (MNPT) connection. Union end includes union nut and EPDM o-ring. Union body has one port with combination Pressure/Temperature Test Valves and manual air vent (CPTA). PSI/Temp Rating: 400PSI/250°F

Drain Valve: Brass housing, Nickel plated ball. 1/2"-1": 1/2"UNF x 3/4" NPSH. 1-1/4"-2": 3/4"UNF x 3/4" NPSH. Rated 300PSI/250°F

Combination Pressure/Test Valve & Manual Air Vent (CPTA): Brass Housing, EPDM Seal. Rated 1000PSI/350°F Pressure/Temperature Test Valve works in conjunction with valve body feature to function as Manual Air Vent. Requires both components to operate as manual air vent.

NOTES

¹ QuickPress connections are compatible with popular press tools and are rated for maximum 200 PSI.

MODEL NUMBER SELECTION (R.)

Size	Model Number- FNPT Line	Model Number- SWT Line	Model Number- PRESS Line	Select Coil Size & Type ² for Model Number	Select CV Size for Model Number
1/2"	CP2R0_E_B0	CP2R0_L_B0	CP2R0_2_B0	FNPT:(E=1/2,F=3/4) MNPT:(H=1/2, I=3/4) SWT: (K=3/8",L=1/2,M=3/4) PRESS:(2=1/2,3=3/4)	MNPT:(H=1/2)
3/4"	CP2R0_F_B0	CP2R0_M_B0	CP2R0_3_B0		MNPT:(1/2=H,I=3/4)
1/2"L	CP2R1_E_B0	CP2R1_L_B0	CP2R1_2_B0	FNPT:(E=1/2,F=3/4,G=1) MNPT:(H=1/2,I=3/4,J=1) SWT:(L=1/2,M=3/4,N=1) PRESS:(2=1/2,3=3/4,1=1)	MNPT:(H=1/2)
3/4"L	CP2R1_F_B0	CP2R1_M_B0	CP2R1_3_B0		MNPT:(1/2=H,I=3/4)
1"	CP2R1_G_B0	CP2R1_N_B0	CP2R1_1_B0	FNPT:(G=1,P=1-1/4,Q=1-1/2) MNPT:(J=1,S=1- 1/4,T=1-1/2) SWT:(N=1,K=1-1/4,W=1-1/2) PRESS:(1=1, 4=1-1/4, 5=1-1/2)	MNPT:(1/2=H,I=3/4,J=1)
1"L	CP2R2_G_B0	CP2R2_N_B0	CP2R2_1_B0		MNPT:(1/2=H,I=3/4,J=1)
1-1/4"	CP2R2_P_B0	CP2R2_K_B0	CP2R2_4_B0	FNPT:(P=1-1/4,Q=1-1/2,R=2) MNPT:(S=1-1/4, T=1-1/2,U=2) SWT:(K=1-1/4,W=1-1/2,Y=2) PRESS:(4=1-1/4, 5=1-1/2, 6=2)	MNPT:(1/2=H,I=3/4,J=1,S=1-1/4)
1-1/2"	CP2R2_Q_B0	CP2R2_W_B0	CP2R2_5_B0		MNPT:(1/2=H,I=3/4,J=1,S=1-1/4,T=1-1/2)
1-1/2"L	CP2R3_Q_B0	CP2R3_W_B0	CP2R3_5_B0	FNPT:(P=1-1/4,Q=1-1/2,R=2) MNPT:(S=1-1/4, T=1-1/2,U=2) SWT:(K=1-1/4,W=1-1/2,Y=2) PRESS:(4=1-1/4, 5=1-1/2, 6=2)	MNPT:(S=1-1/4,T=1-1/2)
2"	CP2R3_R_B0	CP2R3_Y_B0	CP2R3_6_B0		MNPT:(S=1-1/4,T=1-1/2,U=2)

NOTES:

- Standard CPPs include nickel-plated brass ball and brass stem. For optional Stainless Steel ball and stem change "CP" to "CS" in model number.
- Insert PSID Code in 6th digit. Insert "0" for No-Cartridge option.
- Insert Coil Size & Type in 8th digit.
- Insert Control Valve (CV) Size in 9th digit.
- Standard CPPs include (1) CPTA in Isolator S with 20 mesh strainer. For optional 2nd CPTA change "B" to "D" (20 mesh) or "G" (1 CPTA – 50 mesh) or "J" (2 CPTA – 50 mesh).
- Optional Extension Kit- includes cap and tube for insulation around handle and appropriate number of extensions for PT/CPTA included in package. Change "0" to "1" for 1-1/2" extension option or "2" for 2" extension option.³
- If Control Valve (CV) is installed at the factory by Griswold Controls add an "A" to end of model number.

FLOW RATES (+/-5%)

SIZE	IR MODEL NO. FOR REFERENCE	HEAD LOSS IN FEET ⁴	PSID RANGE ⁵	GPM
1/2", 3/4"	IR02__	7.4	2-32	0.25, 0.33, 0.50, 0.60, 0.75, 0.85, 1.00, 1.25, 1.50, 2.00, 2.50, 3.00
	IR04__	13.4	4-57	0.50, 1.00, 1.50, 2.00, 2.50, 3.00
1/2"L, 3/4", 1"	IR11__	3.5	1-14	0.33, 0.50, 0.67, 1.00, 1.33, 1.67, 2.00, 2.33, 2.67, 3.33, 4.00, 4.67, 5.00
	IR12__	7.4	2-32	0.55, 0.75, 1.00, 1.25, 1.50, 1.75, 2.00, 2.25, 2.50, 2.75, 3.00, 3.50, 4.00, 5.00, 6.00, 7.00, 8.00
	IR14__	13.4	4-57	0.75, 1.00, 1.33, 2.00, 2.67, 3.33, 4.00, 4.67, 5.33, 6.67, 8.00, 9.33, 10.00, 11.00
	IR18__	30.0	8-128	1.10, 1.50, 2.00, 3.00, 4.00, 5.00, 6.00, 7.00, 8.00, 10.0, 12.0, 14.0, 16.0
1"L, 1-1/4", 1-1/2"	IR21__	3.5	1-14	5.33, 6.00, 6.67, 7.33, 8.00, 8.67, 9.33, 10.00, 10.67, 11.33, 12.00, 12.67, 13.33, 14.00, 14.67
	IR22__	7.4	2-32	8.0, 9.0, 10.0, 11.0, 12.0, 13.0, 14.0, 15.0, 16.0, 17.0, 18.0, 19.0, 20.0, 21.0, 22.0
	IR24__	13.4	4-57	10.67, 12.00, 13.33, 14.67, 16.00, 17.33, 18.67, 20.00, 21.33, 22.67, 24.00, 25.33, 26.67, 28.00, 29.33
1-1/2"L - 2"	IR28__	30.0	8-128	16.0, 18.0, 20.0, 22.0, 24.0, 26.0, 28.0, 30.0, 32.0, 34.0, 36.0, 38.0, 40.0, 42.0, 44.0
	IR31__	3.5	1-14	12, 14, 16, 18, 20, 22, 24, 26, 28, 30, 32, 34, 36, 38
	IR32__	7.4	2-32	18, 21, 24, 27, 30, 33, 36, 39, 42, 45, 48, 51, 54, 57
	IR34__	13.4	4-57	24, 28, 32, 36, 40, 44, 48, 52, 56, 60, 64, 68, 72, 76
1-1/2"L - 2"	IR38__	30.0	8-128	36, 42, 48, 54, 60, 66, 72, 78, 84, 90, 96, 102, 108, 114


NOTES

² Coil Type must be FNPT if hoses are required.

³ Extension Option includes handle cover and accessory extensions for either 1-1/2" or 2" Insulation.

⁴ Head Loss in Feet is provided for pump head calculations. (1 PSI = 2.307 Feet of Water)



⁵ Systems with entrained air and fluid velocities less than 4FPS are susceptible to noise when using the 2-32 cartridge. If your system has entrained air and flowrates less than 2GPM please consider using the 4-57 cartridge.

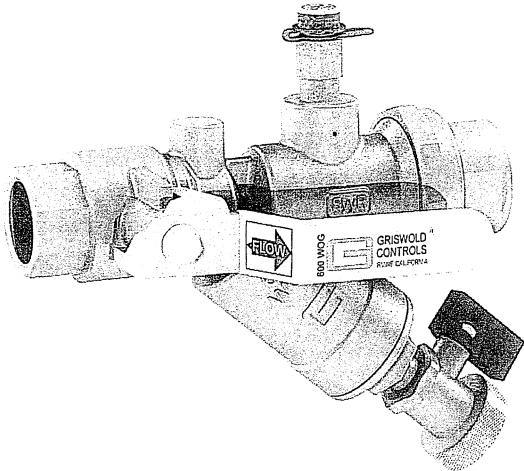



SPECIFICATIONS

- PSI/Temperature Rating:** 1/2"-1-1/2": 600 WOG 400 PSI / 250° F
1-1/2"L-3": 400 WOG 275 PSI / 250° F
- Body Material:** 1/2"-1-1/2": Forged Brass ASTM B283-06
1-1/2"L-3": Cast brass
- End Connections:** Brass – NPT, Sweat, QuickPress¹, Grooved²
- Ball Valve Seals:** Teflon
- Union Seal:** EPDM O-Ring
- Body Tappings³:** (3) Bosses for CPTAs and Drain Valve
- Ball Valve:** Nickel-plated brass ball
Optional: Stainless Steel ball
- Field Repairable Stem:** Dual Teflon seals and EPDM O-ring
- Strainer:** 20 mesh stainless steel (optional 50 mesh)
- Options:** Combination P/T Test Valve and Manual Air Vent (CPTA), Drain Valve, or 1/2" Bypass⁴, Extension Option

1/2" – 1-1/2" Housing

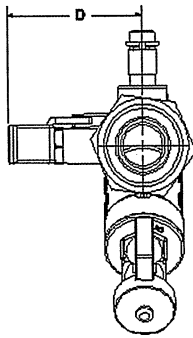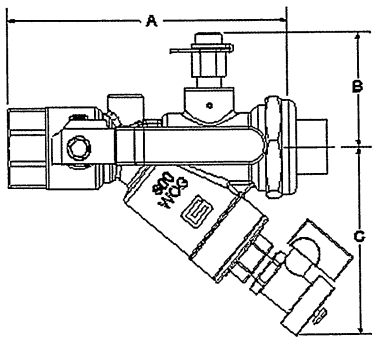

1-1/2"L - 3" Housing

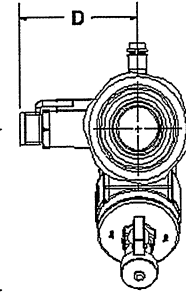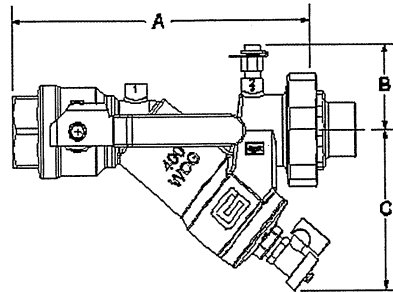

DIMENSIONS & WEIGHTS (NOMINAL)

All dimensions are for planning purposes only and may change without notice.

SIZE	A - FIXED END CONNECTION		UNION END CONNECTION ⁵						B	C	D ⁶	Cv ⁷	WEIGHT (LBS.)	
	FNPT	SWT	FNPT		MNPT		SWT							
1/2"	3.9	3.8	1/2":1.0	3/4":N/A ⁸	1/2":1.0	3/4":1.2	3/8",1/2":0.8	3/4":1.1	1.9	2.9	0.5,1.5 2.2	4.7	0.9	
3/4"	3.9	4.0												
3/4"L	5.4	5.4	1/2",3/4":1.0	1":N/A ⁸	1/2"-3/4":1.0	1":1.4	3/8",3/4":1.0	1/2":0.7	1":1.3	2.2	3.6	2.6, 3.2	9.1	2.3
1"	5.4	5.6												
1-1/4"	7.6	7.7	1",1-1/4",1-1/2":1.7	1",1-1/4",1-1/2":1.7 ⁹	1",1-1/4":1.7	1-1/2":1.4	2.5	3.1	3.1, 3.7	24.6	5.0			
1-1/2"	7.5	7.9												
1-1/2"L, 2"	9.3	9.8	1-1/4", 1-1/2":1.6	2": N/A ⁸	1",1-1/4":1.8	1-1/2", 2":1.6	1-1/4",2":1.6	1-1/2":1.7	2.6	3.7	3.7, 4.3	35	8.8	
2"L	10.9	11.2	2": 2.5		2": 1.6		2": 1.6		2.9	4.0	4.0, 4.6	60	12.4	
2-1/2"	11.1	N/A	N/A ¹⁰											
3"	11.3	N/A	N/A ¹⁰											

For QuickPress connections add 3.1" (1/2") 3.6" (3/4", 3/4"L), 4.1" (1"), to the FNPT length (A) listed for a valve.

NOTES

- ¹ QuickPress is available on 1/2" to 1" valves only. Connections are compatible with popular press tools and are rated for maximum 200 PSI.
- ² Grooved End connection is available on 2-1/2" and 3" valves only.
- ³ Body Tappings for accessories are a leak proof metal to metal seal and do not require pipe dope or tape. Tape or dope should not be used.
- ⁴ Bypass is only available on 1/2" to 1-1/2" valves.
- ⁵ For overall length, add union end connection length to body length.
- ⁶ Space Saver handle standard on 1/2"-3/4" valves. Standard handle on 1" to 3" valves and 1-1/2" extended handle in 1/2" to 3" is compatible with 1-1/2" insulation. Largest extended handle is compatible with 2" insulation.
- ⁷ Cv's are based on a clean 20 mesh stainless steel strainer. When a 50 mesh screen is used, multiply PSID by 1.3.
- ⁸ Tailpiece is not available for this size. Male tailpiece used with coupling.
- ⁹ 1-1/4"-1-1/2" valves can also take 1/2"-3/4" MNPT tailpieces.
- ¹⁰ 2-1/2" and 3" Valves are fixed end by fixed end connection. Union connection is not available.


This specification © 2020 Griswold Controls

7/20
F-5387M

1700 Barranca Parkway, Irvine, CA 92606
(949) 559-6000 Fax (949) 559-6088
www.GriswoldControls.com



MODEL NUMBER SELECTION¹¹

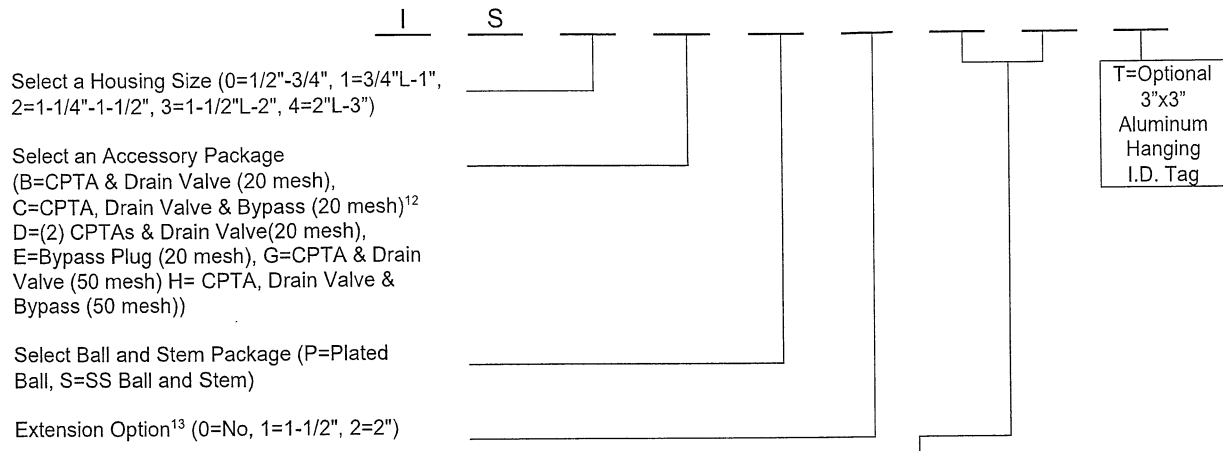

Select a Housing Size (0=1/2"-3/4", 1=3/4"L-1", 2=1-1/4"-1-1/2", 3=1-1/2"L-2", 4=2"L-3")

Select an Accessory Package (B=CPTA & Drain Valve (20 mesh), C=CPTA, Drain Valve & Bypass (20 mesh)¹² D=(2) CPTAs & Drain Valve(20 mesh), E=Bypass Plug (20 mesh), G=CPTA & Drain Valve (50 mesh) H= CPTA, Drain Valve & Bypass (50 mesh))

Select Ball and Stem Package (P=Plated Ball, S=SS Ball and Stem)

Extension Option¹³ (0=No, 1=1-1/2", 2=2")

Valve	FIXED END OR UNION END ¹⁴ (No Union Tailpiece=Z)			UNION END ONLY ¹⁴
	Female Threaded	Female Sweat	QuickPress	Male Threaded
IS0	1/2"=E, 3/4"=F ¹⁵	3/8"=K ¹⁶ , 1/2"=L, 3/4"=M	1/2"=2, 3/4"=3	1/2"=H, 3/4"=I
IS1	1/2"=E ¹⁶ , 3/4"=F, 1"=G ¹⁵	3/8"=K ¹⁶ , 1/2"=L ¹⁶ , 3/4"=M, 1"=N	1/2"=2 ¹⁶ , 3/4"=3, 1"=1	1/2"=H, 3/4"=I, 1"=J
IS2	1"=G ¹⁶ , 1-1/4"=P, 1-1/2"=Q	1"=N ¹⁶ , 1-1/4"=K, 1-1/2"=W	N/A	1/2"=H, 3/4"=I, 1"=J, 1-1/4"=S, 1-1/2"=T
IS3	1-1/4"=P ¹⁶ , 1-1/2"=Q, 2"=R ¹⁵	1-1/4"=K ¹⁶ , 1-1/2"=W, 2"=Y	N/A	1-1/4"=S, 1-1/2"=T, 2"=U
IS4 ¹⁴ (Union)	2"=L	2"=Y	N/A	1-1/4"=S, 1-1/2"=T, 2"=U
IS4 ¹⁴ (Fixed End)	2"=L, 2-1/2"=M, 3"=N ¹⁷	N/A	N/A	N/A

NOTES


- ¹¹ Model no. and flow rate are indicated on label affixed to body.
- ¹² C option with bypass is only available for 1/2" to 1-1/2" size.
- ¹³ Extension Option includes handle cover and accessory extensions for either 1-1/2" or 2" insulation.
- ¹⁴ Select the Fixed End First and the Union End Second. For 2-1/2" and 3" size select a 2nd fixed end instead of a union end.
- ¹⁵ Tailpiece is not available for this size. Male tailpiece used with coupling.
- ¹⁶ Fixed end not available for this size. Union tailpiece only.
- ¹⁷ For Grooved End option use MG=2-1/2" and NG=3".

This specification © 2020 Griswold Controls

7/20
F-5387M

1700 Barranca Parkway, Irvine, CA 92606
(949) 559-6000 Fax (949) 559-6088
www.GriswoldControls.com



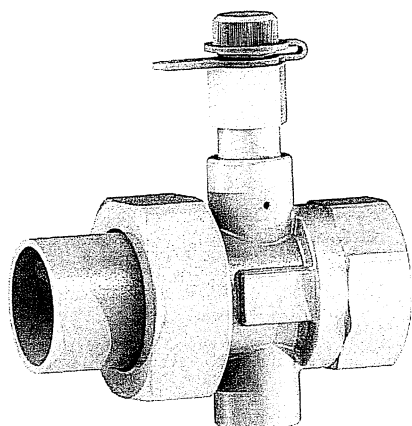


SPECIFICATIONS

PSI / Temperature Rating: 400 PSI / 250°F
Body Material: Forged Brass ASTM B283-06
End Connections: Brass – NPT, Sweat or QuickPress¹
Union Seal: EPDM O-ring
Body Tappings²: (2) Bosses for CPTAs, Airvent. and Drain Valve
Options: Combination P/T Test Valve and Manual Air Vent (CPTA), Drain Valve, Coin Operated Airvent, Extension Option

DIMENSIONS & WEIGHTS (NOMINAL)

All dimensions are for planning purposes only and may change without notice.

SIZE	A - FIXED END CONNECTION		B - UNION END CONNECTION ³						C	WEIGHT (LBS.)		
	FNPT	SWT	FNPT		MNPT		SWT					
3/8"	N/A	1.7							1.2	0.3		
1/2"	2.0	1.9	1/2":1.0	3/4":N/A ⁴	1/2":1.0	3/4":1.2	3/8",1/2":0.8	3/4":1.1				
3/4"	1.9	1.9										
1"	2.2	2.2	1/2",3/4":1.0	1":N/A ⁴	1/2"-3/4":1.0	1":1.4	3/8",3/4":1.0	1/2":0.7	1":1.3	2.0	1.1	
1-1/4"	2.6	2.6	1",1-1/4",1-1/2":1.7		1",1-1/4",1-1/2":1.7 ⁵		1",1-1/4":1.7		1-1/2":1.4		2.7	2.4
1-1/2"	2.8	2.8										
2"	2.8	2.8	1-1/4",1-1/2":1.6	2": N/A ⁴	1",1-1/4":1.8	1-1/2",2":1.6	1-1/4",2":1.6		1-1/2":1.7		3.4	3.2
2-1/2"	3.0	N/A	1-1/2" - 2-1/2":1.2	3": 2.2	1-1/2"-2-1/2":1.5	3": 2.5	2":2.0				3.7	5.1
3"	3.2	N/A									3.7	5.6

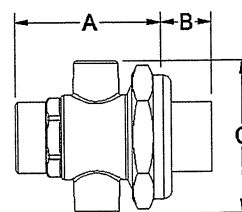


For QuickPress connections add 3.1" (1/2"), 3.6" (3/4"), 4.1" (1") to the FNPT length (A) listed for a valve.

MODEL NUMBER SELECTION

Select a Housing Size (0=1/2"-3/4", 1=1", 2=1-1/4"-1-1/2", 3=2", 4=2-1/2"-3")

Select an Accessory Package (0=No Port, B=CPTA, C=CPTA & Drain Valve, D=Coin-Op Airvent, E=Coin-Op Airvent and CPTA)

Extension Option⁶ (0=No, 1=1-1/2", 2=2")

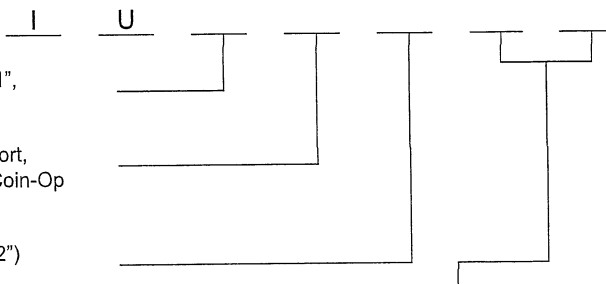


Valve	FIXED END OR UNION END ⁷ (No Union Tailpiece=Z)			UNION END ONLY ⁷
	Female Threaded	Female Sweat	QuickPress	Male Threaded
IU0	1/2"=E, 3/4"=F ⁴	3/8"=K, 1/2"=L, 3/4"=M	1/2"=2, 3/4"=3	1/2"=H, 3/4"=I
IU1	1/2"=E ⁸ , 3/4"=F ⁸ , 1"=G ⁴	3/8"=K ⁸ , 1/2"=L ⁸ , 3/4"=M ⁸ , 1"=N	1/2"=2 ⁸ , 3/4"=3 ⁸ , 1"=1	1/2"=H, 3/4"=I, 1"=J
IU2	1"=G ⁸ , 1-1/4"=P, 1-1/2"=Q	1"=N ⁸ , 1-1/4"=K, 1-1/2"=W	N/A	1/2"=H, 3/4"=I, 1"=J, 1-1/4"=S, 1-1/2"=T
IU3	1-1/4"=P ⁸ , 1-1/2"=Q ⁸ , 2"=R ⁴	1-1/4"=K ⁸ , 1-1/2"=W ⁸ , 2"=Y	N/A	1-1/4"=S, 1-1/2"=T, 2"=U
IU4	1-1/2"=Q ⁸ , 2"=R ⁸ , 2-1/2"=A, 3"=B	2"=Y ⁸	N/A	1-1/2"=T, 2"=U, 2-1/2"=C, 3"=D

NOTES

- QuickPress is available on 1/2" to 1" valves. Connections are compatible with popular press tools and are rated for maximum 200 PSI.
- Body Tappings for accessories are a leak proof metal to metal seal and do not require pipe dope or tape. Tape or dope should not be used.
- For overall length, add union end connection length to body length.
- Tailpiece is not available for this size. Male tailpiece used with coupling.
- 1-1/4"-1-1/2" valves can also take 1/2"-3/4" MNPT tailpieces.
- Extension Option includes accessory extensions for either 1-1/2" or 2" insulation.
- Select the Fixed End First and the Union End Second.
- Fixed end not available for this size. Union tailpiece only.


ACCESSIBLE CARTRIDGE

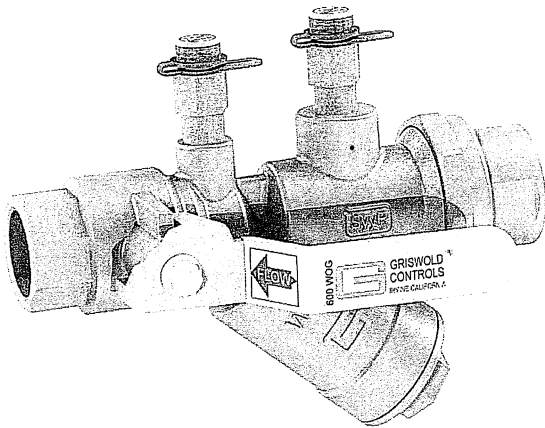


SPECIFICATIONS

- PSI/Temperature Rating:** 1/2"-1-1/2": 600 WOG 400 PSI / 250° F
1-1/2"L-3": 400 WOG 275 PSI / 250° F
- Cartridge:** AISI Type 304 stainless steel
AISI Type 17-7 PH stainless steel spring
- Body Material:** 1/2"-1-1/2": Forged brass ASTM B283-06
1-1/2"L-3": Cast brass
- End Connections:** Brass – NPT, Sweat or QuickPress¹
- Ball Valve Seals:** Teflon
- Union Seal:** EPDM O-Ring
- Body Tappings²:** Two Combination P/T Test Valve and Manual Air Vent (CPTA)
- Ball Valve:** Nickel-plated brass ball
Optional: Stainless Steel ball
- Field Repairable Stem:** Dual Teflon seals and EPDM O-ring

1/2" – 1-1/2" Housing

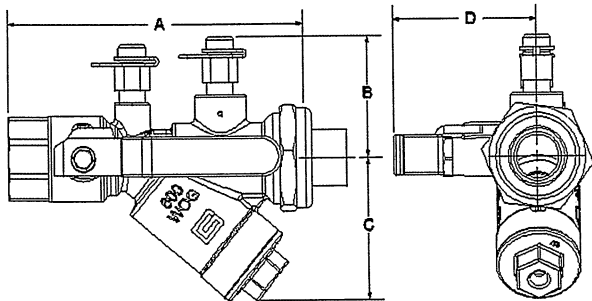

1-1/2"L – 3" Housing

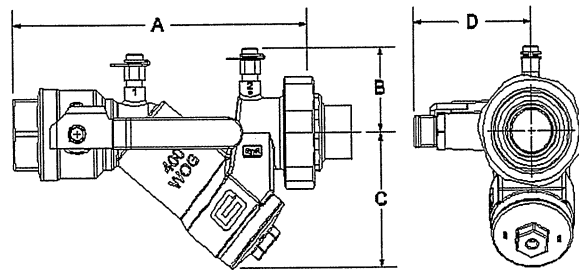

DIMENSIONS & WEIGHTS (NOMINAL)

All dimensions are for planning purposes only and may change without notice.


SIZE	A - FIXED END CONNECTION		UNION END CONNECTION ³						B	C	D ⁴	Cv ⁵	WEIGHT (LBS.)	
	FNPT	SWT	FNPT		MNPT		SWT							
1/2"	3.9	3.8	1/2":1.0	3/4":N/A ⁶	1/2":1.0	3/4":1.2	3/8", 1/2":0.8	3/4":1.1	1.9	2.9	0.5, 1.5, 2.2	2.3	1.0	
3/4"	3.9	4.0												
1/2"L	5.3	5.5									1.6, 2.6, 3.2	10.9	2.3	
3/4"L	5.4	5.4	1/2", 3/4":1.0	1":N/A ⁶	1/2"-3/4":1.0	1":1.4	3/8", 3/4":1.0	1/2":0.7	1":1.3	2.2	3.6	2.6, 3.2		
1"	5.4	5.6												
1"L	8.0	8.2												
1-1/4"	7.6	7.7	1", 1-1/4", 1-1/2":1.7		1", 1-1/4", 1-1/2":1.7 ⁷		1", 1-1/4":1.7		1-1/2":1.4	2.5	3.1	3.1, 3.7	28.5	5.0
1-1/2"	7.5	7.9												
1-1/2"L	9.4	9.6	1-1/4", 1-1/2":1.6	2": N/A ⁶	1", 1-1/4":1.8	1-1/2", 2":1.6	1-1/4", 2":1.6		1-1/2":1.7	2.6	3.7	3.7, 4.3	40	8.8
2"	9.3	9.8												
2"L	10.9	11.2	2": 2.5		2": 1.6		2": 1.6							
2-1/2"	12.1	N/A	N/A ⁸											
3"	12.3	N/A												

For QuickPress connections add 3.1" (1/2", 1/2"L) 3.6" (3/4", 3/4"L), 4.1" (1") to the FNPT length (A) listed for a valve.

NOTES

- ¹ QuickPress is available on 1/2" to 1" valves. Connections are compatible with popular press tools and are rated for maximum 200 PSI.
- ² Body Tappings for accessories are a leak proof metal to metal seal and do not require pipe dope or tape. Tape or dope should not be used.
- ³ For overall length, add union end connection length to body length.
- ⁴ Space Saver handle standard on 1/2"-3/4" valves. Standard handle on 1" to 3" valves and 1-1/2" extended handle in 1/2" to 3" is compatible with 1-1/2" insulation. Largest extended handle is compatible with 2" insulation.
- ⁵ Cv's are based on housing without cartridge.
- ⁶ Tailpiece is not available for this size. Male tailpiece used with ASME B16.15 Class 125 coupling.
- ⁷ 1-1/4"-1-1/2" valves can also take 1/2"-3/4" MNPT tailpieces.
- ⁸ 2-1/2" and 3" Valves are fixed end by fixed end connection. Union connection is not available.

MODEL NUMBER SELECTION⁹

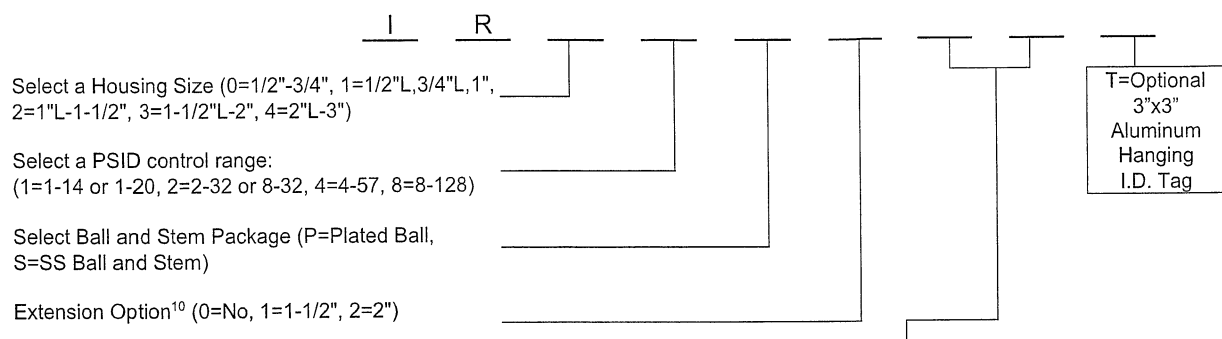

Valve	FIXED END OR UNION END ¹¹ (No Union Tailpiece=Z)			UNION END ONLY ¹¹
	Female Threaded	Female Sweat	QuickPress	Male Threaded
IR0	1/2"=E, 3/4"=F ¹²	3/8"=K ¹³ , 1/2"=L, 3/4"=M	1/2"=2, 3/4"=3	1/2"=H, 3/4"=I
IR1	1/2"=E, 3/4"=F, 1"=G ¹²	3/8"=K ¹³ , 1/2"=L, 3/4"=M, 1"=N	1/2"=2, 3/4"=3, 1"=1	1/2"=H, 3/4"=I, 1"=J
IR2	1"=G, 1-1/4"=P, 1-1/2"=Q	1"=N, 1-1/4"=K, 1-1/2"=W	N/A	1/2"=H, 3/4"=I, 1"=J, 1-1/4"=S, 1-1/2"=T
IR3	1-1/4"=P ¹³ , 1-1/2"=Q, 2"=R ¹²	1-1/4"=K ¹³ , 1-1/2"=W, 2"=Y	N/A	1-1/4"=S, 1-1/2"=T, 2"=U
IR4 ¹¹ (Union)	2"=L	2"=Y	N/A	1-1/4"=S, 1-1/2"=T, 2"=U
IR4 ¹¹ (Fixed End)	2"=L, 2-1/2"=M, 3"=N	N/A	N/A	N/A


FLOW RATES (+/-5%)

SIZE	MODEL NO.	HEAD LOSS IN FEET ¹⁴	PSID RANGE ¹⁵	GPM						
							HEAD LOSS IN FEET ¹⁴	PSID RANGE	HIGHER FLOW RATES/ NO INCREMENTS	
1/2", 3/4"	IR02	7.4	2-32	0.25, 0.33, 0.50, 0.60, 0.75, 0.85, 1.00, 1.25, 1.50, 2.00, 2.50, 3.00						
	IR04	13.4	4-57	0.50, 1.00, 1.50, 2.00, 2.50, 3.00						
1/2"L, 3/4", 1"	IR11	3.5	1-14	0.33, 0.50, 0.67, 1.00, 1.33, 1.67, 2.00, 2.33, 2.67, 3.33, 4.00, 4.67, 5.00						
	IR12	7.4	2-32	0.55, 0.75, 1.00, 1.25, 1.50, 1.75, 2.00, 2.25, 2.50, 2.75, 3.00, 3.50, 4.00, 5.00, 6.00, 7.00, 8.00						
	IR14	13.4	4-57	0.75, 1.00, 1.33, 2.00, 2.67, 3.33, 4.00, 4.67, 5.33, 6.67, 8.00, 9.33, 10.00, 11.00						
	IR18	30.0	8-128	1.10, 1.50, 2.00, 3.00, 4.00, 5.00, 6.00, 7.00, 8.00, 10.0, 12.0, 14.0, 16.0						
1"L, 1-1/4", 1-1/2"	IR21	3.5	1-14	5.33, 6.0, 6.67, 7.33, 8.0, 8.67, 9.33, 10.0, 10.67, 11.33, 12.0, 12.67, 13.33, 14.0, 14.67						
	IR22	7.4	2-32	8.0, 9.0, 10.0, 11.0, 12.0, 13.0, 14.0, 15.0, 16.0, 17.0, 18.0, 19.0, 20.0, 21.0, 22.0						
	IR24	13.4	4-57	10.67, 12.00, 13.33, 14.67, 16.00, 17.33, 18.67, 20.00, 21.33, 22.67, 24.00, 25.33, 26.67, 28.00, 29.33						
1-1/2"L - 2"	IR28	30.0	8-128	16.0, 18.0, 20.0, 22.0, 24.0, 26.0, 28.0, 30.0, 32.0, 34.0, 36.0, 38.0, 40.0, 42.0, 44.0						
	IR31	3.5	1-14	12, 14, 16, 18, 20, 22, 24, 26, 28, 30, 32, 34, 36, 38						
	IR32	7.4	2-32	18, 21, 24, 27, 30, 33, 36, 39, 42, 45, 48, 51, 54, 57						
	IR34	13.4	4-57	24, 28, 32, 36, 40, 44, 48, 52, 56, 60, 64, 68, 72, 76						
2"L, 2-1/2", 3"	IR38	30.0	8-128	36, 42, 48, 54, 60, 66, 72, 78, 84, 90, 96, 102, 108, 114						
	IR41	3.5	1-20	MIN.	INCREMENT	MAX	HEAD LOSS IN FEET ¹⁴	PSID RANGE	HIGHER FLOW RATES/ NO INCREMENTS	
	IR42	7.4	2-32	14.0	2.0	60	9.2	4-20	90, 110, 130	
	IR44	13.4	4-57	17.5	2.5	75	18.4	8-32	110, 135, 160	
2"L, 2-1/2", 3"	IR48	30.0	8-128	23.33	3.33	100	NONE			
				35.0	5.0	150				

NOTES

- ⁹ Model no. and flow rate are indicated on label affixed to body.
- ¹⁰ Extension Option includes handle cover and accessory extensions for either 1-1/2" or 2" Insulation.
- ¹¹ Select the Fixed End First and the Union End Second. For 2-1/2" and 3" size select a 2nd fixed end instead of a union end.
- ¹² Tailpiece is not available for this size. Male tailpiece used with ASME B16.15 Class 125 coupling.
- ¹³ Fixed end not available for this size. Union tailpiece only.
- ¹⁴ Head Loss in Feet is provided for pump head calculations. (1 PSI = 2.307 Feet of Water)
- ¹⁵ Systems with entrained air and fluid velocities less than 4FPS are susceptible to noise when using the 2-32 cartridge. If your system has entrained air and flowrates less than 2GPM please consider using the 4-57 cartridge.

Air Handling Unit Packages

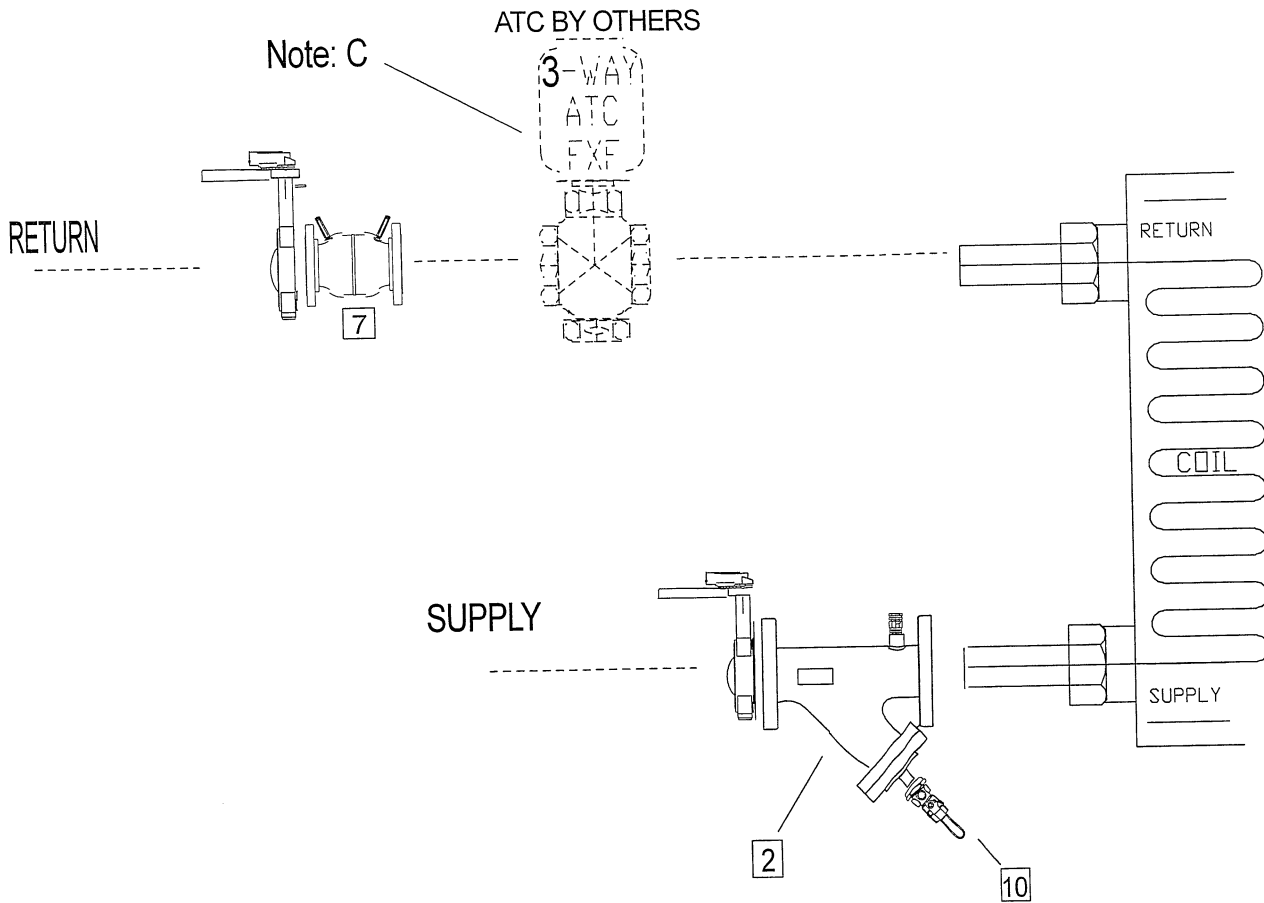


NOTES:

- A. All piping, elbows, and tees are by others.
- B. All PT's, and air vents will be provided with extensions.
- C. ATC valve is provided & Installed by others.

LEGEND

- | | |
|---|---|
| 1 Butterfly Valve | 8 Automatic Flow Control |
| 2 Strainer | 9 Accessory Flange |
| 3 Flanged Reducer | 10 Drain Valve (Typical) w/ hose adapter- Shipped Loose |
| 4 Flanged Tee | 11 PT Port |
| 5 Threaded Flange (Typical) - Shipped Loose | 12 Air Vent (Typical) - Shipped Loose |
| 6 Union | 13 Shutoff Valve w/ Union End |
| 7 Manual Balance Valve | |

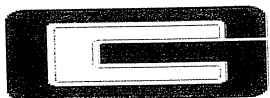

Griswold Controls

Representative:
Fluid Solutions, Inc.


PROJECT: _____

ENGINEER: _____

TAG: _____



10350 Riverview Corporate Drive
North Little Rock, AR 72113
Phone: 501-663-8886 • Fax: 501-663-8738
www.fluidsolutionsinc.com

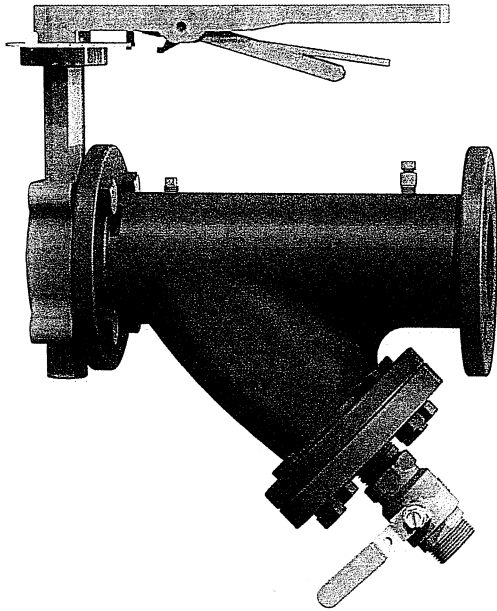


SPECIFICATIONS

PSI/Temperature Rating: 175 PSI / 150° F
Body Material: Cast Iron ASTM A126 Class B
End Connections: Flanges ANSI B16.1 Class 125
Body Tappings: Port 1: 1/4" NPT with PT; Port 2: 1/4" NPT; Port 3: 3/4" NPT; Port 4: Ball Valve to be used as drain valve
Strainer: Stainless steel 304 ASTM 167
Butterfly Valve: Cast Iron ASTM A126 Class B EPDM, Aluminum bronze, stainless steel stem
Assembly: Valve comes fully assembled. Mating flanges supplied by others.


DIMENSIONS & WEIGHTS (NOMINAL)

All dimensions are for planning purposes only and may change without notice.

SIZE	A LENGTH	B ³	C	D	HOLE Dia.	# OF HOLES	DRAIN SIZE	WEIGHT (LBS.)
2-1/2"	12.8	1.8	10.5	6.0	0.75	4	1"	57
3"	16.4	1.8	10.5	6.3	0.75	4	1"	86
4"	15.9	2.0	10.5	7.0	0.88	8	1-1/4"	90
5"	18.1	2.1	10.5	7.5	0.88	8	1-1/4"	150
6"	21.1	2.1	10.5	8.0	0.88	8	1-1/2"	196
8"	26.1	2.5	14.0	9.5	0.88	8	1-1/2"	245

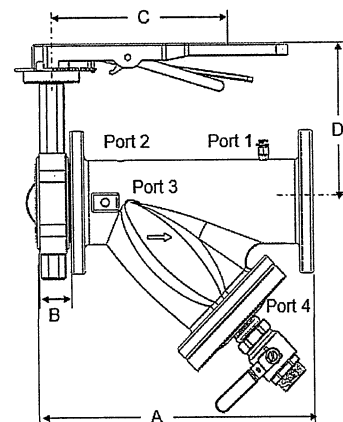

MODEL NUMBER SELECTION

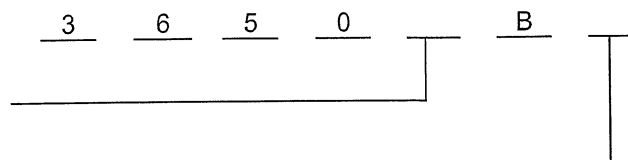

Insert M=2-1/2", N=3", P=4", Q=5", R=6", S=8"

Add "W" for optional weldneck flanges

OPTIONS (ORDER AS SEPARATE LINE ITEMS, INSTALLED IN THE FIELD):

Pressure/Temperature Test Valve – 1/4": 6889
 Manual Air Vent – 1/4": 738-01

NOTES


³ B dimension does not include seat.

This specification © 2021 Griswold Controls

6/21
F-2368N

1700 Barranca Parkway, Irvine, CA 92606
 (949) 559-6000 Fax (949) 559-6088
 www.GriswoldControls.com



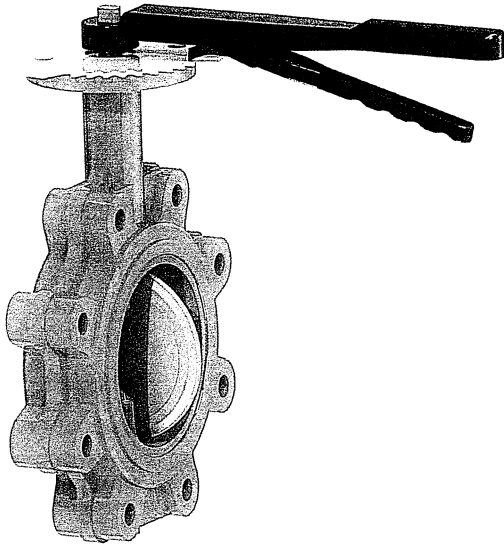

SPECIFICATIONS


PSI/Temp Rating:	2-1/2" - 12": 200PSI/275°F 14" - 20": 150PSI/275°F
Body:	Ductile Iron
Disc:	Aluminum Bronze (Optional Stainless Steel Disc)
Shaft:	316/416 Stainless Steel
Bushing:	PTFE
Seat:	EPDM Standard
Key:	Carbon Steel
O-Ring:	NBR
Plate:	2-1/2" – 6": Infinite Adjustable ¹
Service:	Bi-directional or Dead End
Standard:	MSS-SP-67
Options:	Stainless Steel Plate to convert valve to outdoor use ²

DIMENSIONS & WEIGHTS (NOMINAL)

All dimensions are for planning purposes only and may change without notice.


DIM	SIZE											
	2-1/2"	3"	4"	5"	6"	8"	10"	12"	14"	16"	18"	20"
A	6.9	7.1	7.9	8.4	8.9	10.3	11.5	13.3	14.5	15.8	16.6	18.9
B	5.5	6.0	7.5	8.5	9.5	11.8	14.3	17.0	18.8	21.3	22.8	25.0
C³	1.8	1.8	2.1	2.2	2.2	2.4	2.7	3.1	3.1	4.0	4.5	5.0
D	1.3	1.3	1.3	1.3	1.3	1.8	1.8	1.8	1.8	2.0	2.0	2.5
L	5.5	6.0	7.5	8.5	9.5	11.8	14.3	17.0	18.8	21.3	22.8	25.0
M	4	4	8	8	8	8	12	12	12	16	16	20
Weight	10	16	28	30	33	72	95	128	178	255	290	494

Infinite Adjustable Lever Handle


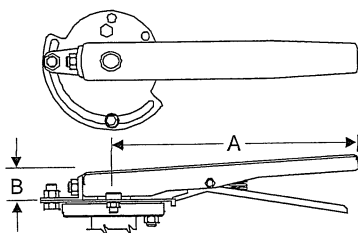


Size	Bore for Shaft	A	B
2-1/2"-3"	0.50	10.5	1.06
4"	0.63	10.5	1.06
5"-6"	0.75	10.5	1.06

Gear Operator

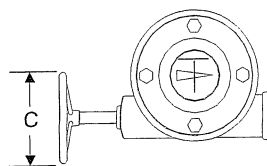

Size	C
8"-18"	11.8
20"	15.8

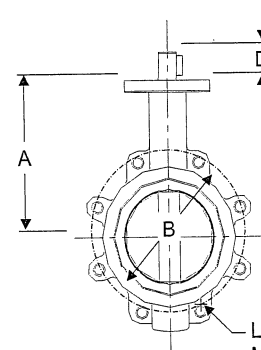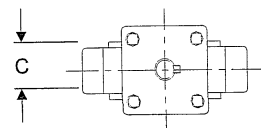

NOTES:

- ¹ Infinite Adjustable Plate not available on "MADE IN USA" butterfly valves or valves with Stainless Steel Disc
- ² Stainless Steel Plate for outdoor use compatible with Infinite Adjustable valves.
- ³ C dimension does not include seat.

This specification © 2021 Griswold Controls

1700 Barranca Parkway, Irvine, CA 92606
(949) 559-6000 Fax (949) 559-6088
www.GriswoldControls.com

Cv VALUES - VALVE SIZING COEFFICIENTS

SIZE	Cv
2-1/2"	196
3"	302
4"	600
5"	1022
6"	1320
8"	2165
10"	3353
12"	5827
14"	7037
16"	10416
18"	12215
20"	15959

MODEL NUMBERS

HANDLE TYPE	INFINITE ADJUSTABLE HANDLE - BRONZE DISC	STANDARD HANDLE - STAINLESS STEEL DISC	GEAR/ HAND WHEEL – BRONZE DISC	GEAR/ HAND WHEEL – STAINLESS STEEL DISC	
SIZE	2-1/2"	8278-28 ⁴ / 8278-108 ⁵	8278-58	N/A	N/A
	3"	8278-29 ⁴ / 8278-109 ⁵	8278-59	N/A	N/A
	4"	8278-30 ⁴ / 8278-104 ⁵	8278-60	N/A	N/A
	5"	8278-31 ⁴ / 8278-119 ⁵	8278-61	N/A	N/A
	6"	8278-32 ⁴ / 8278-105 ⁵	8278-62	N/A	N/A
	8"	N/A	N/A	8278-55 ⁴	8278-63
	10"	N/A	N/A	8278-07	8278-127
	12"	N/A	N/A	8278-08	8278-129
	14"	N/A	N/A	8278-09	8278-128
	16"	N/A	N/A	8278-56	N/A
	18"	N/A	N/A	8278-57	N/A
	20"	N/A	N/A	8278-125	N/A

For outdoor use please order Stainless Steel plate as separate line item. Plate to be installed in the field on Infinite Adjustable Butterfly Option.⁶

- 2-1/2" - 3": MNP5080Q (Compatible with 8278-28, 8278-29)
- 4": MNP100Q (Compatible with 8278-30)
- 5" - 6": MNP100150Q (Compatible with 8278-31, 8278-32)

NOTES:


⁴ Valve meets Buy American Act.
⁵ 8278-104 thru 8278-119 are special order valves that meet MADE IN USA requirements. Handle is not infinite adjustable.
⁶ Stainless Steel plate is not compatible with MADE IN USA valves or valves with Stainless Steel Disc.

This specification © 2021 Griswold Controls

1700 Barranca Parkway, Irvine, CA 92606
 (949) 559-6000 Fax (949) 559-6088
 www.GriswoldControls.com




ACCESSIBLE CARTRIDGE

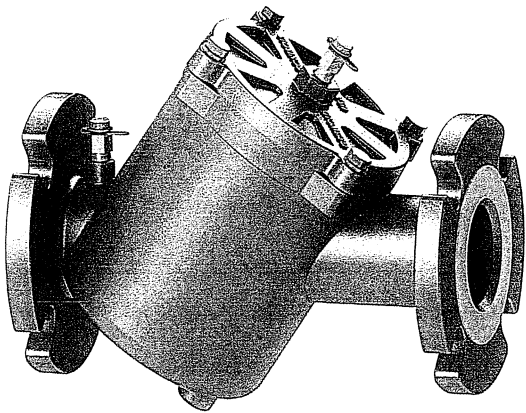

SPECIFICATIONS

- PSI / Temperature Rating:** 150 PSI / 275° F
- Cartridge:** AISI Type 304 stainless steel
AISI Type 17-7 PH stainless steel spring
- Body Material:** Ductile Iron ASTM A536-80
Class 50-40-18
- End Connections:** ANSI 150 Lb. Flanges 2-1/2" and 3"
- Seals:** EPDM O-Rings
- Body Tappings:** 1/4" NPT with P/T test valves
- Isolation Options:** Butterfly Valve

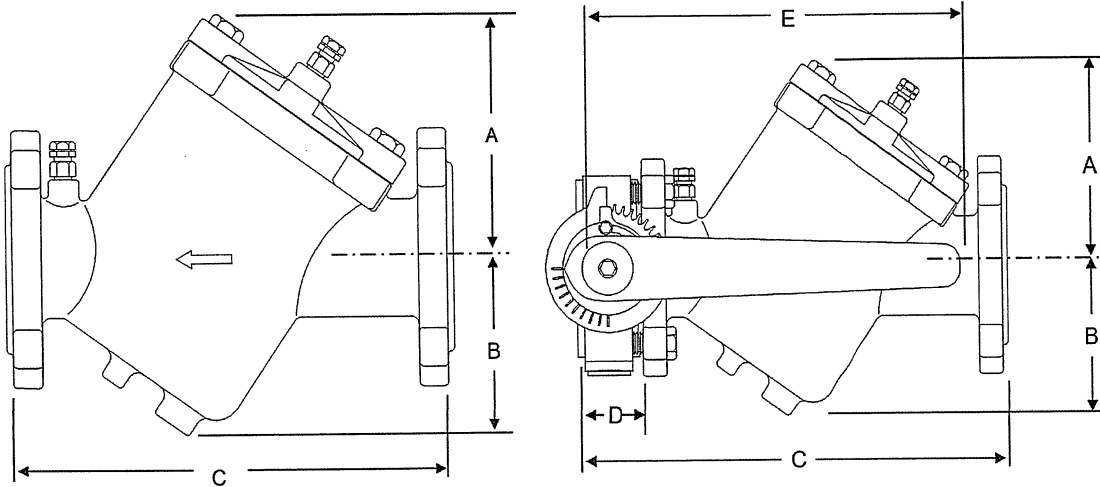

DIMENSIONS & WEIGHTS (NOMINAL)

All dimensions are for planning purposes only and may change without notice.

SIZE	MODEL NO.	A HEIGHT	B HEIGHT	C LENGTH	D	E	Cv ¹	WEIGHT (LBS.)
2-1/2", 3"	3UF_B_	5.3	4.3	11.9	N/A	N/A	119	28
2-1/2"	3UF_M_	5.3	4.3	13.6	1.8	10.7	119	40
3"	3UF_N_							

NOTES

¹ Cv measured without cartridge


This specification © 2020 Griswold Controls

1700 Barranca Parkway, Irvine, CA 92606
 (949) 559-6000 Fax (949) 559-6088
 www.GriswoldControls.com

FLOW RATES (+/-5%)

SIZE ²	MODEL NO.	HEAD LOSS IN FEET ³	PSID RANGE	GPM		
				MIN	INCREMENT	MAX
2-1/2", 3"	3UF1__	3.5	1-14	12.0	2.0	114.0
	3UF2__	7.4	2-32	18.0	3.0	171.0
	3UF4__	13.4	4-57	24.0	4.0	228.0
	3UF8__	30.0	8-128	36.0	6.0	342.0

MODEL NUMBER SELECTION⁴

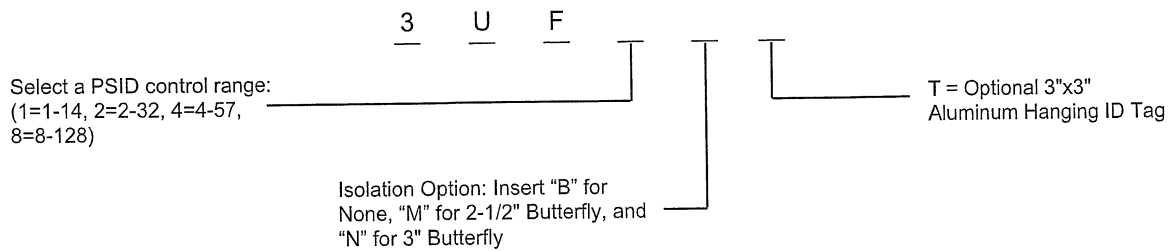

NOTES

² 2" Reducing flanges can be used. Consult your local pipe fitting supply house or contact the factory for assistance.

³ Head Loss in Feet is provided for pump head calculations. (1 PSI = 2.307 Feet of Water)

⁴ Model no. and flow rate are indicated on label affixed to body.