




EXISTING PLENUM DECK

INSTALL NEW 2X SUPPORT BEFORE CUTTING DECK BACK. SEE KN 6.


**2** EXISTING PLENUM DECK  
NOT TO SCALE

**DEMOLITION PLAN KEYNOTES (KN)**

- 1 REMOVE DOOR AND FRAME. PREP OPENING FOR NEW WORK.
- 2 REMOVE WINDOW AND FRAME. PREP OPENING FOR NEW WORK.
- 3 REMOVE DOOR AND FRAME. PATCH WALL TO MATCH ADJACENT.
- 4 SEE MECHANICAL DEMOLITION PLAN. PREP AREA FOR NEW WORK.
- 5 REMOVE WOOD DOOR FRAME. PATCH AREA AS NEEDED.
- 6 REMOVE DOOR AND FRAME. PREP OPENING FOR NEW WORK. CUT PLENUM DECK BACK ONLY AS NEEDED TO ACCOMMODATE NEW DOOR AND FRAME. INSTALL 2X SUPPORT UNDER EDGE OF PLENUM DECK TO STABILIZE. SEE 2/AD-1.

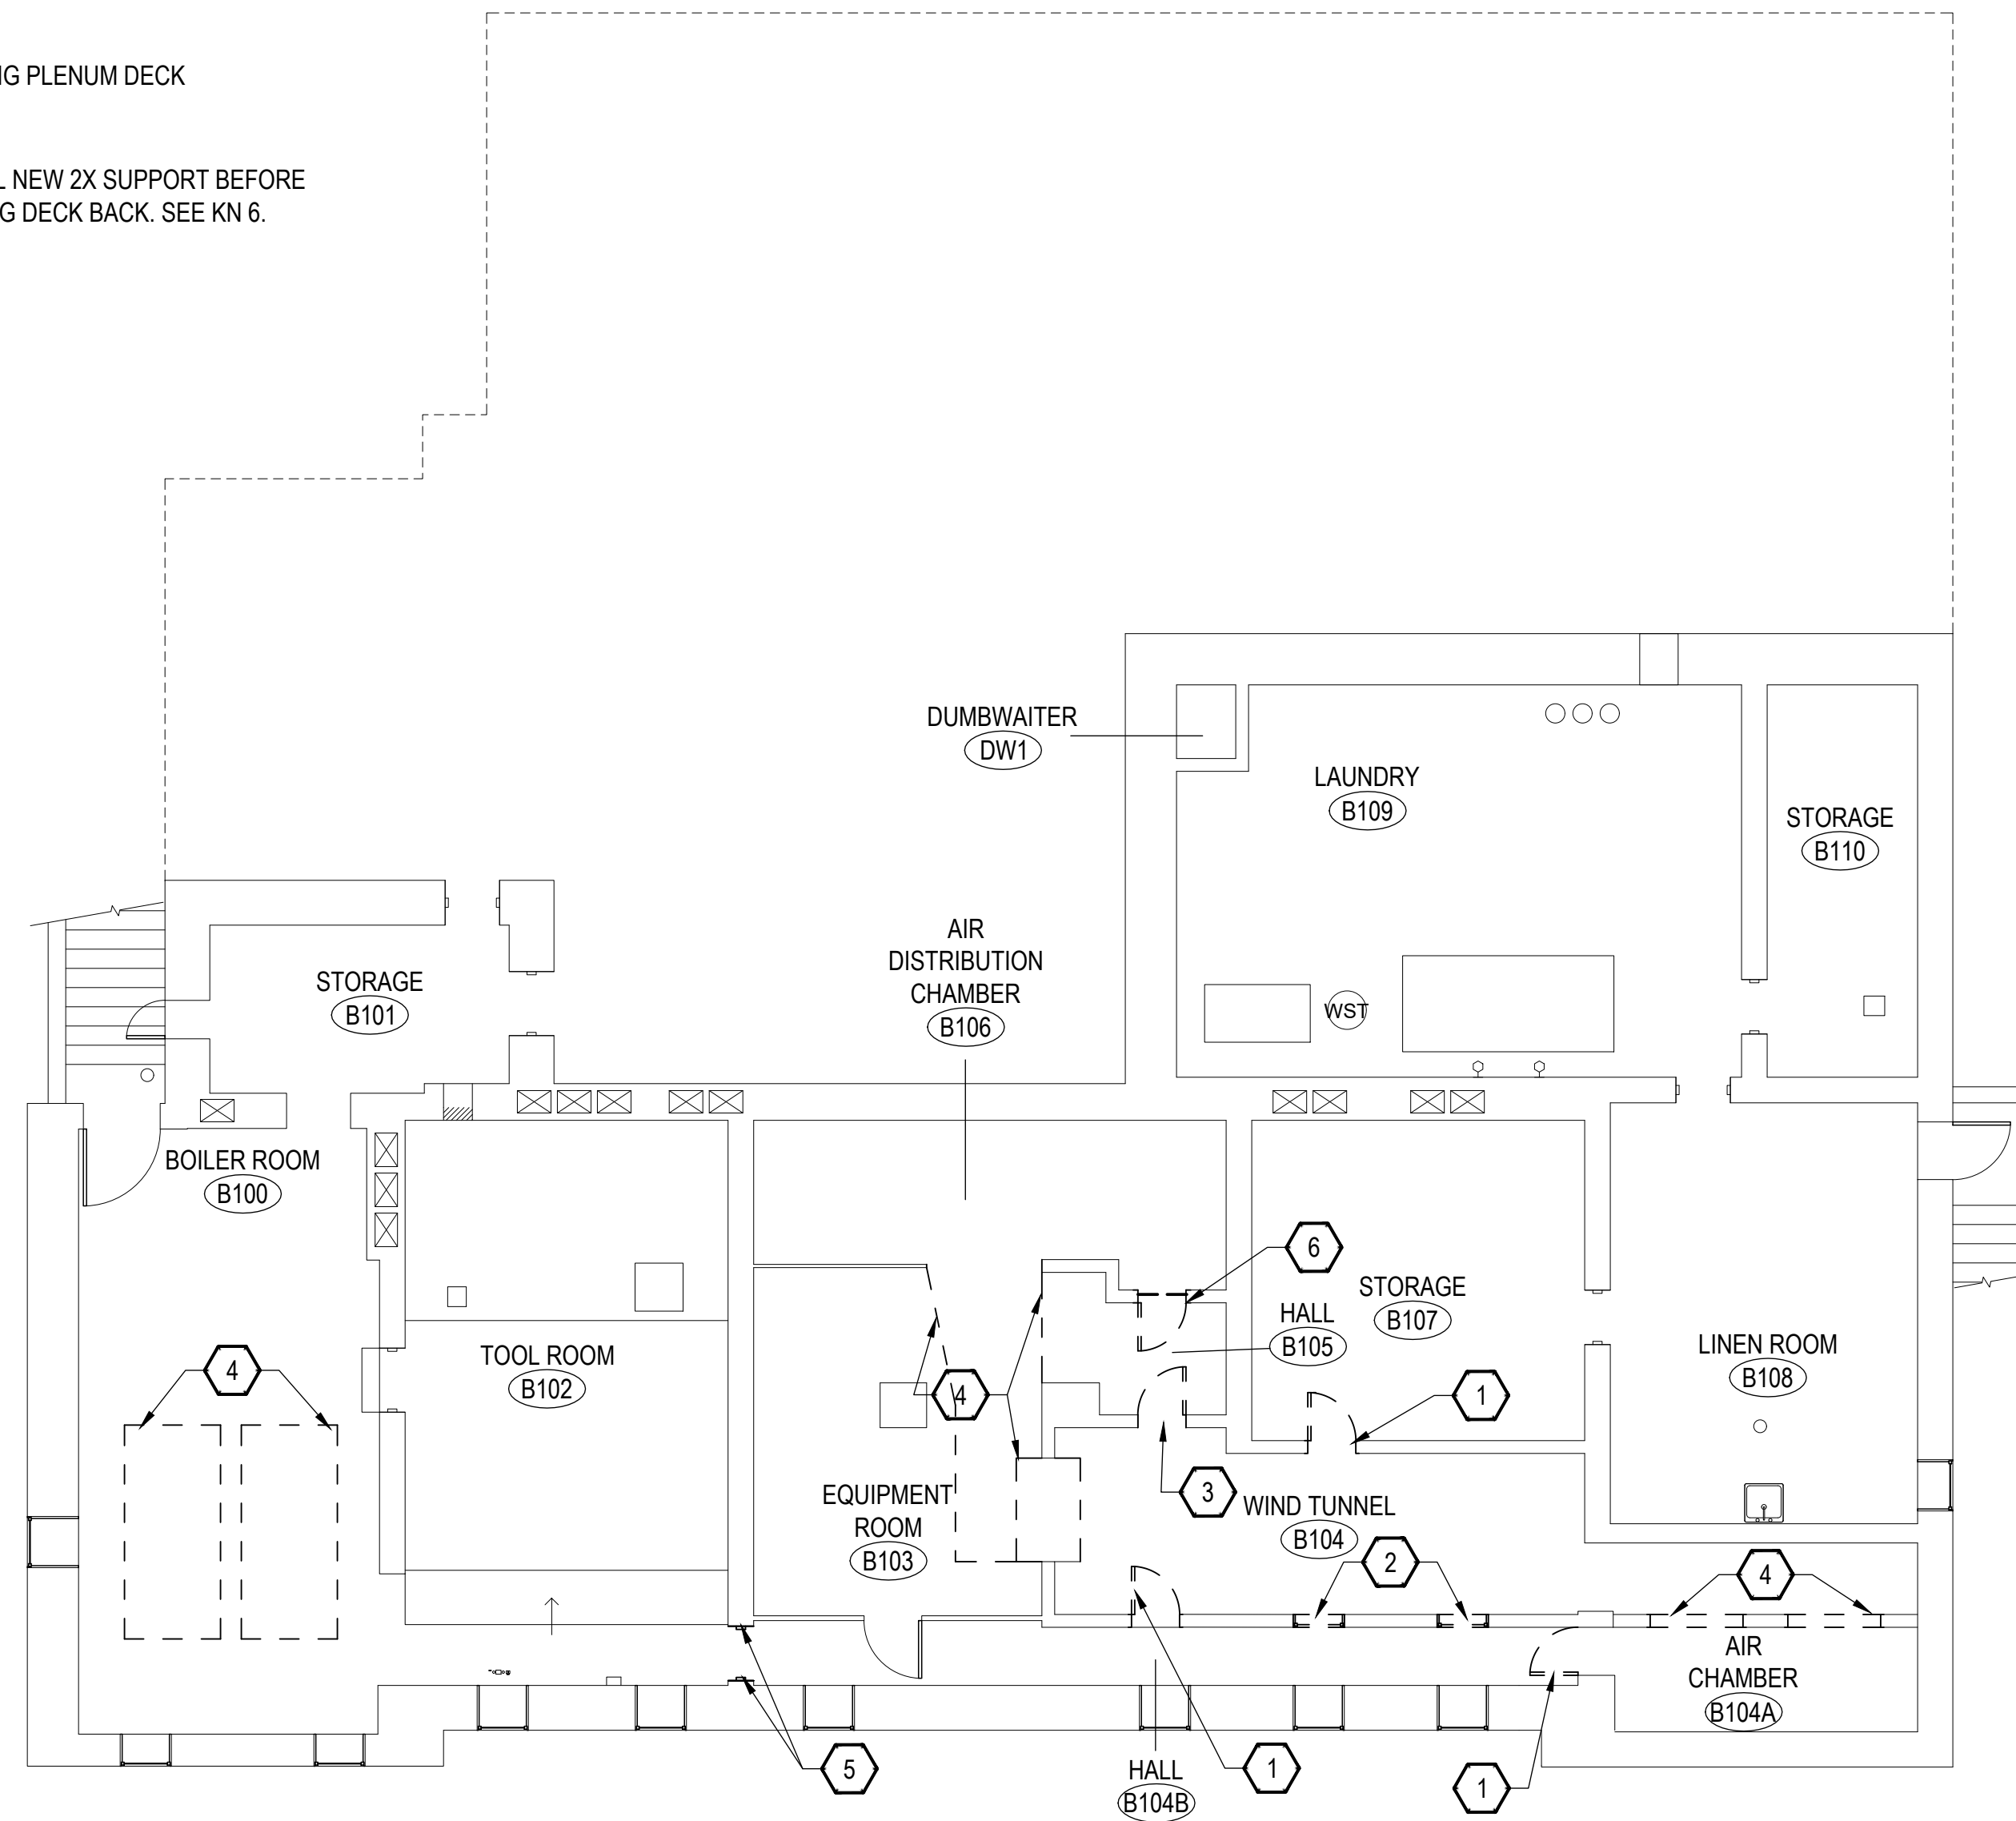

**1** BASEMENT DEMOLITION PLAN  
SCALE: 1/8" = 1'-0"

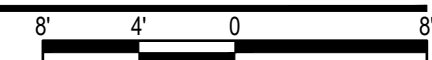

FINAL CONSTRUCTION DOCUMENTS

A/E FIRM PRIME: KENNETH HAHN ARCHITECTS, INC. OMAHA, NE. SUBCONTRACTOR: ALVINE ENGINEERING OMAHA, NE.	DESIGNED: KJH	SUB SHEET NO.  <b>AD1</b>	TITLE OF SHEET	DRAWING NO.
	DRAWN BY: TWM		<b>BASEMENT DEMOLITION PLAN</b>  BUCKSTAFF BATHHOUSE HVAC HOT SPRINGS NATIONAL PARK HOT SPRINGS, AK	XXX/XXXX
	TECH. REVIEW: CLZ			PMIS NO. 177425
	DATE: 2/15/2024			SHEET 5 OF 60