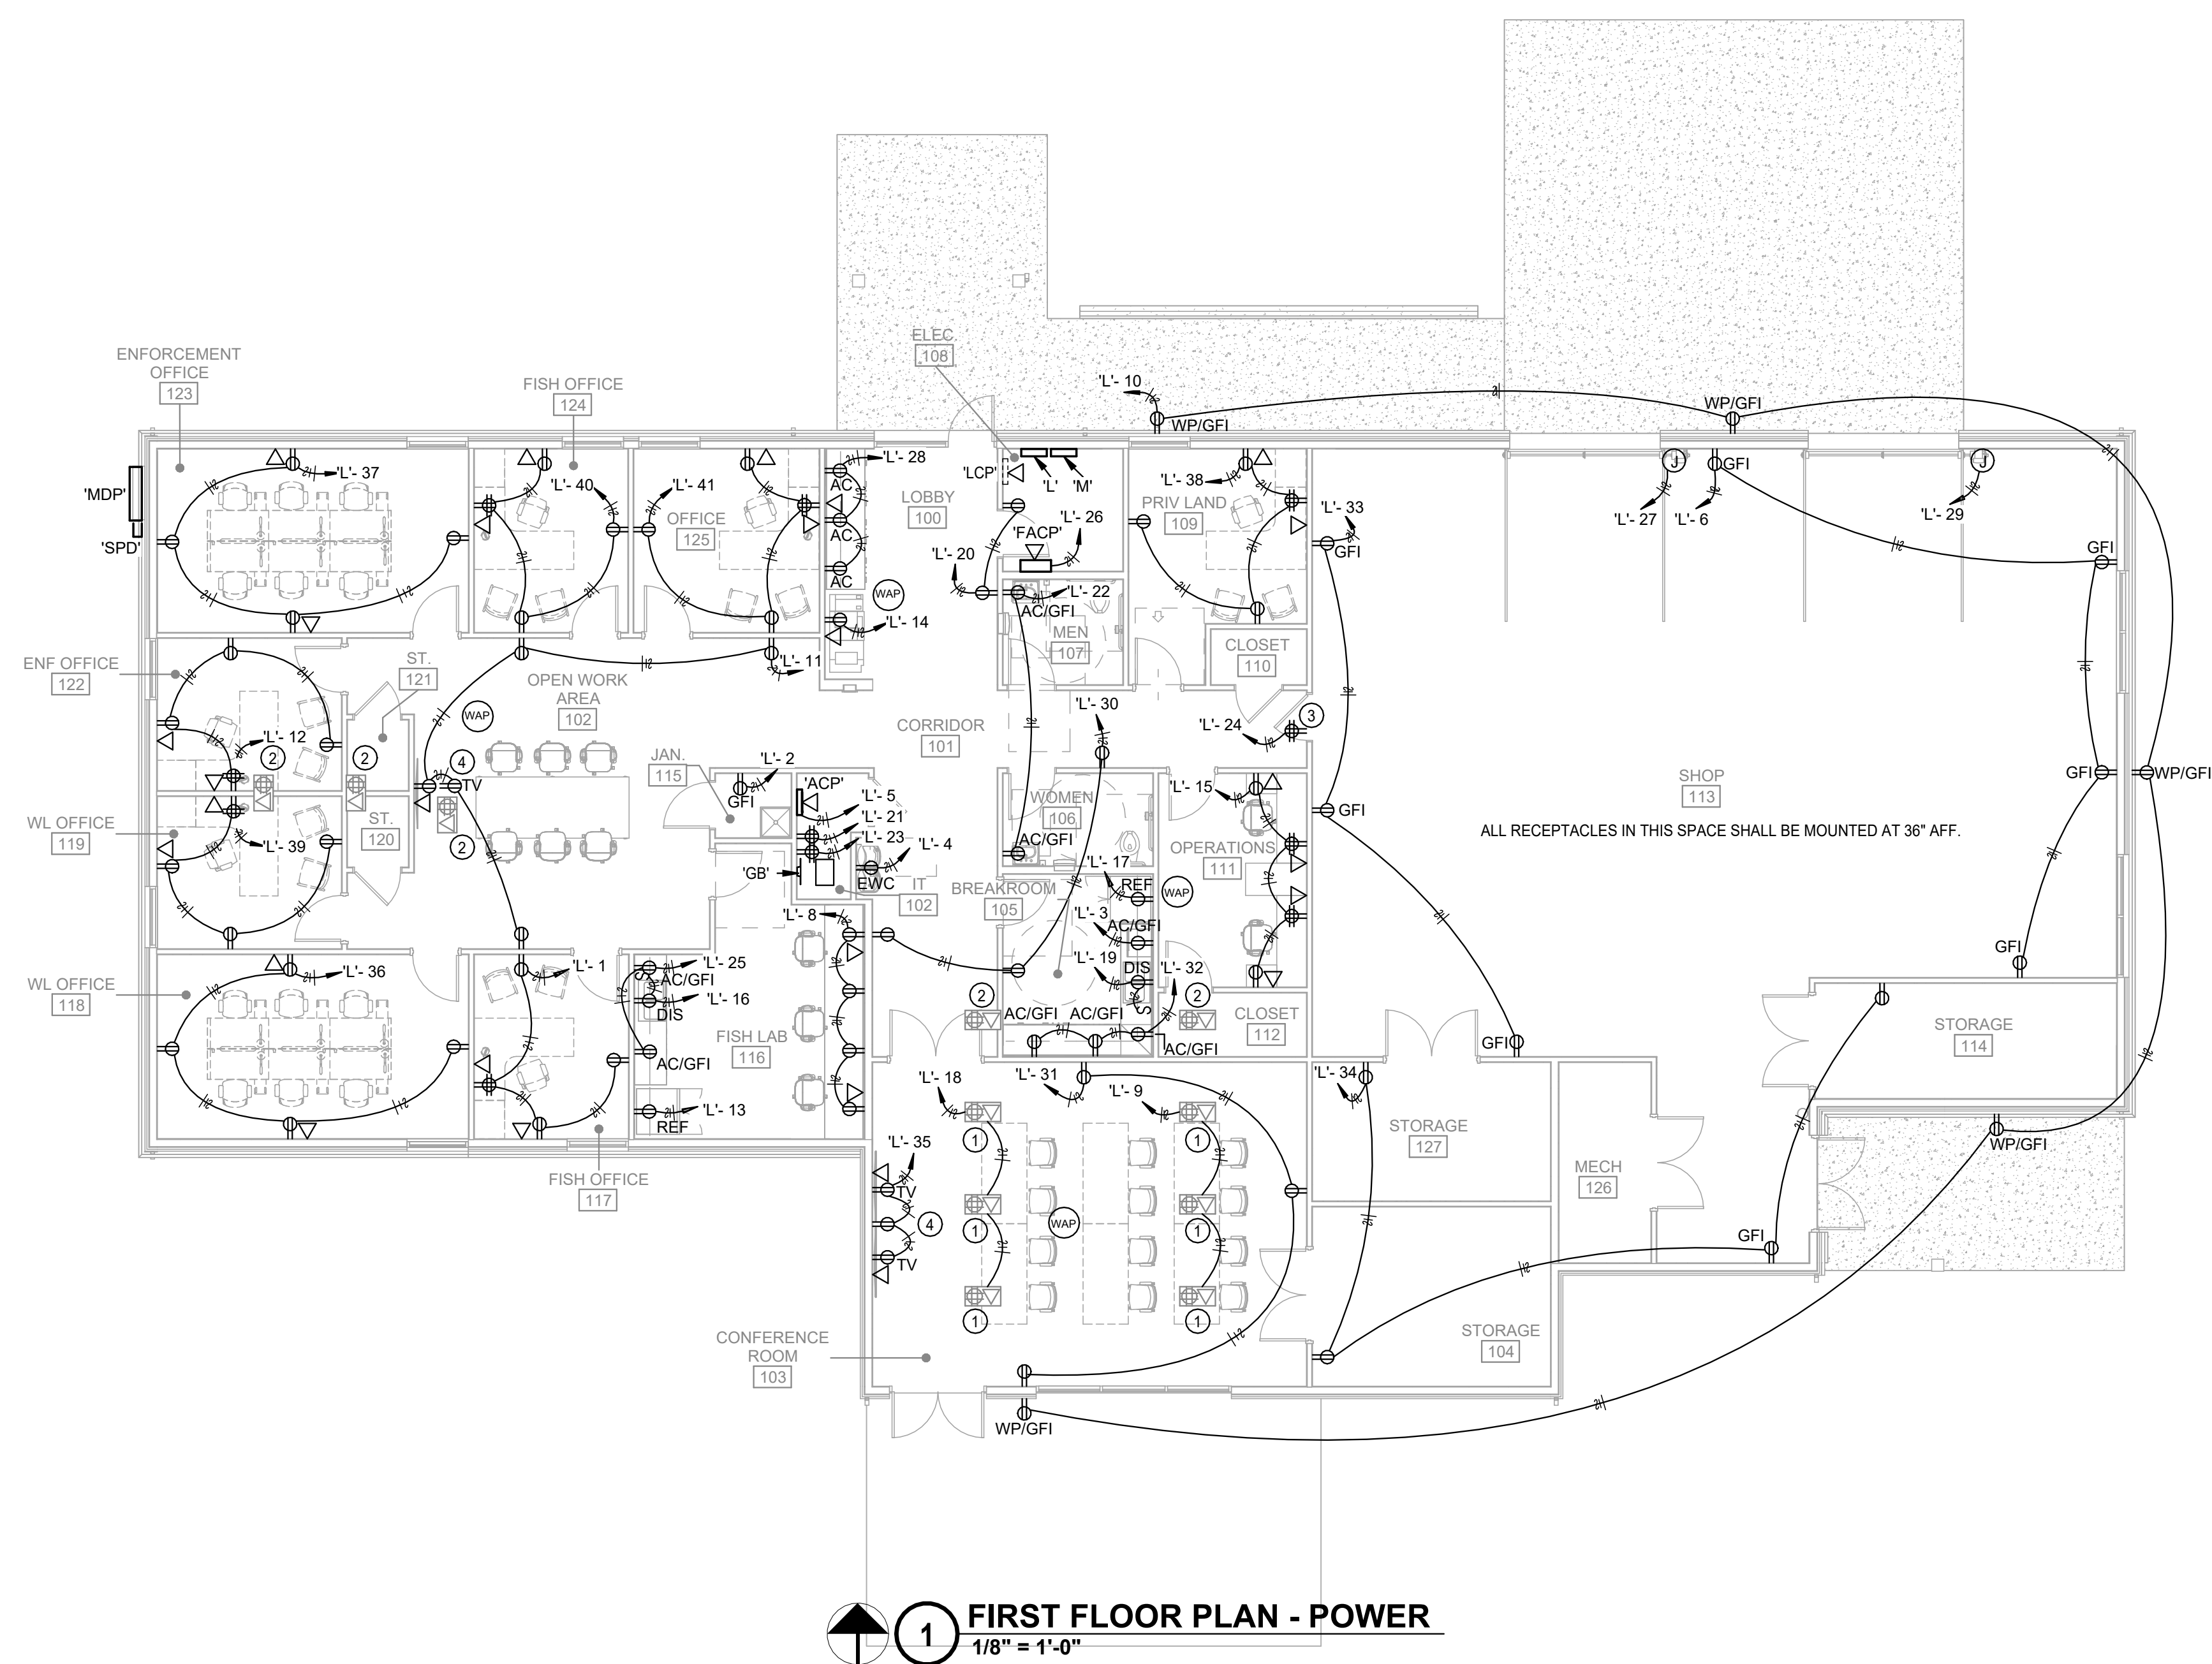


FIRST FLOOR PLAN - POWER

[illegible]

- 1 EXISTING FLOOR BOXES W/ DATA SHALL REMAIN. RECONNECT EXISTING FLOOR BOXES TO THE NEW CIRCUIT AS SHOWN. FIELD VERIFY EXACT CONDUIT ROUTING. PRIOR TO INSTALLATION, THE CONTRACTOR MAY HAVE TO SAW CUT THE EXISTING SLAB TO EXTEND THE CONDUIT TO A NEW WALL. PROTECT THE EXISTING COVER PLATE DURING CONSTRUCTION.
- 2 DEMO EXISTING QUAD FLOOR BOXES W/ DATA AND GRIND FLUSH W/ FLOOR AND FINISH W/ CONCRETE. SAVE THE EXISTING COVER PLATE TO REPLACE ANY DAMAGED COVER PLATES THAT REMAIN.
- 3 PROVIDE AND INSTALL A RECEPTACLE, SWITCH AND A TYPE I FIXTURE LOCATED IN THE ATTIC. THE RECEPTACLE SHALL BE MOUNTED 2' ABOVE THE CEILING. THE SWITCH SHALL BE MOUNTED AT THE ATTIC ACCESS. THE LIGHT FIXTURE SHALL BE MOUNTED ABOVE THE ATTIC ACCESS AT THE HIGHEST POINT.
- 4 SEE TV BACK BOX DETAIL.