


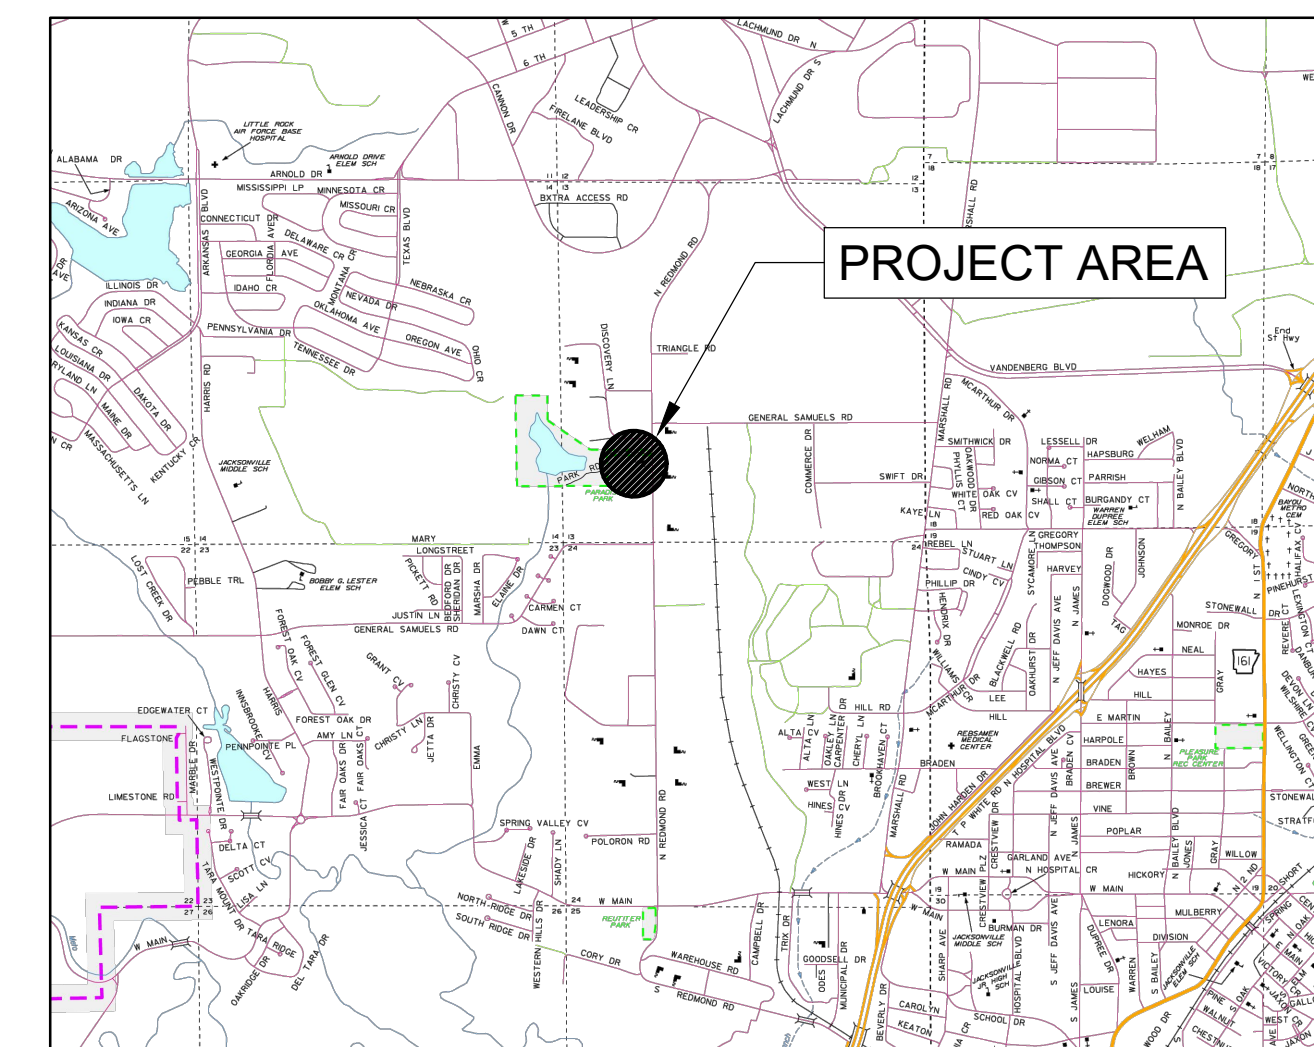


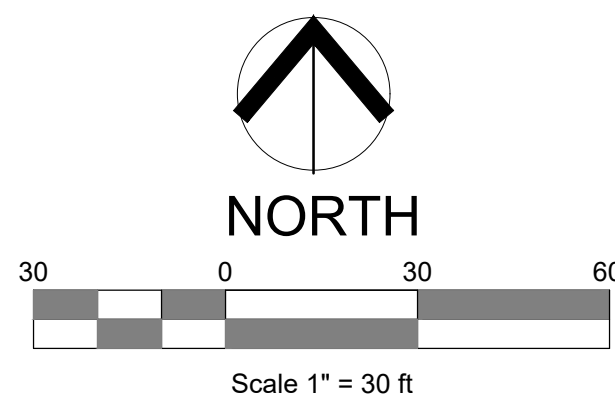


VICINITY MAP

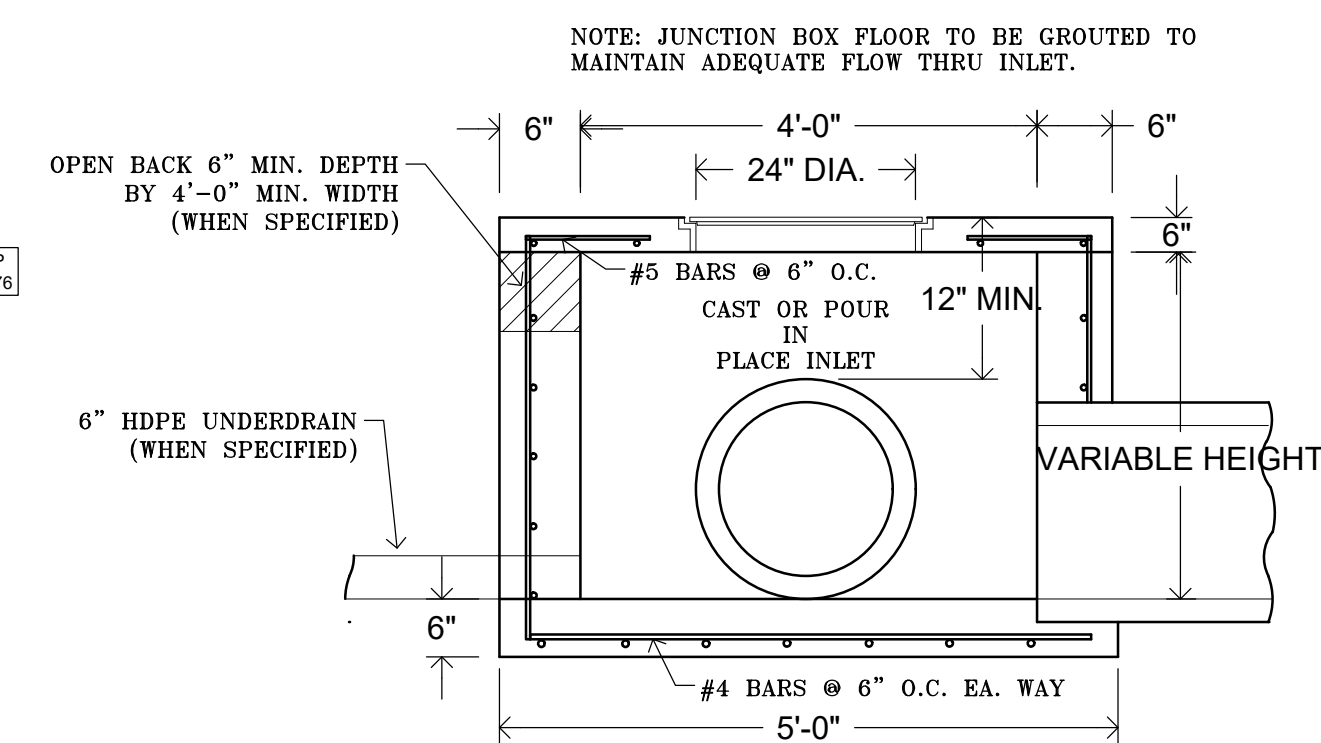

TYPICAL JUNCTION BOX - ELEVATION

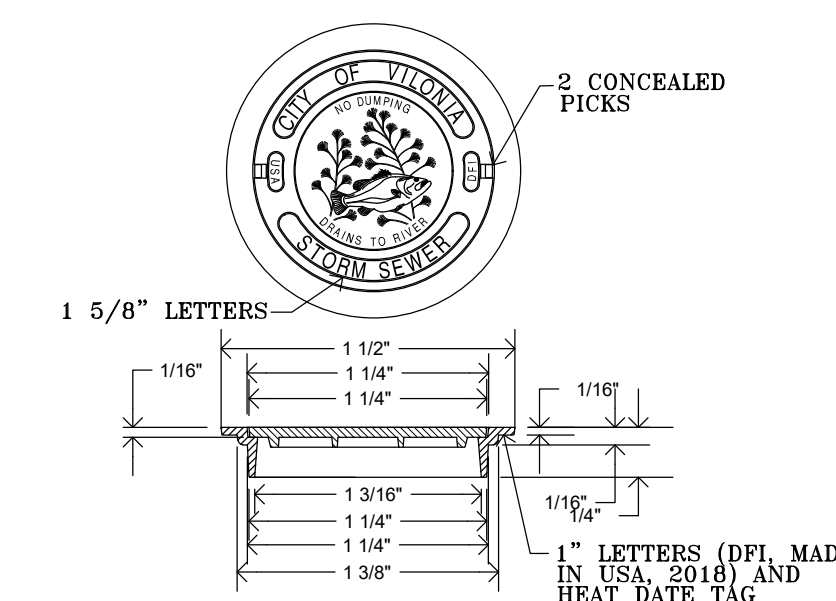






DETAIL - STORM SEWER
MANHOLE COVER

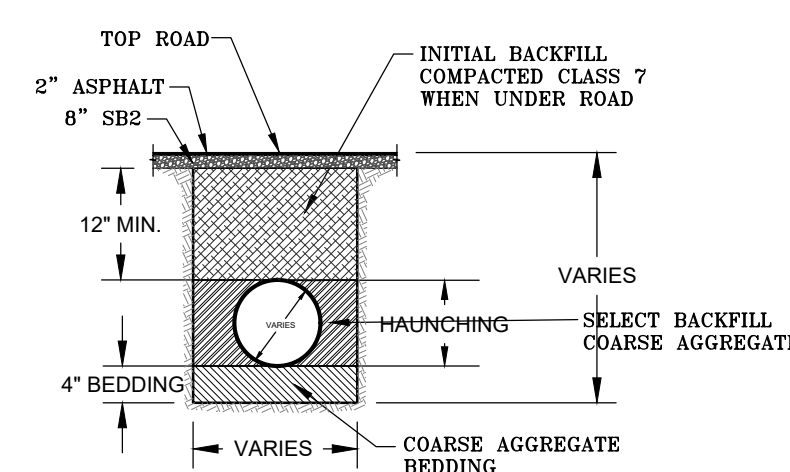

ADS TRENCH
CROSS SECTION


LEGEND:	
—	BOUNDARY LINE
- - -	BUILDING LINE
- - -	EASEMENT LINE
- - -	STREET CENTERLINE
- - -	RIGHT-OF-WAY
100	CONTOUR
x	FENCE
—	STORM DRAINAGE
□	STORM DRAINAGE BOX
⊙	EXISTING SEWER MANHOLE
—	SEWER LINE
⋈	WATER VALVE
⋈	FIRE HYDRANT
FO	FIBER OPTIC
TP	TELEPHONE PEDESTAL
⊙	POWER POLE
⊙	LIGHT POLE
—	SIDEWALK
—	OVERHEAD ELECTRIC



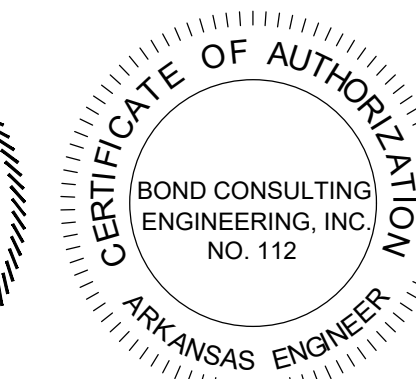


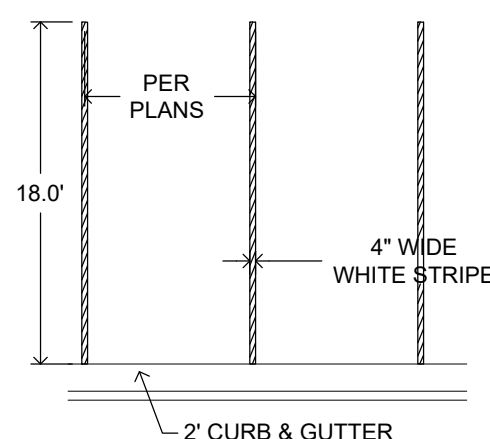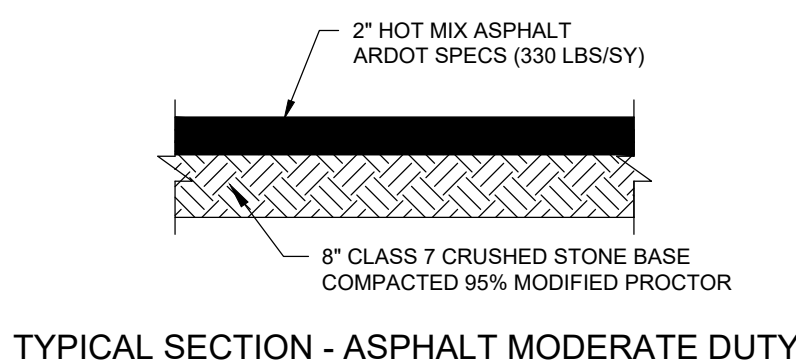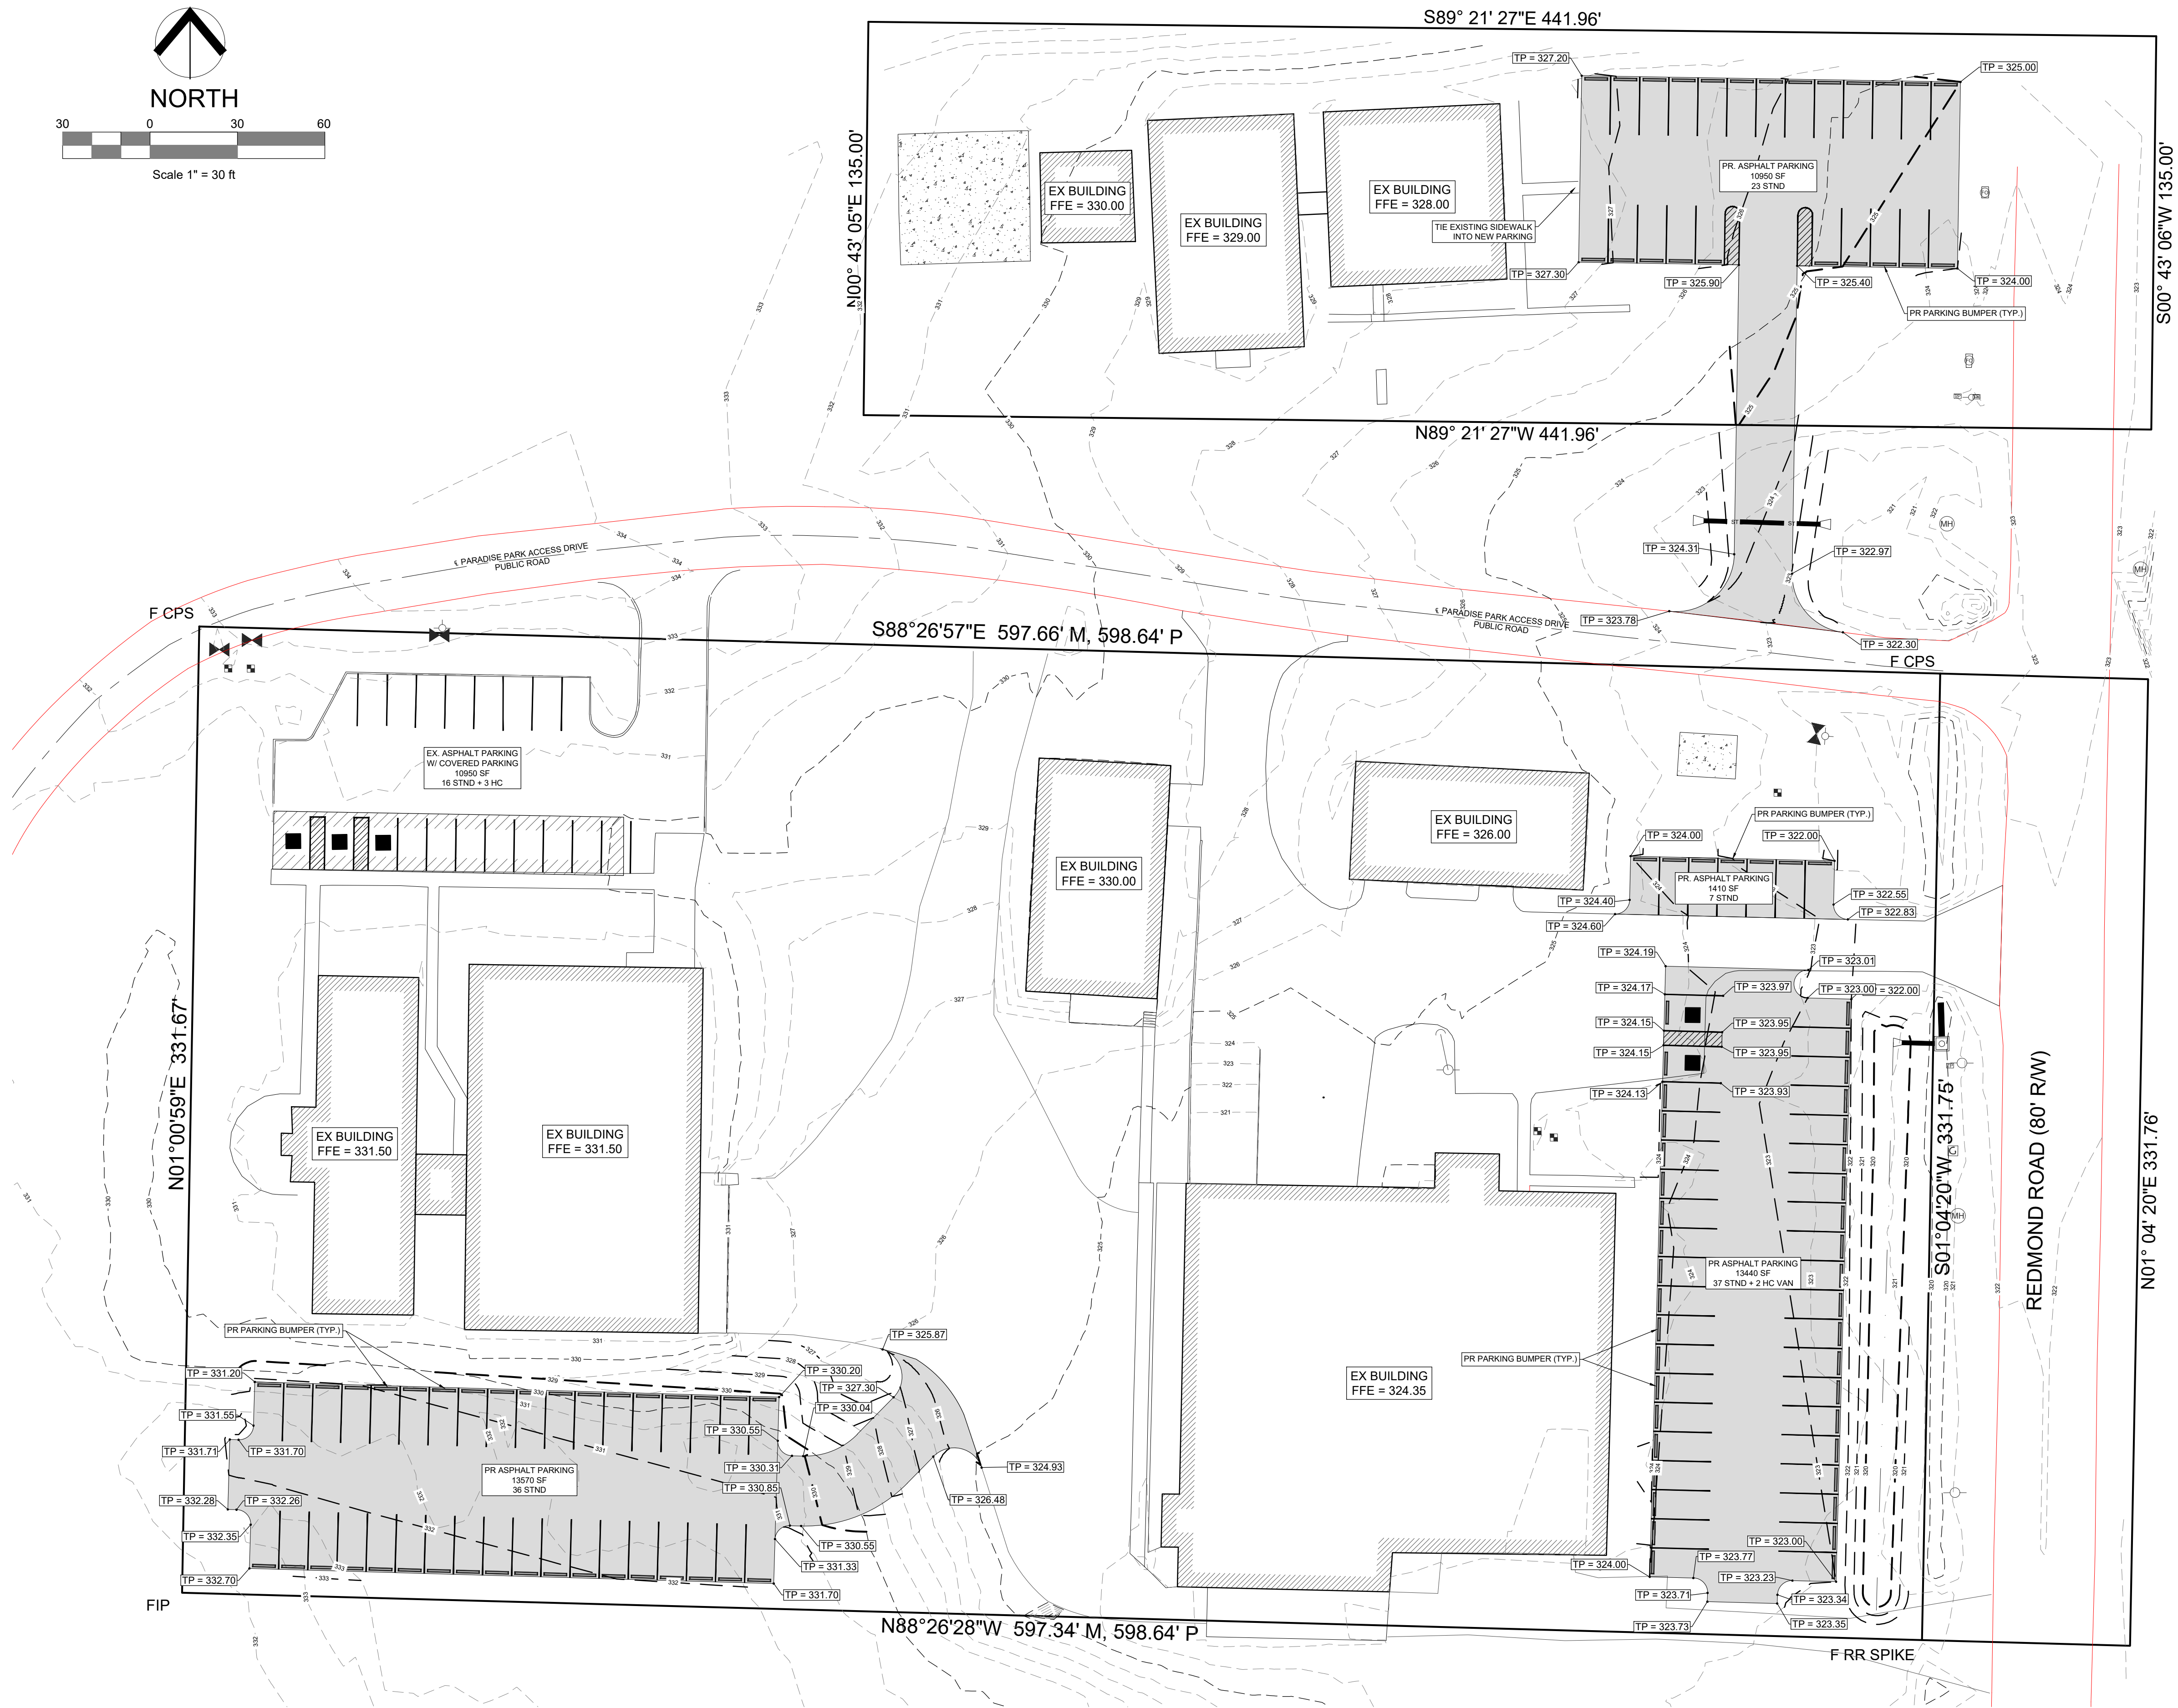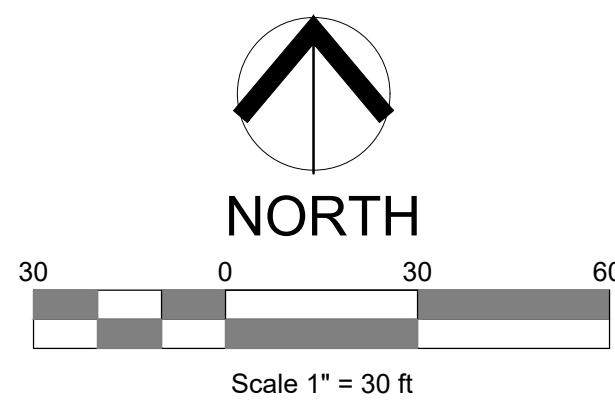

GENERAL NOTES:
1. ALL LINES SHALL HAVE A MIN. WIDTH OF 4 INCHES.
2. THE THICKNESS AND RATE OF PAINT APPLICATION SHALL BE AS SPECIFIED IN LATEST EDITION MUTCD SPECIFICATION.
3. THIS DRAWING SHALL BE USED IN CONJUNCTION WITH THE LATEST REVISED EDITION OF THE FHWA "MANUAL ON UNIFORM TRAFFIC CONTROL DEVICES."

LEGEND:	
	ASPHALT - MODERATE DUTY
LEGEND:	
	BOUNDARY LINE
	BUILDING LINE
	EASEMENT LINE
	STREET CENTERLINE
	RIGHT-OF-WAY
	CONTOUR
	FENCE
	STORM DRAINAGE
	STORM DRAINAGE BOX
	EXISTING SEWER MANHOLE
	SEWER LINE
	WATER VALVE
	FIRE HYDRANT
	FIBER OPTIC
	TELEPHONE PEDESTAL
	POWER POLE
	LIGHT POLE
	SIDEWALK
	OVERHEAD ELECTRIC

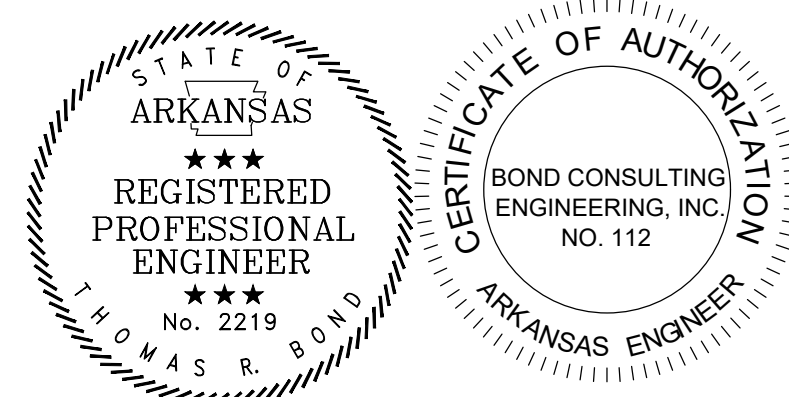

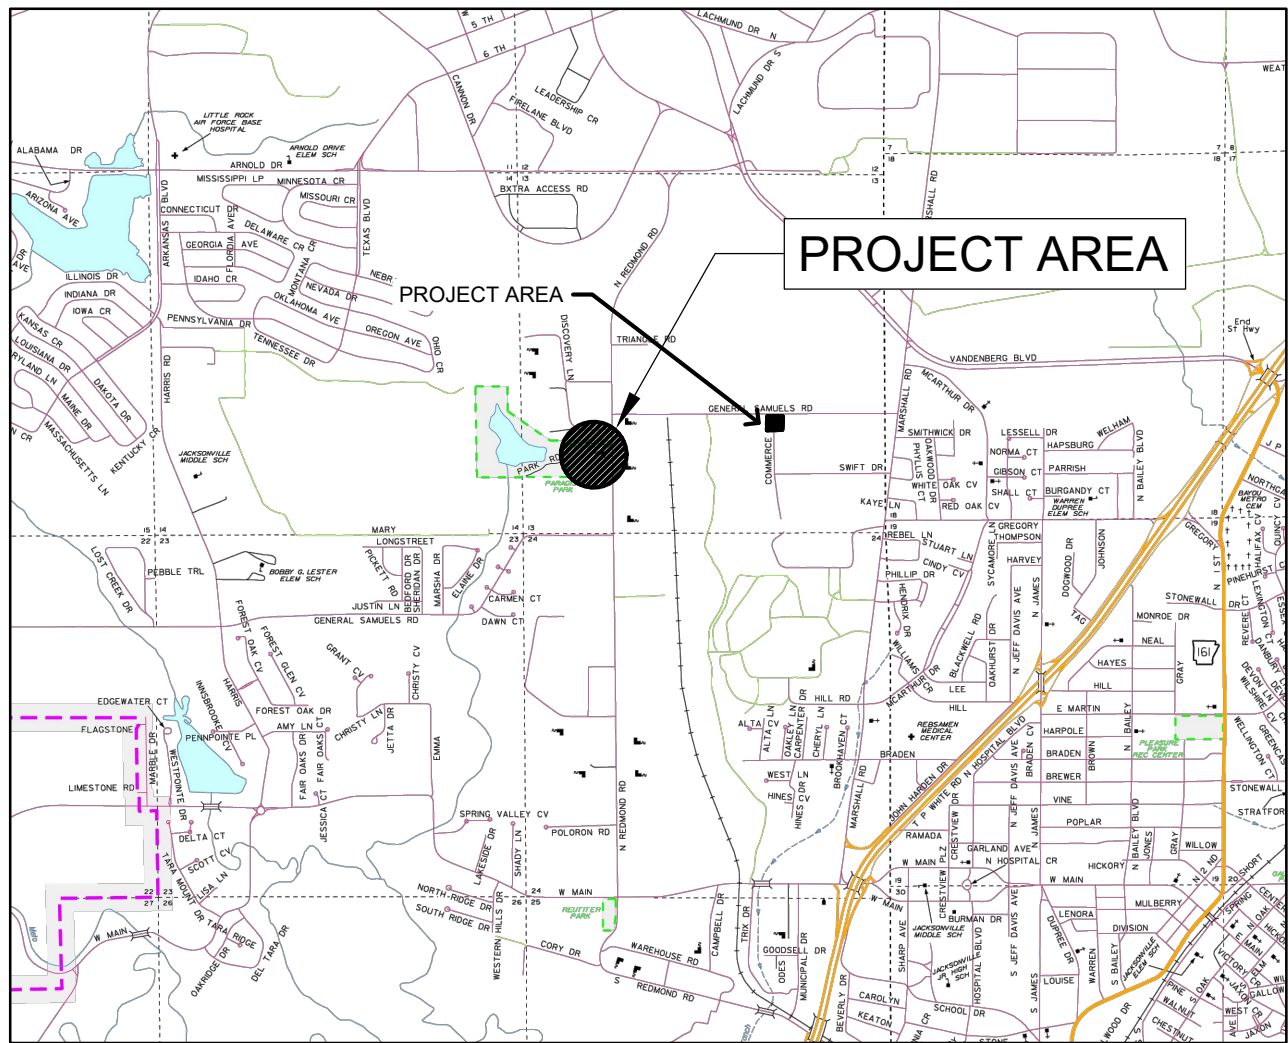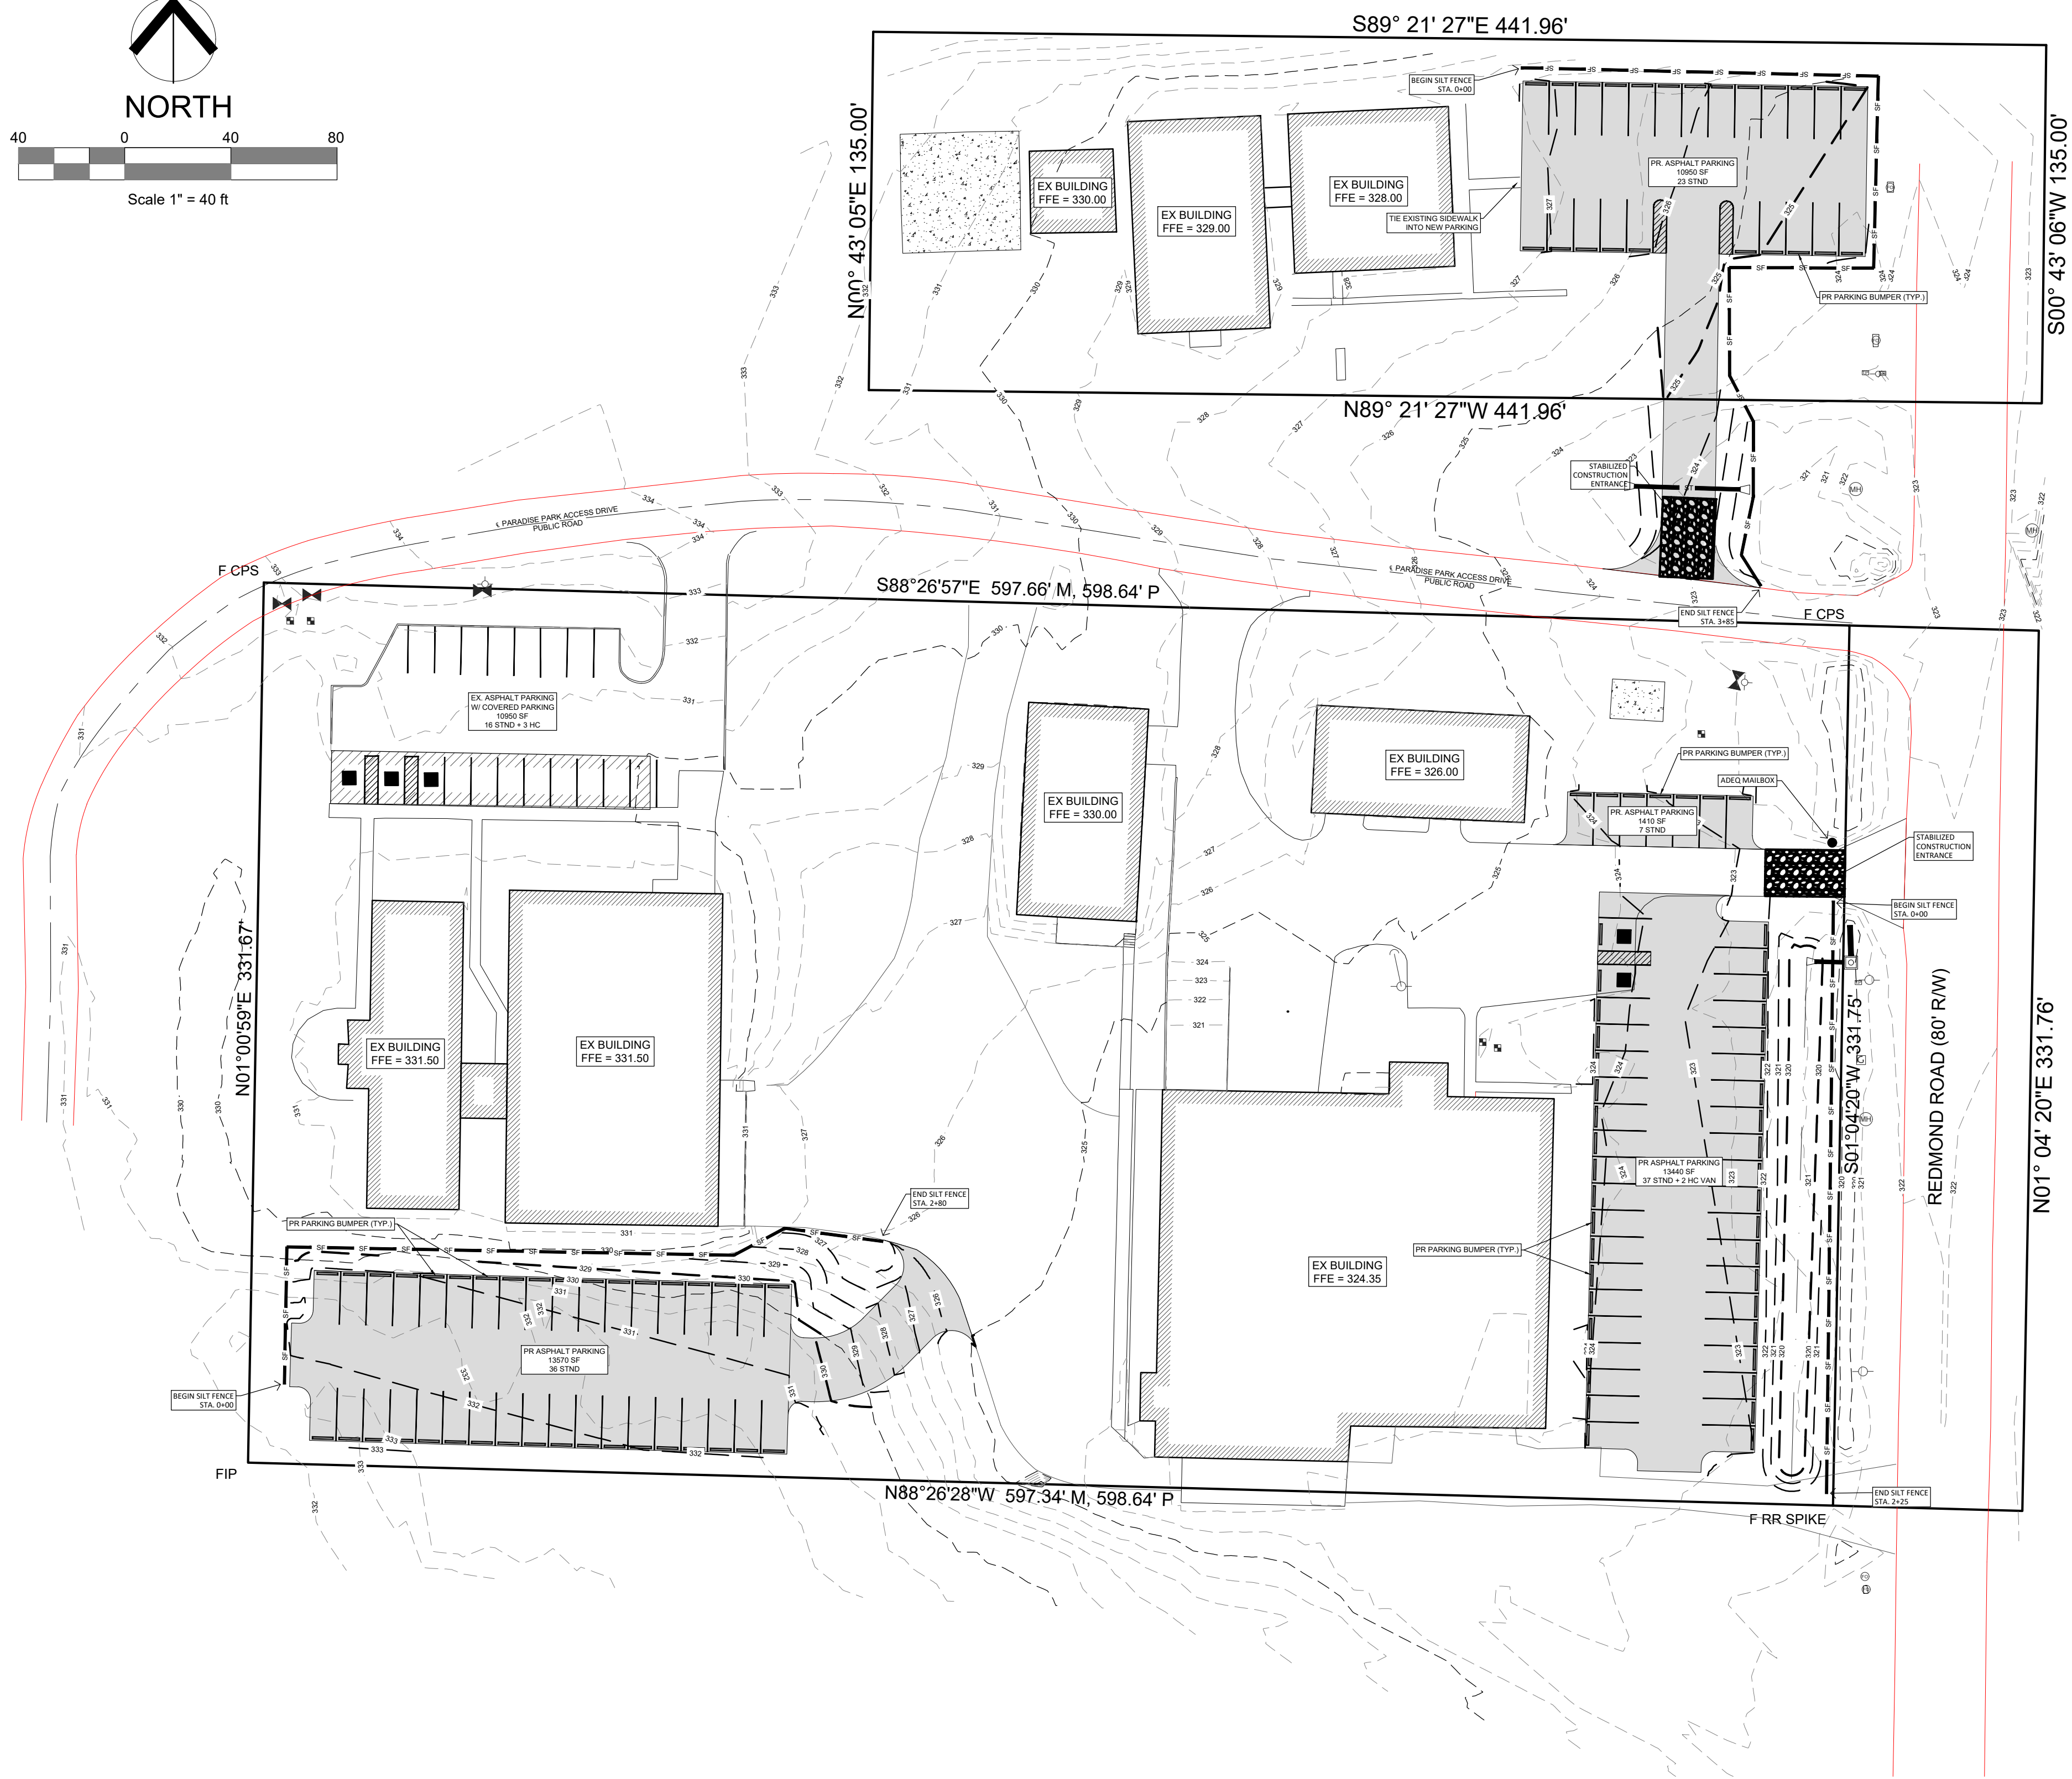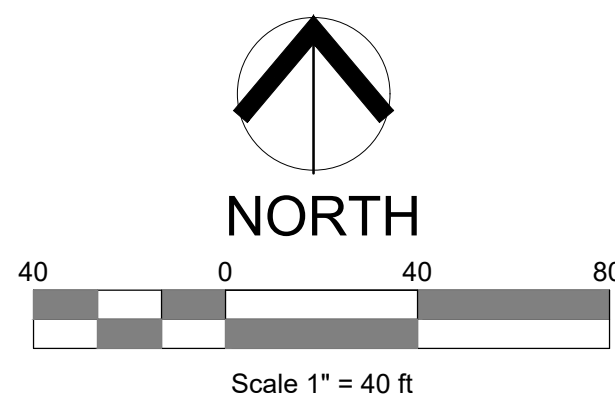

VICINITY MAP

GENERAL NOTES:

- SILT FENCES MUST BE MAINTAINED AS SHOWN ON THE SILT FENCE DETAIL THROUGHOUT THE CONSTRUCTION PERIOD.
- THE CONTRACTOR SHALL BE RESPONSIBLE FOR THE FOLLOWING ACTIVITIES CONCERNING EROSION CONTROL FOR THIS PROJECT:
 - CONFORMING TO THE SWPPP AND IMPLEMENTING THE BMP'S OUTLINED
 - POSTING THE SITE WITH THE ADEQ PERMIT
 - INSTALLING A RAIN GAUGE
 - FILLING OUT ALL REQUIRED INSPECTION REPORTS
 - INSTALLING A MAILBOX AT THE ENTRANCE TO HOLD THE SWPPP, EROSION CONTROL PLAN, AND INSPECTION REPORTS.
 - CLEANING UP ANY SEDIMENT THAT LEAVES THE SITE.
 - HYDROSEEDING/MULCHING AND/OR SOODING DISTURBED AREAS ONCE THE CONSTRUCTION ACTIVITIES IN THOSE AREAS ARE COMPLETED.
- IT IS ACCEPTABLE TO CHANGE/UPDATE THE EROSION CONTROL PLAN IN A MANNER THAT WILL ENHANCE SEDIMENT CONTROL. ANY CHANGES SHALL BE REFLECTED ON THE EROSION CONTROL PLAN INSIDE THE MAILBOX AND ACCEPTED BY THE ENGINEER.
- CURB INLET PROTECTION PRACTICES SHALL BE IMPLEMENTED AFTER TOPS OF INLETS ARE CONSTRUCTED.
- DISCHARGE POINTS ARE TO BE STABILIZED IMMEDIATELY AFTER INSTALLATION OF DRAINAGE STRUCTURES. STABILIZE BANKS WITH GRASS & DISCHARGE POINT WITH A COMBINATION OF EROSION MATTING, RIP RAP, & GRASS.
- SOIL EXPOSED FOR MORE THAN 14 DAYS WITH NO CONSTRUCTION ACTIVITY SHALL BE SEEDDED OR RE-VEGETATED.

LEGEND:	
	BOUNDARY LINE
	BUILDING LINE
	EASEMENT LINE
	STREET CENTERLINE
	RIGHT-OF-WAY
	CONTOUR
	FENCE
	STORM DRAINAGE
	STORM DRAINAGE BOX
	EXISTING SEWER MANHOLE
	SEWER LINE
	WATER VALVE
	FIRE HYDRANT
	FIBER OPTIC
	TELEPHONE PEDESTAL
	POWER POLE
	LIGHT POLE
	SIDEWALK
	OVERHEAD ELECTRIC

NOTE:
1.) INSPECT AND REPAIR FENCE AFTER EACH STORM EVENT AND REMOVE SEDIMENT WHEN NECESSARY.
2.) REMOVED SEDIMENT SHALL BE DEPOSITED TO AN AREA THAT WILL NOT CONTRIBUTE SEDIMENT OFF-SITE AND CAN BE PERMANENTLY STABILIZED.
3.) SILT FENCE SHALL BE PLACED ON SLOPE CONTOURS TO MAXIMIZE PONDING EFFICIENCY.

